

[manuals.plus](#) /

› [Jocca](#) /

› [Jocca 3.8L Hot Air Fryer User Manual](#)

**Jocca 1507**

## Jocca 3.8L Hot Air Fryer User Manual

Model: 1507

### **INTRODUCTION**

---

Thank you for choosing the Jocca 3.8L Hot Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods, using hot air circulation to achieve crispy results with significantly less oil. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The Jocca 3.8L Hot Air Fryer, showcasing its sleek black design and digital control panel.

## IMPORTANT SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not immerse the cord, plug, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

## PRODUCT OVERVIEW

Familiarize yourself with the components of your Jocca Air Fryer.



Image: Front view of the air fryer with its approximate dimensions: 31.8 cm height, 29.1 cm width, and 25.8 cm depth.



Image: Detailed view of the digital control panel, showing temperature display (200°C), timer, power button, and various cooking preset icons.



Image: A hand demonstrating the removal of the inner cooking grate from the air fryer's main basket, highlighting its removable design.



Image: The empty, non-stick air fryer basket, showing its square shape and handle attachment point, ready for food preparation.

## Key Components:

- **Main Unit:** Houses the heating element and fan.
- **Digital Control Panel:** Touchscreen display for temperature, timer, and preset selection.
- **Removable Basket:** Non-stick cooking basket for holding food.
- **Inner Grate/Crisper Plate:** Sits inside the basket to allow air circulation around food and drain excess oil.
- **Handle:** Ergonomic handle for safely pulling out the basket.

## SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the air fryer and all packaging materials.
2. **Cleaning:** Before first use, clean the basket and inner grate with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance to allow for proper air circulation. Do not place it directly against a wall or under cabinets.

4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell may be present, which is normal and will dissipate.

## OPERATING INSTRUCTIONS

---

### Basic Operation:

1. **Prepare Food:** Place your ingredients into the air fryer basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket back into the main unit until it clicks securely into place.
3. **Power On:** Press the power button () on the digital control panel. The display will light up.
4. **Set Temperature:** Use the temperature control buttons (↑ / ↓) to adjust the cooking temperature (up to 200°C).
5. **Set Timer:** Use the timer control buttons (↑ / ↓) to set the cooking time (1 to 30 minutes).
6. **Start Cooking:** Press the start/pause button () to begin the cooking process. The fan and heating element will activate.
7. **Shaking/Flipping (Optional):** For some foods, especially fries or smaller items, it is recommended to shake or flip the food halfway through cooking for even browning. Pull out the basket, shake/flip, and reinsert. The air fryer will resume cooking automatically.
8. **Cooking Complete:** The air fryer will beep when the set cooking time has elapsed. Carefully pull out the basket and remove the cooked food.
9. **Power Off:** Press the power button () to turn off the appliance, or it will automatically turn off after a short period of inactivity.

### Using Preset Programs:

The Jocca Air Fryer features several pre-set cooking programs for common dishes. These programs automatically set optimal temperature and time.



Image: The air fryer's digital display showing various cooking preset icons, including pizza, fries, shrimp, fish, chicken, steak, ribs, and vegetables.

1. After powering on, press the 'M' (Mode) button to cycle through the available preset icons.
2. Once you select a preset, the corresponding temperature and time will be displayed.
3. Press the start/pause button ( ) to begin cooking.
4. You can manually adjust the temperature and time even after selecting a preset if needed.

## **MAINTENANCE AND CLEANING**

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Basket and Grate:**
  - Remove the basket and inner grate.
  - Wash them in warm, soapy water using a non-abrasive sponge.

- For stubborn food residue, soak the basket and grate in warm water for about 10 minutes before cleaning.
- Rinse thoroughly and dry completely before reassembling.
- The non-stick coating makes cleaning easy.

### 3. Clean Main Unit:

- Wipe the exterior of the air fryer with a damp cloth.
- Do not use abrasive cleaners or scouring pads, as they can damage the surface.
- Never immerse the main unit in water or any other liquid.

### 4. Clean Heating Element:

- If necessary, use a cleaning brush to remove any food residue from the heating element inside the appliance.
- Ensure the appliance is completely cool and unplugged before attempting this.

### 5. Storage:

Store the cleaned and dried air fryer in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Basket not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Push the basket firmly into the main unit until it clicks into place.
Food is not cooked evenly.	Basket is overfilled. Food not shaken/flipped.	Do not overfill the basket; cook in smaller batches if necessary. Shake or flip food halfway through cooking.
White smoke coming from appliance.	Greasy residue from previous use. High fat content food.	Clean the basket and inner grate thoroughly after each use. For high-fat foods, place a piece of aluminum foil at the bottom of the basket to catch drips.
Fresh fries are not crispy.	Not enough oil used. Potatoes not properly prepared.	Ensure a light coating of oil is applied. Soak potato sticks in water for 30 minutes, then dry thoroughly before air frying.

## SPECIFICATIONS

Feature	Detail
Brand	Jocca
Model Number	1507
Capacity	3.8 Liters
Power	1450 Watts (Output) / 1350 Watts (Input)
Voltage	220V
Product Dimensions (L x W x H)	28 x 25 x 31 cm (Note: Product title mentions 32.5x32x31cm, image shows 29.1x25.8x31.8cm)

Feature	Detail
Weight	3.76 Kilograms
Color	Silver (as per specifications, product image is black)
Material	Wood (Note: This is likely a data entry error, typical materials are plastic/metal)
Special Feature	Timer, Digital Touch Screen, Pre-set Programs
Temperature Range	Up to 200°C
Timer Range	1 to 30 minutes

Note: Dimensions and material details are based on provided product specifications. The 'wood' material might be a data entry error and typically refers to plastic/metal for such appliances.

## WARRANTY AND SUPPORT

Your Jocca 3.8L Hot Air Fryer comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

- Spare Parts Availability:** Spare parts are available for 2 years from the date of purchase.
- For technical support, service, or warranty claims, please contact Jocca customer service through their official website or the contact information provided in your product packaging.
- Keep your proof of purchase for warranty purposes.

© 2024 Jocca. All rights reserved.

## Related Documents - 1507

 REF: 2219P	<p><a href="#">JOCCA 2219P Air Fryer: User Manual &amp; Operating Guide</a></p> <p>Discover the JOCCA 2219P Air Fryer. This comprehensive guide provides essential safety information, operating instructions, preset cooking programs, and maintenance tips for healthier, convenient home cooking.</p>
 Ref: 1507	<p><a href="#">JOCCA Air Fryer 1507: User Manual and Instructions</a></p> <p>Comprehensive user manual for the JOCCA Air Fryer 1507, providing detailed instructions, safety warnings, cleaning guidelines, and technical specifications in multiple languages.</p>

 <p><b>JOCCA HOME &amp; LIFE</b> Ref. 1507</p> <p>(EN) Instructions manual (ES) Manual de instrucciones (FR) Mode d'emploi (IT) Manuale di istruzioni (PT) Manual de instruções (CZ) Návod k použití</p>	<p><a href="#"><u>JOCCA Air Fryer 1507 User Manual</u></a></p> <p>Comprehensive instructions and safety warnings for the JOCCA Air Fryer model 1507. Learn how to use, clean, and maintain your air fryer for optimal performance.</p>
 <p><b>JOCCA by ROBIN FOOD</b></p> <p>Ref. 2157RF</p> <p>(EN) Instructions manual (ES) Manual de instrucciones (FR) Mode d'emploi (IT) Manuale di istruzioni (PT) Manual de instruções (CZ) Návod k použití</p>	<p><a href="#"><u>JOCCA 2157RF Air Fryer: User Manual, Instructions, and Safety Guide</u></a></p> <p>Comprehensive user manual for the JOCCA 2157RF Air Fryer by ROBIN FOOD. Includes safety warnings, product description, operating instructions, cooking programs, cleaning guide, and technical specifications.</p>
 <p><b>JOCCA HOME &amp; LIFE</b> Ref. 1588</p> <p>(EN) Instructions manual (ES) Manual de instrucciones (FR) Mode d'emploi (IT) Manuale di istruzioni (PT) Manual de instruções (CZ) Návod k použití</p> <p>Para cualquier consulta sobre este producto contacte con nuestro Servicio de Atención al Cliente <b>JOCCA</b> <a href="mailto:soporte@jocca.com">soporte@jocca.com</a> <a href="http://www.jocca.com">www.jocca.com</a></p>	<p><a href="#"><u>Jocca Kitchen Scale Instruction Manual</u></a></p> <p>This manual provides instructions and safety warnings for the Jocca Kitchen Scale, model ref: 1588. Learn how to use, clean, and maintain your scale for accurate measurements.</p>
	<p><a href="#"><u>JOCCA Sport Mini Exercise Bike - User Manual and Instructions</u></a></p> <p>Comprehensive user manual for the JOCCA Sport Mini Exercise Bike, covering setup, operation, safety guidelines, and maintenance. Learn how to use your pedaler for effective home workouts.</p>

## Documents - Jocca – 1507



### [JOCCA Air Fryer 1507 User Manual](#)

Comprehensive instructions and safety warnings for the JOCCA Air Fryer model 1507. Learn how to use, clean, and maintain your air fryer for optimal performance.  
lang:it score:38 filesize: 3.18 M page\_count: 28 document date: 2022-04-12



JOCCA  
HOME & LIFE  
Ref. 1507  
(EN) Instructions manual  
(ES) Manual de instrucciones  
(FR) Mode d'emploi  
(IT) Manuale di istruzioni  
(PT) Manual de instruções  
(CZ) Návod k použití

### [JOCCA Air Fryer 1507: User Manual and Instructions](#)

Comprehensive user manual for the JOCCA Air Fryer 1507, providing detailed instructions, safety warnings, cleaning guidelines, and technical specifications in multiple languages.

lang:it score:37 filesize: 2.66 M page\_count: 28 document date: 2022-08-05



JOCCA  
HOME & LIFE  
Ref. 1507  
1507C || 1507V || 1507P  
(EN) Instructions manual  
(ES) Manual de instrucciones  
(FR) Mode d'emploi  
(IT) Manuale di istruzioni  
(PT) Manual de instruções  
(CZ) Návod k použití

### [\[pdf\] User Manual Instructions](#)

Ref 1507 1507C 1507V 1507P Page 2 DESCRIPTION DESCRIPCIÓN JOCCA Desaconsehamos o uso de adaptadores fichas e ou cabos exten são B1aBgTT44XL ref dp product quick view m media amazon images | |||

Ref: **1507 1507C 1507V 1507P** EN Instructions manual ES Manual de instrucciones FR Mode d'emploi IT Manuale di istruzioni PT Manual de instruções CZ Nvod k použití DESCRIPTION/ DESCRIPCIN/ DESCRIPCIÓN/ DESCRIZIONE/ DESCRIO/ POPIS DESCRIPTION a. Bowl b. Handle/ cold c. Touch Display DESC...

lang:it score:23 filesize: 2.76 M page\_count: 28 document date: 2022-12-09



JOCCA  
HOME & LIFE  
Ref. 1507  
1507C || 1507V || 1507P  
(EN) Instructions manual  
(ES) Manual de instrucciones  
(FR) Mode d'emploi  
(IT) Manuale di istruzioni  
(PT) Manual de instruções  
(CZ) Návod k použití

### [\[pdf\] User Manual Instructions](#)

Ref 1507 1507C 1507V 1507P Page 2 EN DESCRIPTION a Bowl b Handle cold c Touch atencionalcliente@JOCCA es eu THANK YOU FOR B1yvzn24aBL ref dp product quick view m media amazon images | |||

Ref: **1507 1507C 1507V 1507P** EN Instructions manual ES Manual de instrucciones FR Mode d'emploi IT Manuale di istruzioni PT Manual de instruções CZ Nvod k použití EN/ DESCRIPTION a. Bowl b. Handle/ cold c. Touch Display ES/ DESCRIPCIN a. Cubeta b. Asa/ tacto fro c. Pantalla FR/ DESCRIPT...

lang:it score:23 filesize: 2.78 M page\_count: 32 document date: 2023-05-09



[\[pdf\]](#)

Microsoft Office User Digitální horkovzdušná fritéza Air Fryer Jocca Návod POPIS PRODUKTU a Vyjmíatelná miska b Rukojeť studená C displej Děkujeme za Váš nákup jocca air fryer 1507 navod k pouziti d25 sdn cz d 25 c data gW h NpGU bin attachment f |||

Digitln horkovzdusn fritza Air Fryer Jocca Nvod POPIS PRODUKTU a. Vyjmatelná miska b. Rukoje / studen C. Digitln displej Dkujeme za Vs nkup. Jsme pesvdceni, ze s tmto produktem budete spokojeni. BEZPECNOSTN UPOZORNENN -Tyto pokyny jsou velmi dlezt. Pecliv pectete jej ped pouzitm spotebice a mje je po...  
lang:hr **score:21** filesize: 157.72 K page\_count: 2 document date: 2021-07-20



[\[pdf\]](#) User Manual Instructions

Ref 1507 B1ACkwFT jL ref dp product quick view m media amazon images | |||

**Ref: 1507 1507C 1507V 1507P** EN Instructions manual ES Manual de instrucciones  
FR Mode d emploi IT Manuale di istruzioni PT Manual de instruções CZ Nvod k pouzit  
EN/ DESCRIPTION a. Bowl b. Handle/ cold c. Touch Display ES/ DESCRIPCIN a.  
Cubeta b. Asa/ tacto fro c. Pantalla FR/ DESCRIPT...  
lang:it **score:19** filesize: 2.77 M page\_count: 32 document date: 2023-03-07