

## BLACK+DECKER BPD8W

# BLACK+DECKER 18-inch Portable Dishwasher

MODEL: BPD8W

User Manual

## 1. Introduction

---

This manual provides essential information for the safe and efficient operation of your BLACK+DECKER 18-inch Portable Dishwasher, Model BPD8W. Please read all instructions carefully before using the appliance to ensure proper installation, usage, and maintenance. Retain this manual for future reference.

## 2. Safety Information

---

### Important Safety Instructions:

- Read all instructions before using the dishwasher.
- Connect to a properly grounded outlet only. Refer to the grounding instructions in this manual.
- Do not operate a damaged appliance. If the dishwasher is damaged, contact customer service.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids recommended for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Always ensure the child lock is engaged when not in use, especially in households with children.
- Do not allow children to play with the appliance.

## 3. Product Overview

---

The BLACK+DECKER BPD8W is an 18-inch portable dishwasher designed for convenience and efficiency. It features an 8-place setting capacity, a stainless steel tub, and multiple wash programs. Its portable design with casters allows for easy movement, and the quick-connect assembly simplifies setup.

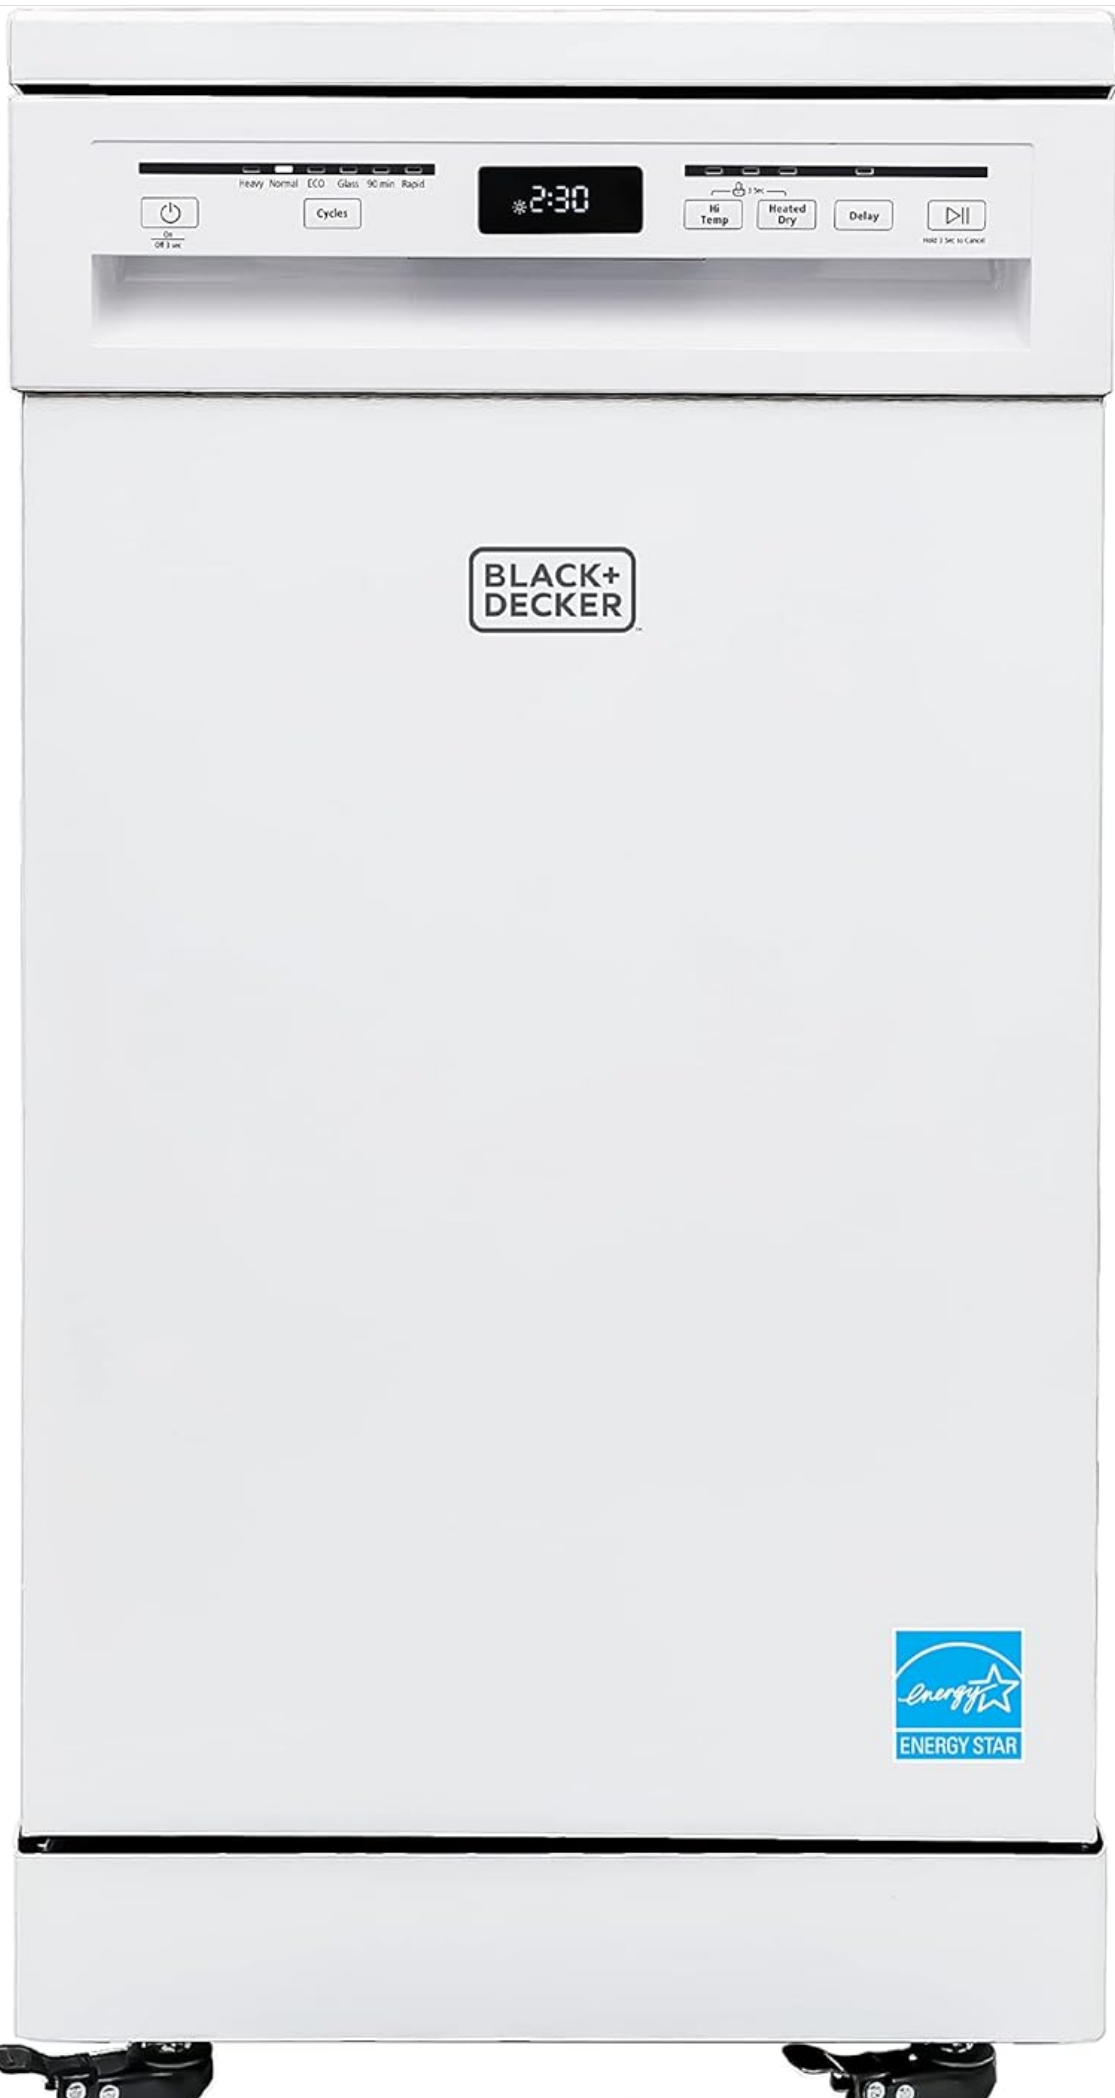




Figure 3.1: Front view of the BLACK+DECKER Portable Dishwasher.



Figure 3.2: Dishwasher doubling as a worktop counter.

## 4. Setup

Follow these steps for initial setup of your portable dishwasher:

1. **Unpacking:** Carefully remove all packaging materials. Inspect the dishwasher for any shipping damage. Report any damage to the retailer immediately.
2. **Placement:** Position the dishwasher on a level, stable surface. The integrated casters allow for easy movement. Ensure there is adequate space around the unit for ventilation and access.
3. **Quick Connect Assembly:**



Figure 4.1: Quick-connect setup for faucet attachment.

The dishwasher uses a quick-connect assembly to link directly to your faucet. Attach the 59-inch hose to a compatible faucet. Ensure a secure connection to prevent leaks. No direct plumbing or permanent installation is required.

4. **Power Connection:** Plug the dishwasher's 3-prong grounded Type B plug into a standard 120V/60HZ electrical outlet. Ensure the outlet is properly grounded.

## 5. Operating Instructions

To operate your BLACK+DECKER portable dishwasher, follow these steps:

1. Loading Dishes:



Figure 5.1: Dishwasher interior with loaded racks.

Load up to 8 place settings. Place larger items in the lower rack and smaller items, such as glasses and cups, in the upper rack. The top rack is adjustable to accommodate taller dishes. Utilize the included silverware basket for forks, knives, and spoons.



Figure 5.2: Silverware basket.

## 2. Adding Detergent and Rinse Aid:



Figure 5.3: Detergent dispenser and rinse aid indicator.

Open the detergent dispenser and add the recommended amount of dishwasher detergent. Fill the rinse aid dispenser if needed; the low rinse aid indicator will alert you when it's low.

## 3. Selecting a Wash Cycle:

# Easy-to-Read LED Display

with 6 wash settings



Figure 5.4: LED display and wash cycle selection.

Use the easy-to-read LED display and push buttons to select one of the 6 wash cycles:

- **Heavy:** For heavily soiled dishes and pots.
- **Normal:** Standard cycle for everyday dishes.
- **ECO:** Energy-efficient cycle for normally soiled dishes.
- **Glass:** Gentle cycle for delicate glassware.
- **90-min:** A quicker cycle for moderately soiled dishes.
- **Rapid:** The fastest cycle for lightly soiled dishes that need a quick wash.

4. **Delay Start Function:** Use the Delay Start function to program the dishwasher to begin a cycle at a later time, according to your schedule.

5. **Child Lock:** Engage the child lock feature for optimal safety, preventing accidental operation or

program changes.

## 6. Maintenance

---

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Cleaning the Interior:** Periodically clean the interior of the dishwasher, including the spray arms and the stainless steel tub, to remove any food particles or residue.
- **Filter Cleaning:** Regularly check and clean the filter system located at the bottom of the dishwasher tub to prevent blockages and ensure efficient washing. Refer to the detailed instructions in the full manual for filter removal and cleaning.
- **Hose Care:** After disconnecting the quick-connect hose, ensure any residual water is drained to prevent spills.

## 7. Troubleshooting

---

If you encounter issues with your dishwasher, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; door not closed properly; circuit breaker tripped.	Ensure power cord is securely plugged in. Close the door firmly. Check and reset the circuit breaker.
Dishes are not clean	Improper loading; insufficient detergent; clogged spray arms; filter needs cleaning.	Review loading instructions. Use correct amount of detergent. Clean spray arm nozzles. Clean the filter.
Water leaks from connection	Hose not securely attached to faucet; worn washer in quick-connect.	Ensure quick-connect is tightly secured. Inspect and replace washer if damaged.
Unusual noise during operation	Dishes interfering with spray arms; foreign object in pump.	Rearrange dishes to ensure spray arms can rotate freely. Inspect for and remove any foreign objects.

For issues not listed here, please contact customer support.

## 8. Specifications

---



Figure 8.1: Product Dimensions.

Feature	Detail
Model	BPD8W
Dimensions (D x W x H)	23.62" x 17.64" x 35.63"
Item Weight	116 Pounds

Feature	Detail
Place Setting Capacity	8
Inner Material	Stainless Steel
Wash Programs	6 (Heavy, Normal, ECO, Glass, 90-min, Rapid)
Voltage	120V/60HZ
Power Consumption	1100W
Annual Energy Consumption	265 Kilowatts
Noise Level	52 dB (as per product description, 45 dB in specifications, using 52 dB as it's more specific to operation)
Special Features	LED Display, Quick Connect assembly, Delay Start, Child Lock
Certification	Energy Star
UPC	810064691140

## 9. Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. You may also contact customer service for assistance with product inquiries, troubleshooting, or parts replacement.

**Manufacturer:** BLACK+DECKER

**Date First Available:** November 16, 2020