



Manuals.plus /

› Salton /

› Salton SP2042 Egg Bite Pie Maker Instruction Manual

## Salton SP2042

# Salton SP2042 Egg Bite Pie Maker Instruction Manual

Model: SP2042 | Brand: Salton

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

## PRODUCT OVERVIEW

The Salton SP2042 Egg Bite Pie Maker is a compact appliance designed for quickly preparing egg bites. It features a non-stick egg tray for easy cooking and cleaning. This unit allows for customized recipes, making it suitable for various dietary preferences such as Keto, Low Carb, Paleo, and Gluten-Free.

# salton®

— Since 1945 —



**PROUDLY CANADIAN**  
100% Canadian owned and operated

Image: The Salton SP2042 Egg Bite Pie Maker in its closed position, showcasing its yellow exterior and compact design.



Image: The Salton SP2042 Egg Bite Pie Maker opened, revealing the four-cup non-stick egg tray inside.

## SETUP

1. **Unpack:** Carefully remove the Egg Bite Pie Maker and all accessories from the packaging.
2. **Clean:** Before first use, wipe the exterior of the unit with a damp cloth. Remove the non-stick egg tray and wash it with warm, soapy water. Rinse thoroughly and dry.
3. **Position:** Place the appliance on a stable, heat-resistant surface near an electrical outlet. Ensure there is adequate ventilation around the unit.
4. **Insert Egg Tray:** Place the clean, dry non-stick egg tray back into the appliance.

## OPERATING INSTRUCTIONS

Follow these steps to prepare delicious egg bites:

1. **Preheat:** Close the lid of the Egg Bite Pie Maker and plug it into a standard electrical outlet. The indicator light will illuminate, signaling that the unit is preheating.
2. **Prepare Egg Mixture:** While the unit preheats, whisk eggs in a bowl. You can add your favorite ingredients such as cheese, vegetables, or cooked meats to customize your egg bites.



Image: A person pouring whisked egg mixture, possibly with added ingredients, into the non-stick egg tray of the open Salton Egg Bite Pie Maker.

3. **Pour Mixture:** Once the unit is preheated (the indicator light may turn off or change color, refer to specific model details if available), carefully open the lid. Pour the prepared egg mixture into each cup of the non-stick egg tray. Do not overfill.
4. **Cook:** Close the lid. The egg bites will cook in approximately 5-10 minutes, depending on the ingredients and desired consistency. The indicator light will cycle on and off during cooking to maintain temperature.





Image: Four perfectly cooked egg bites, golden brown and fluffy, being removed from the non-stick tray of the Salton Egg Bite Pie Maker using a small utensil.

5. **Remove:** Once cooked, carefully open the lid. Use a heat-resistant, non-metallic utensil to remove the egg bites from the tray.
6. **Serve:** Serve the egg bites immediately.

7. **Repeat:** If making additional batches, close the lid and allow the unit to reheat briefly before adding more mixture.

## Official Product Video: How to Use the Salton Egg Bite Pie Maker

Your browser does not support the video tag.

Video: A demonstration of how to use the Salton Egg Bite Pie Maker, including preparing the egg mixture, pouring it into the non-stick tray, cooking, and removing the finished egg bites. This video is provided by Bluewater Commerce - Brand Authorized Distributor.

## CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your appliance.

1. **Unplug and Cool:** Always unplug the appliance from the electrical outlet and allow it to cool completely before cleaning.
2. **Clean Egg Tray:** Remove the non-stick egg tray. Wash it in warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating. Rinse thoroughly and dry completely. The non-stick egg tray is not dishwasher safe.
3. **Clean Exterior:** Wipe the exterior of the Egg Bite Pie Maker with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Storage:** Once clean and dry, store the appliance in a cool, dry place.

## TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in or power outlet is faulty.	Ensure the appliance is securely plugged into a working electrical outlet. Check the circuit breaker.
Egg bites are not cooking evenly.	Uneven filling or insufficient preheating.	Ensure egg mixture is evenly distributed in each cup. Allow the unit to fully preheat before adding mixture.
Egg bites stick to the tray.	Non-stick coating damaged or tray not properly cleaned.	Ensure the non-stick tray is clean and free of residue. Avoid using metal utensils that can scratch the coating.
Egg bites are too dry or overcooked.	Cooked for too long.	Reduce cooking time. Monitor the egg bites closely, especially during initial uses, to find the optimal cooking duration.

## SPECIFICATIONS

Feature	Detail
Model Number	SP2042
Brand	Salton
Special Feature	Non-Stick Coating
Color	Yellow
Material	Aluminum
Product Dimensions	8.8"D x 6.1"W x 3.6"H
Wattage	600 watts
Item Weight	1.02 Kilograms (2.24 pounds)
Voltage	230 Volts
Number of Settings	1
Included Components	Recipes, Egg tray

## WARRANTY AND SUPPORT

---

This Salton SP2042 Egg Bite Pie Maker comes with a **limited warranty**. Please refer to the warranty card included with your product for specific terms and conditions, including coverage duration and how to make a claim.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Salton customer service. Contact information can typically be found on the official Salton website or on the product packaging.

