

[Manuals.plus](#) /

› [Keurig](#) /

› Keurig K-Supreme Plus Coffee Maker Instruction Manual

Keurig K-Supreme

Keurig K-Supreme Plus Coffee Maker Instruction Manual

Model: K-Supreme

INTRODUCTION

This instruction manual provides detailed guidance for the setup, operation, maintenance, and troubleshooting of your Keurig K-Supreme Plus Coffee Maker. Please read this manual thoroughly before using your brewer to ensure proper function and longevity of the appliance.

The Keurig K-Supreme Plus features MultiStream Technology for enhanced flavor extraction, a 78 oz removable water reservoir, and programmable settings for a personalized brewing experience.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or personal injury.

- Do not immerse the brewer, cord, or plugs in water or other liquids.
- Unplug the brewer from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Use only K-Cup pods in this brewer.
- Keep hands and cords away from hot parts of the brewer.
- Do not remove the bottom cover of the brewer. There are no user-serviceable parts inside.

SETUP

1. Unpacking

Carefully remove the Keurig K-Supreme Plus Coffee Maker from its packaging. Retain the packaging materials for future transport or storage. Ensure all components are present: the brewer, removable water reservoir, and drip tray.



Image: The Keurig K-Supreme Plus Coffee Maker, showcasing its sleek silver design and clear removable water reservoir on the left.

2. Initial Clean

Before first use, wash the water reservoir and drip tray with mild dish soap and rinse thoroughly. Do not place these parts in a dishwasher. Wipe the exterior of the brewer with a damp cloth.

3. Filling the Water Reservoir

Remove the water reservoir from the brewer. Fill it with fresh, filtered water up to the "MAX" fill line. Avoid using distilled water. Place the reservoir back onto the brewer, ensuring it is seated firmly.



Image: A side view of the Keurig K-Supreme Plus, highlighting the transparent water reservoir attached to the left side of the main unit.

4. Cleansing Brew

Plug the brewer into a grounded outlet. Place a large mug on the drip tray. Lift and lower the handle without inserting a K-Cup pod. Select a brew size (e.g., 8oz) and press the brew button. This will dispense hot water, cleaning the internal components. Discard the hot water. Your brewer is now ready for use.

OPERATING INSTRUCTIONS

1. Brewing a K-Cup Pod

1. Ensure the water reservoir is filled.
2. Place a mug on the drip tray.
3. Lift the handle to open the K-Cup pod holder.
4. Insert a K-Cup pod into the holder.
5. Lower the handle firmly until it clicks.
6. Select your desired brew size (4oz, 6oz, 8oz, 10oz, 12oz) using the buttons on the control panel.
7. Optionally, adjust brew strength or temperature using the respective buttons.
8. Press the brew button (usually indicated by a large 'K' or 'Brew' icon). The brewer will begin dispensing.



Image: A detailed view of the Keurig K-Supreme Plus control panel, showing buttons for brew size, strength, temperature, and the power button.

2. Adjusting Brew Strength

After inserting a K-Cup pod and before pressing the brew button, press the **STRENGTH** button. Cycle through the available strength settings (e.g., Mild, Medium, Strong) to customize your coffee's intensity.

3. Adjusting Brew Temperature

After inserting a K-Cup pod and before pressing the brew button, press the **TEMP** button. Cycle through the available temperature settings to adjust the heat of your beverage.

4. Using the "Over Ice" Feature

To brew over ice, fill a large tumbler with ice. Insert your desired K-Cup pod. Press the **OVER ICE** button. The brewer will automatically select the optimal brew size and temperature for iced beverages. Press the brew button to start.



Image: The Keurig K-Supreme Plus actively brewing coffee into a vibrant red mug, demonstrating its function.

MAINTENANCE

Regular cleaning and descaling will ensure your Keurig K-Supreme Plus operates efficiently and maintains coffee quality.

1. Cleaning the Brewer

- **Exterior:** Wipe the exterior surfaces with a damp, non-abrasive cloth.
- **Drip Tray:** The drip tray can accumulate spills. Remove it, empty any liquid, and wash with warm, soapy water. Rinse and dry thoroughly before replacing.
- **K-Cup Pod Holder:** The K-Cup pod holder can be removed for cleaning. Lift the handle, grasp the top of the K-Cup pod holder, and pull up to remove. Wash with warm, soapy water. Pay attention to the exit needle. Reinsert by aligning the holder with the opening and pushing down until it clicks into place.



Image: The Keurig K-Supreme Plus with its K-Cup pod holder open, revealing the internal components for pod insertion and cleaning.

- **Water Reservoir:** Clean the water reservoir periodically with warm, soapy water. Rinse thoroughly. Do not use abrasive cleaners or scrub brushes.

2. Descaling

Over time, calcium deposits (scale) can build up in your brewer. Descaling is important to maintain performance. Keurig recommends descaling every 3-6 months, depending on water hardness.

1. Turn off and unplug the brewer.

2. Empty the water reservoir.
3. Pour an entire bottle of Keurig Descaling Solution into the water reservoir.
4. Fill the empty descaling solution bottle with water and pour it into the reservoir.
5. Plug the brewer back in and turn it on.
6. Place a large mug on the drip tray.
7. Perform a cleansing brew (without a K-Cup pod) using the largest brew size. Repeat this process until the "ADD WATER" light illuminates.
8. Let the brewer stand for at least 30 minutes while the descaling solution works.
9. After 30 minutes, empty and rinse the water reservoir.
10. Fill the reservoir with fresh water.
11. Perform at least 12 cleansing brews (without a K-Cup pod) using the largest brew size to rinse out any remaining descaling solution. Refill the reservoir with fresh water as needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Brewer not brewing.	No water in reservoir; brewer not powered on; K-Cup pod not properly seated.	Fill reservoir; ensure brewer is plugged in and powered on; lift and lower handle to reseal K-Cup pod.
Coffee tastes weak or watery.	Incorrect brew size selected; K-Cup pod not suitable for desired strength; brewer needs descaling.	Select a smaller brew size; try a bolder K-Cup pod; perform descaling procedure.
Water not dispensing.	Air bubble in water line; brewer needs descaling.	Perform a cleansing brew without a K-Cup pod; perform descaling procedure.
Grounds in coffee.	K-Cup pod punctured incorrectly; exit needle clogged.	Ensure K-Cup pod is seated correctly; clean the K-Cup pod holder and exit needle.

SPECIFICATIONS

Brand: Keurig

Model Name: K-Supreme

Color: Silver

Product Dimensions (DxWxH): 10.6" x 16.2" x 14.7"

Item Weight: 9.88 pounds

Water Reservoir Capacity: 78 oz

Coffee Input Type: K-Cup Pods

Operation Mode: Fully Automatic

Included Components: Coffee Maker, Stainless Steel Bundle My K-Cup

UPC: 062151515383

ASIN: B08NQ3495F

WARRANTY AND SUPPORT

Keurig brewers are backed by a limited one-year warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official Keurig website.

For technical support, troubleshooting assistance, or to order replacement parts, please contact Keurig Customer Service. Contact information can typically be found on the Keurig website or on the product packaging.

You can also visit the [Keurig Store on Amazon](#) for more product information and accessories.

IMPORTANT NOTES ON MEDIA

Please note that no official product videos from the seller were available in the provided data for embedding in this manual.

