

[Manuals.plus](#) /

› [GOCOM](#) /

› GOCOM G9 Waterproof Walkie Talkie User Manual

GOCOM f65692f2-ec9f-4d9c-8381-2fda471f6c85

GOCOM G9 Waterproof Walkie Talkie User Manual

Model: f65692f2-ec9f-4d9c-8381-2fda471f6c85

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your GOCOM G9 Waterproof Walkie Talkie. Please read this manual thoroughly before using the device to ensure optimal performance and safety.



Figure 1: GOCOM G9 Walkie Talkie 4-Pack with accessories.

2. SETUP

2.1 Unboxing and Components

Your GOCOM G9 package includes:

- 4 x GOCOM G9 Adult FRS Walkie Talkies
- 2 x Desktop Chargers
- 4 x Belt Clips
- 2 x Micro-USB Cables
- 4 x Earpieces

- 12 x AA NiMH Rechargeable Batteries
- 1 x User Manual (this document)

2.2 Battery Installation and Charging

The GOCOM G9 walkie talkies use 3 AA NiMH rechargeable batteries (included) per unit. To install or replace batteries:

1. Locate the battery compartment on the back of the walkie talkie.
2. Open the battery compartment cover.
3. Insert 3 AA NiMH batteries, ensuring correct polarity.
4. Securely close the battery compartment cover.

To charge the walkie talkies:

1. Place the walkie talkie into the desktop charger.
2. Connect the Micro-USB cable to the desktop charger and a power source.
3. The LCD screen will indicate charging status. A low battery alert will sound when batteries are running low, indicating a need for recharging.

2.3 Earpiece and Microphone Setup

Each walkie talkie comes with an earpiece and microphone combo for hands-free operation.

1. Locate the waterproof cover on the side of the walkie talkie.
2. Carefully pull down the waterproof cover to reveal the port.
3. Plug the earpiece/microphone combo into the port.
4. Attach the microphone clip to your shirt or collar for optimal voice pickup.
5. Place the air-actuated earpiece over your ear.

G9 2 Way Radios Key Function

Setting High Low Power, 2 Watt Transmit Power with user selectable 2W or 0.5W Transmit power.



Figure 2: Key functions and ports of the GOCOM G9 Walkie Talkie.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

To power on the walkie talkie, press and hold the power button until the LCD screen illuminates. To power off, press and hold the power button again until the screen turns off.

3.2 Channel and Privacy Code Selection

The GOCOM G9 features 22 channels and 121 privacy codes. To select a channel or privacy code, use the up/down arrow buttons on the device. Setting a specific channel and privacy code helps ensure conversation privacy with your group.

3.3 Communication (Push-to-Talk & VOX)

To transmit your voice, press and hold the Push-to-Talk (PTT) button on the side of the walkie talkie or on the earpiece microphone. Release the button to listen.

The **VOX function** allows for hands-free communication. When activated, the radio will automatically transmit when it detects your voice, eliminating the need to press the PTT button. This is convenient when your hands are occupied.

3.4 NOAA Weather Alert

The NOAA Weather Scan feature automatically scans through 11 available weather (WX) band channels. It locks onto the strongest weather channel to provide severe weather updates. The NOAA Weather Alert will sound an alarm if there is a risk of severe weather in your area, keeping you informed and prepared.

3.5 SOS Emergency Lamp & LED Flashlight

The walkie talkie includes a built-in flashlight with white and red LEDs. Select the LED setting to illuminate your path during evening activities, unexpected emergencies, or power outages. In an emergency, press the SOS button to activate the SOS emergency lamp, which will transmit a blinking Morse code signal.



Figure 3: SOS Emergency Lamp and LED Flashlight in use.

Your browser does not support the video tag.

Video 1: Demonstrates the setup and basic operation of the GOCOM G9 Walkie Talkies, including earpiece connection, power on/off, and communication features. Also shows a range test in an outdoor environment.

4. MAINTENANCE

4.1 Waterproof Features and Care

The GOCOM G9 walkie talkies are IP67 waterproof, submersible, and floating. They feature a water-activated LED design and a dewatering system (bottom speaker hole water droplet) for use in aquatic environments.

- Ensure all port covers are securely closed before exposing the device to water.
- After exposure to saltwater, rinse the device with fresh water and dry thoroughly.
- Do not attempt to open the device or remove the battery cover when wet.

Fully enjoy your outdoor adventure

IP67 waterproof 2 way radio to keep you connected whether on land or at sea.



Submersible



Dewatering system
(Bottom speaker hole water droplet)



Floating on the water

Water Activated Flashlight



Figure 4: GOCOM G9 Walkie Talkie demonstrating its waterproof and floating capabilities.

4.2 Battery Care

The 1200mAh Ni-MH rechargeable batteries provide extended use. To prolong battery life:

- Fully charge batteries before first use.
- Recharge when the low battery alert sounds.
- Avoid extreme temperatures during storage and operation.

4.3 General Cleaning

Wipe the walkie talkie with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

5. TROUBLESHOOTING

5.1 No Power / Device Not Turning On

- Ensure batteries are correctly installed and fully charged.
- Check if the power button is being held down long enough.

5.2 Poor Audio Quality / No Reception

- Verify both walkie talkies are on the same channel and privacy code.
- Ensure you are within the effective communication range (up to 15 miles in optimal conditions). Obstacles like buildings and dense foliage can reduce range.
- Check the earpiece connection if using one.
- Adjust the volume level using the up/down arrow buttons.

5.3 Constant Beeping Sound

- A constant beeping sound often indicates a low battery. Recharge the walkie talkie immediately.

6. SPECIFICATIONS

Feature	Detail
Model Number	f65692f2-ec9f-4d9c-8381-2fda471f6c85
Channels	22
Privacy Codes	121
Frequency Range	462.0~467.0MHz
Maximum Talking Range	15 Miles (optimal conditions)
Water Resistance Level	IP67 Waterproof, Submersible
Battery Type	3 x AA NiMH Rechargeable (1200mAh)
Display Type	LCD
Product Dimensions	8.03 x 2.36 x 1.77 inches
Item Weight	1.89 pounds
Manufacturer	GOCOM

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The GOCOM G9 Walkie Talkie comes with a **2-year warranty** from the manufacturer.

7.2 Customer Support

For any issues or assistance, GOCOM offers **24/7 friendly customer service**. Please refer to the contact information provided with your product packaging or visit the official GOCOM website for support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B08NSYTKPH>

More documents and user manuals: <https://manuals.plus/>