

# AUNA Vertico SmartRadio Internet Radio with CD Player - User Manual

Model: 52035101

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your AUNA Vertico SmartRadio Internet Radio with CD Player. Please read this manual thoroughly before using the device and retain it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.


## PACKAGE CONTENTS

- AUNA Vertico SmartRadio Internet Radio
- Power Adapter (Electric with cord)
- USB Cable
- User Manual

## PRODUCT OVERVIEW

The AUNA Vertico is a versatile SmartRadio featuring Internet radio, DAB+, FM tuner, a slot-in CD player, Bluetooth connectivity, and app control via UNDOK. It includes a 2.4" HCC display for clear information.

### Front Panel Controls and Display

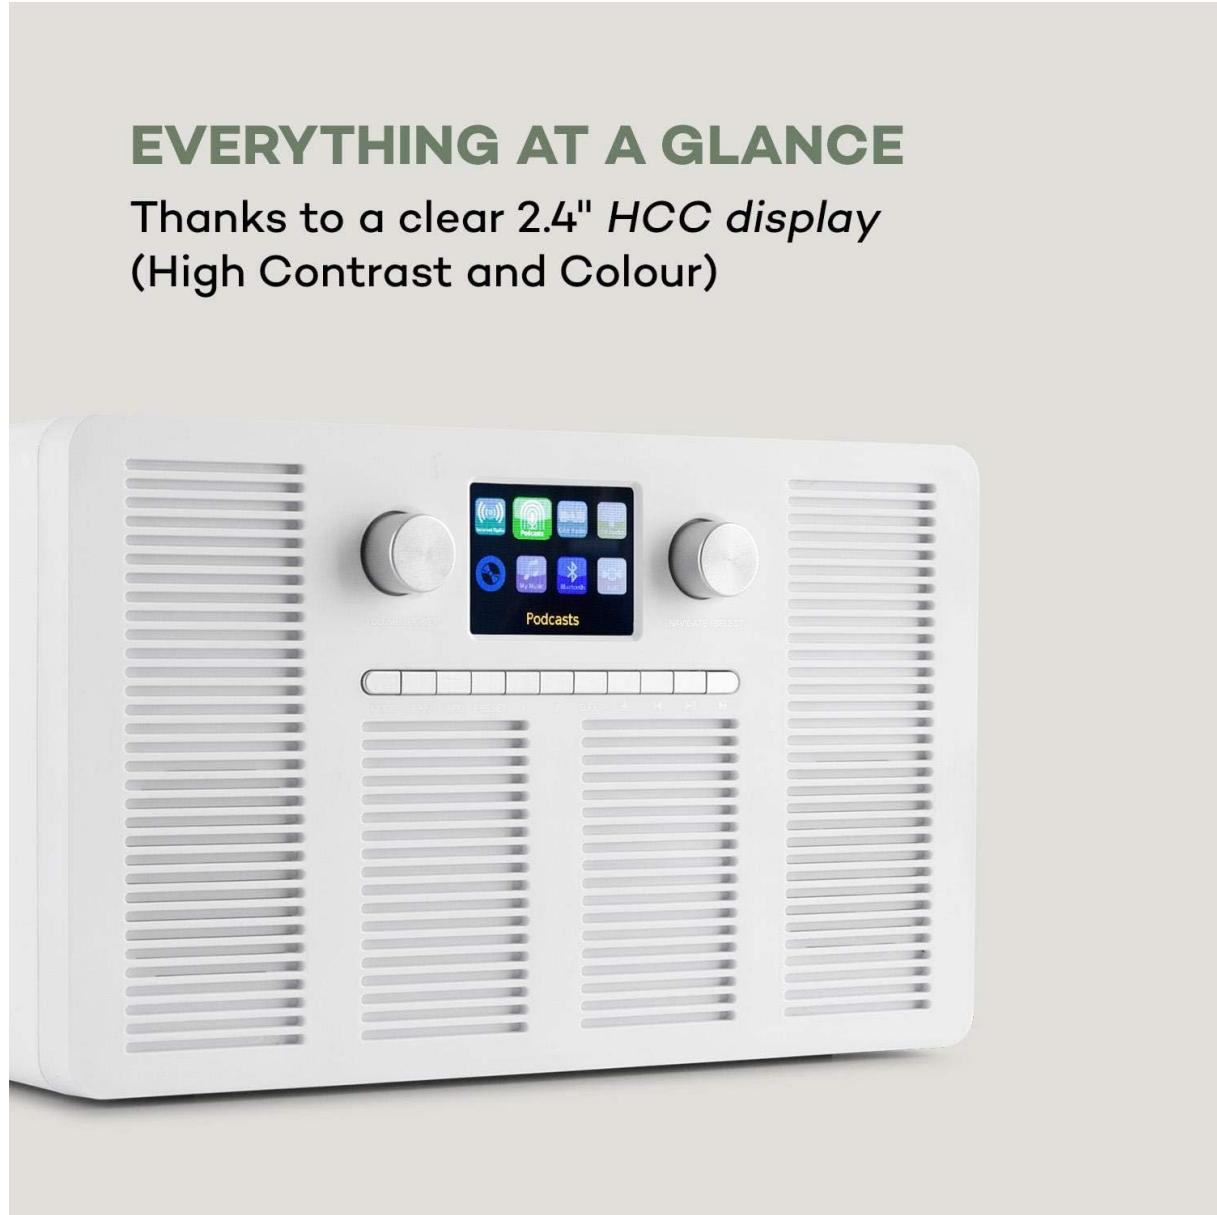

*Image: Front view of the AUNA Vertico SmartRadio, highlighting the central 2.4-inch HCC display and the two rotary control knobs on either side. Below the display are several buttons for mode, menu, info, preset, sleep, and navigation.*

*The speaker grilles are visible on both sides of the central panel.*

- **Display:** 2.4" HCC (High Contrast and Colour) display for navigation and information.
- **Power/Volume Knob:** Turn to adjust volume, press to power on/off.
- **Navigation/Select Knob:** Turn to navigate menus, press to select.
- **Mode Button:** Switches between different operating modes (Internet Radio, DAB+, FM, CD, Bluetooth, AUX, USB).

- **Menu Button:** Accesses system settings and mode-specific options.
- **Info Button:** Displays additional information about the current track or station.
- **Preset Buttons:** Store and recall favorite stations.
- **CD Slot:** For inserting audio CDs.

## Rear Panel Connections



*Image: Rear panel of the AUNA Vertico SmartRadio, displaying the various connection ports. These include an Aux In port, a Headphone output, a USB port, and a DC In port for power. An extendable antenna is also visible at the top.*

- **DC IN:** Power input for the included power adapter.
- **USB Port:** For playing audio files from a USB storage device.
- **AUX IN:** 3.5mm audio input for connecting external audio sources.
- **Headphone Output:** 3.5mm jack for private listening.
- **Antenna:** Extendable antenna for DAB+ and FM reception.

## SETUP

### 1. Power Connection

1. Connect the power adapter to the DC IN port on the rear of the Vertico SmartRadio.
2. Plug the power adapter into a wall outlet.
3. The device will power on or enter standby mode.

## 2. Initial Network Setup (for Internet Radio & UNDOK App)

1. Upon first power-on, the device will guide you through the initial setup wizard.
2. Select your preferred language.
3. The device will scan for available Wi-Fi networks. Select your network from the list.
4. Enter your Wi-Fi password using the navigation knob and select button.
5. Once connected, the device will confirm the network connection.

*Note: A stable internet connection is required for Internet Radio functionality and UNDOK app control.*

# OPERATING INSTRUCTIONS

---

## Basic Operation

- **Power On/Off:** Press the Power/Volume knob to turn the unit on or off (standby mode).
- **Volume Control:** Turn the Power/Volume knob clockwise to increase volume, counter-clockwise to decrease.
- **Mode Selection:** Press the **MODE** button to cycle through available modes: Internet Radio, DAB+, FM, CD, Bluetooth, AUX, USB.

## Internet Radio



## HUGE SELECTION OF STATIONS

Thanks to SmartRadio with Internet,  
DAB+ and FM radio tuners

*Image: The AUNA Vertico SmartRadio positioned on a grey dresser, showcasing its ability to access a wide variety of stations through Internet, DAB+, and FM radio tuners.*

1. Press the **MODE** button until "Internet Radio" is selected.
2. Use the Navigation>Select knob to browse stations by location, genre, or search.
3. Press the Navigation>Select knob to confirm your selection and start playback.
4. To save a station as a preset, press and hold one of the Preset buttons. Briefly press to recall.

### DAB+ Radio

1. Press the **MODE** button until "DAB+" is selected.
2. The radio will automatically scan for available DAB+ stations.
3. Use the Navigation>Select knob to browse the list of found stations.
4. Press the Navigation>Select knob to select a station.

### FM Radio

1. Press the **MODE** button until "FM" is selected.
2. Use the Navigation>Select knob to tune to a frequency.
3. Press and hold the Navigation>Select knob for automatic scanning to the next available station.
4. To save a station as a preset, press and hold one of the Preset buttons. Briefly press to recall.

## CD Player



*Image: A close-up view of the AUNA Vertico SmartRadio, showing a CD being inserted into its slot-in CD player, emphasizing its capability to play physical media.*

1. Press the **MODE** button until "CD" is selected.
2. Gently insert an audio CD into the CD slot on the front panel. The disc will be drawn in automatically.
3. Playback will begin automatically. Use the navigation buttons (often integrated with the Navigation>Select knob or dedicated buttons) to skip tracks or pause.

## Bluetooth Function

## WIRELESS & CONVENIENT

Bluetooth function for playing back audio files via smartphone or tablet



*Image: A hand holding a smartphone, with a wireless signal icon indicating a Bluetooth connection to the AUNA Vertico SmartRadio, which is placed on a shelf in the background. This illustrates the wireless audio playback capability.*

1. Press the **MODE** button until "Bluetooth" is selected.
2. The display will show "Pairing" or "Waiting for connection".
3. On your smartphone or tablet, enable Bluetooth and search for "AUNA Vertico".
4. Select "AUNA Vertico" to pair. Once connected, you can play audio from your device through the radio.

### AUX Input

1. Connect an external audio device (e.g., MP3 player) to the AUX IN port on the rear panel using a 3.5mm audio cable.
2. Press the **MODE** button until "AUX" is selected.
3. Audio from the connected device will now play through the Vertico SmartRadio.

### USB Playback

1. Insert a USB storage device (e.g., USB flash drive) containing audio files into the USB port on the rear panel.
2. Press the **MODE** button until "USB" is selected.

3. The device will read the USB content. Use the Navigation/Select knob to browse and select audio files for playback.

## UNDOK App Control



*Image: A person smiling while interacting with a smartphone that shows the UNDOK app interface. This image highlights the convenience of controlling the AUNA Vertico SmartRadio remotely via the UNDOK application.*

1. Download the UNDOK app from the App Store (iOS) or Google Play Store (Android).
2. Ensure your smartphone/tablet and the AUNA Vertico SmartRadio are connected to the same Wi-Fi network.
3. Open the UNDOK app. It will automatically detect your Vertico SmartRadio.
4. Select your device within the app to gain full control over modes, stations, volume, and settings.

## Display Settings

Access display settings via the **MENU** button to adjust brightness, backlight timeout, and other visual preferences for the 2.4" HCC display.

## MAINTENANCE

### Cleaning

- Always unplug the device from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the display, use a soft, lint-free cloth.

## Care and Storage

- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Store the device in a cool, dry place when not in use for extended periods.
- Do not place heavy objects on top of the unit.

## TROUBLESHOOTING

---

- **No Power:**

- Check if the power adapter is securely connected to the device and the wall outlet.
- Ensure the wall outlet is functioning.

- **No Sound:**

- Check the volume level.
- Ensure the correct input mode (Internet Radio, DAB+, FM, CD, Bluetooth, AUX, USB) is selected.
- If using AUX or Bluetooth, ensure the external device's volume is up and it is properly connected/paired.

- **Cannot Connect to Wi-Fi:**

- Ensure your Wi-Fi password is entered correctly.
- Check if your router is working and within range.
- Try restarting your router and the AUNA Vertico.

- **Internet Radio Buffering/Cutting Out:**

- Check your internet connection speed.
- Move the radio closer to your Wi-Fi router or reduce interference from other devices.

- **CD Not Playing:**

- Ensure the CD is inserted correctly with the label side up.
- Check if the CD is clean and free from scratches.
- Ensure "CD" mode is selected.

- **Bluetooth Pairing Issues:**


- Ensure the radio is in Bluetooth pairing mode.
- Make sure Bluetooth is enabled on your external device and it is within range.
- Try unpairing and re-pairing the device.

## SPECIFICATIONS

---

Feature	Detail
---------	--------

Model Number	52035101
Brand	AUNA
Connectivity	Bluetooth, Wi-Fi (Internet Radio), USB, 3.5mm AUX
Radio Tuners	Internet Radio, DAB+, FM (108 MHz)
CD Player	Slot-in type
Display	2.4" HCC (High Contrast and Colour)
Speaker Output	10 Watt (Max)
Power Source	Electric with cord
Dimensions (L x W x H)	12 x 28 x 17 cm
Weight	1.7 kg
Included Components	USB cable, Power adapter
GTIN	04060656444500

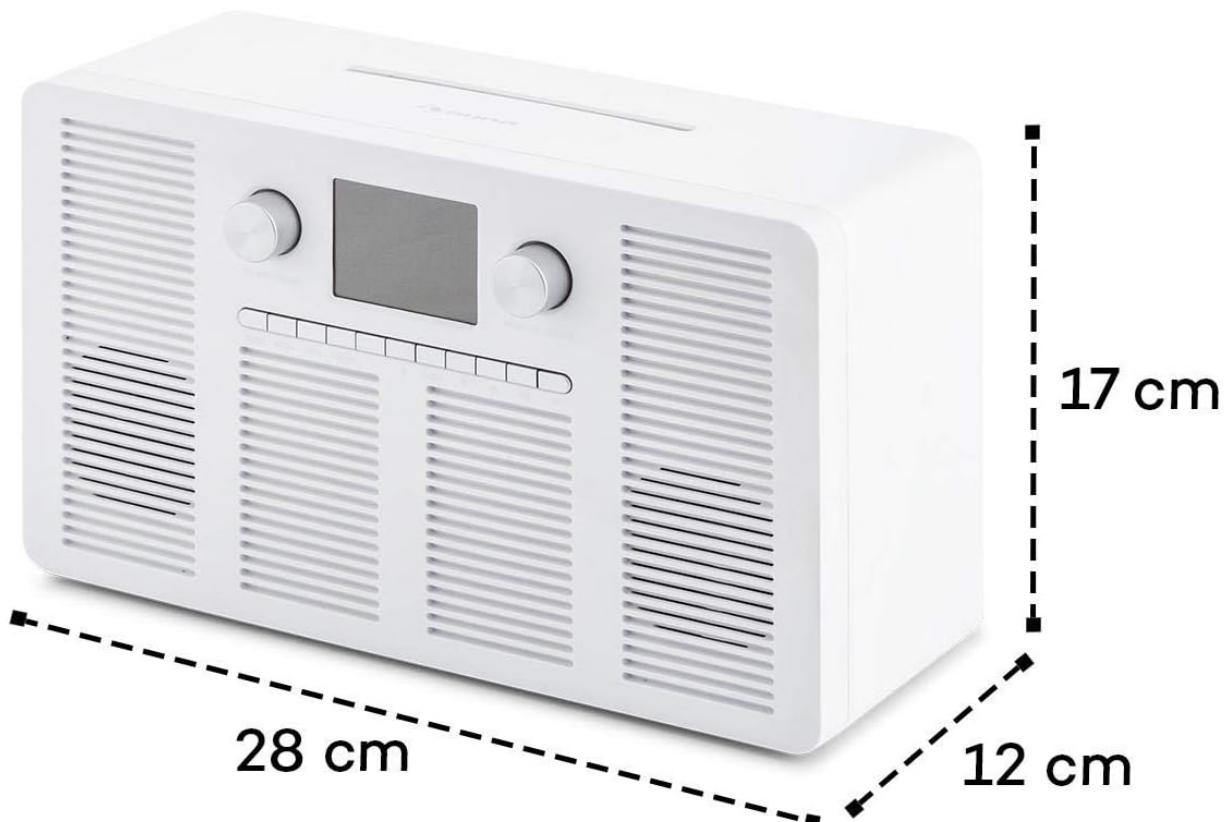

*Image: A diagram illustrating the physical dimensions of the AUNA Vertico SmartRadio, with measurements of 28 cm in length, 12 cm in width, and 17 cm in height.*

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact AUNA customer service. Keep your proof of purchase for warranty claims.

