



[Manuals.plus](#) /

› [ARCADE1UP](#) /

› ARCADE1UP Frogger Arcade Game with Riser Instruction Manual

ARCADE1UP 815221021365

ARCADE1UP Frogger Arcade Game with Riser Instruction Manual

Model: 815221021365

INTRODUCTION

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your ARCADE1UP Frogger Arcade Game with Riser. Please read all instructions carefully before use and retain this manual for future reference.

The ARCADE1UP Frogger Arcade Game brings the classic arcade experience into your home. Navigate Frogger across busy highways and treacherous rivers to reach home safely. This unit features a 17-inch color display, full-size joystick, and buttons, and comes with a matching riser for an authentic arcade height.



Image: Front view of the ARCADE1UP Frogger Arcade Game cabinet with its matching riser, showcasing the game screen and control panel.

SAFETY INFORMATION

- **Electrical Safety:** Always connect the power adapter to a grounded outlet. Do not expose the unit to

water or excessive moisture. Disconnect power before cleaning or servicing.

- **Assembly:** Ensure all components are securely fastened during assembly. Adult supervision is recommended during assembly.
- **Placement:** Place the arcade unit on a stable, level surface. Avoid placing it in direct sunlight or near heat sources.
- **Children:** This product contains small parts and electrical components. Keep out of reach of small children during assembly.
- **Ventilation:** Do not block ventilation openings. Ensure adequate airflow around the unit to prevent overheating.

PACKAGE CONTENTS

Verify that all components listed below are present in your package:

- ARCADE1UP Frogger Arcade Cabinet
- Matching Riser
- Power Adapter
- Joystick (pre-installed)
- Control Buttons (pre-installed)
- Assembly Hardware (screws, cam locks, etc.)
- Instruction Manual (this document)



Image: Side view of the ARCADE1UP Frogger Arcade Game cabinet, showing its profile and wooden paneling.

ASSEMBLY AND SETUP

Assembly of the ARCADE1UP Frogger Arcade Game and its riser typically involves connecting pre-fabricated panels using included hardware. Follow the detailed assembly instructions provided in the separate assembly guide that came with your unit.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the package contents list.
2. **Assemble Riser:** If using the riser, assemble it first according to its specific instructions. Ensure all

connections are tight and stable.

3. **Assemble Cabinet:** Follow the step-by-step instructions to assemble the arcade cabinet. Pay close attention to cable routing and connections for the display and control panel.
4. **Attach Cabinet to Riser:** Once both are assembled, securely attach the arcade cabinet to the riser using the designated hardware.
5. **Power Connection:** Connect the power adapter to the arcade unit's power input, then plug it into a standard electrical outlet.

The assembled machine stands approximately 57.8 inches tall with the riser. Its dimensions are 45.8 inches H (57.8 inches H with riser) x 22.75 inches D x 19 inches W.



Image: A person standing and playing the ARCADE1UP Frogger Arcade Game, demonstrating the unit's operational height with the riser.

OPERATING INSTRUCTIONS

This section details how to power on, play, and adjust settings on your arcade unit.

1. **Power On:** Locate the power switch, usually on the back or bottom of the control panel. Flip the switch to the 'ON' position. The display will illuminate, and the game will start.
2. **Game Play:**
 - **Start Game:** Press the '1 Player' or '2 Player' button to begin a game.
 - **Movement:** Use the joystick to control Frogger's movement (up, down, left, right).
 - **Action:** Frogger typically uses only directional controls. Refer to the on-screen instructions for specific game mechanics.
3. **Volume Control:** A volume control knob or button is typically located on the control panel or behind the unit. Adjust to your preferred sound level.
4. **Power Off:** To turn off the unit, flip the power switch to the 'OFF' position.



Image: Close-up view of the ARCADE1UP Frogger control panel, showing the joystick, player buttons, and volume controls.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the cabinet and control panel. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by a dry wipe. Avoid abrasive cleaners or excessive moisture.
- **Display Care:** Clean the screen with a soft, lint-free cloth specifically designed for electronics. Do not spray cleaners directly onto the screen.
- **Storage:** If storing the unit for an extended period, disconnect it from power and cover it to protect against dust. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/Unit does not turn on.	Power adapter not connected, power outlet not working, power switch off.	Ensure power adapter is securely plugged into the unit and a working outlet. Check power switch position.
No sound.	Volume turned down, internal speaker connection issue.	Adjust the volume control. If problem persists, contact customer support.
Controls (joystick/buttons) not responding.	Loose internal connection, component malfunction.	Ensure all internal connections are secure (refer to assembly guide). If issue continues, contact customer support.
Screen is blank or distorted.	Loose display cable, display malfunction.	Check display cable connections. Power cycle the unit. If problem persists, contact customer support.

SPECIFICATIONS

Model Number: 815221021365

Brand: ARCADE1UP

Game: Frogger

Display: 17-inch Color LED

Controller Type: Joystick

Number of Players: 1

Operation Mode: Manual

Assembled Dimensions (without Riser): 19" W x 22.75" D x 45.8" H

Assembled Dimensions (with Riser): 19" W x 22.75" D x 57.8" H

Material: Plastic

UPC: 815221021365

WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please refer to the warranty card included with your product or visit the official ARCADE1UP website. You can also visit the [ARCADE1UP](#)

[Store on Amazon](#) for more product information.

Please have your model number (815221021365) and purchase date available when contacting support.

© 2023 ARCADE1UP. All rights reserved.