

Manuals.plus /

- › Flash Furniture /
- › Flash Furniture X40 Gaming Chair Instruction Manual

## Flash Furniture X40

# Flash Furniture X40 Gaming Chair Instruction Manual

Model: X40 | Brand: Flash Furniture

### IMPORTANT SAFETY INFORMATION

---

- Read all instructions carefully before assembly and use.
- Keep children and pets away during assembly. Small parts can be a choking hazard.
- Ensure all bolts and screws are securely tightened before use. Recheck periodically.
- Do not stand on the chair.
- Do not use the chair if any parts are missing, damaged, or worn. Contact customer support for replacement parts.
- Maximum weight capacity: 280 pounds. Do not exceed this limit.
- Use the chair on a level surface to prevent tipping.

### PACKAGE CONTENTS

---

Please refer to the packaging and included assembly guide for a complete list of all components and hardware. Ensure all parts are present before beginning assembly.

### SETUP INSTRUCTIONS

---

Assembly of the Flash Furniture X40 Gaming Chair is required. Follow the step-by-step instructions provided in the separate assembly manual included with your product. All necessary tools are typically provided.





Image: Rear view of the chair, illustrating the backrest and lumbar pillow attachment points.

For a visual guide to assembly and features, please watch the official product video:

Video: Official Flash Furniture product overview, demonstrating key features and assembly aspects.

## OPERATING INSTRUCTIONS

---

### 1. Reclining Function

To recline the chair back, locate the lever on the side of the seat (typically on the right). Pull the lever upwards and lean back to your desired angle (between 95° and 175°). Release the lever to lock the backrest in position. The armrests are designed to move with the reclining back for continuous support.

### 2. Slide-Out Footrest

To extend the footrest, pull the loop located under the front of the seat. The footrest will slide out. You can then flip it up for comfortable leg elevation. To retract, push the footrest back under the seat until it locks into place.



Image: The chair with its footrest fully extended, ready for use.

### 3. Massaging Lumbar Pillow

The chair includes a removable lumbar pillow with a vibrating massage function. To activate the massage, connect the attached 3-foot USB cord to a compatible USB power source (e.g., computer, USB wall adapter). The pillow can be adjusted or removed as per your comfort preference.



Image: Detail of the massaging lumbar pillow with its USB connection.

#### **4. Seat Height Adjustment**

To adjust the seat height, locate the pneumatic lever under the seat (typically on the left). While seated, pull the lever up to lower the seat. To raise the seat, stand up slightly and pull the lever up. Release the lever to lock the height.

#### **5. 360-Degree Swivel**

The chair is equipped with a 5-star nylon base and sporty casters, allowing for smooth 360-degree rotation and easy movement across various surfaces.



Image: Overview of chair features including recline, lumbar support, height adjustment, and footrest.

## MAINTENANCE

### Cleaning Instructions

For routine cleaning of the faux leather upholstery, use a solvent and water-based cleaner, such as foam. Apply the cleaner to a soft cloth and gently wipe the surface. Do not saturate the material. Avoid harsh chemicals or abrasive cleaners, as these may damage the finish. Regularly wipe down the base and casters to prevent dust and debris buildup.

### General Care

- Periodically check all fasteners to ensure they remain tight.
- Avoid prolonged exposure to direct sunlight to prevent fading and material degradation.
- Keep sharp objects away from the upholstery to prevent punctures or tears.

## TROUBLESHOOTING

## Chair Not Adjusting Height

Ensure the pneumatic lever is fully engaged. If the issue persists, the gas lift cylinder may need replacement. Contact customer support.

## Squeaking Noises

Check all bolts and screws for tightness. Lubricate moving parts, such as the tilt mechanism or casters, with a silicone-based lubricant if necessary.

## Footrest Not Extending/Retracting Smoothly

Inspect the footrest mechanism for any obstructions. Ensure the tracks are clean and free of debris. A small amount of lubricant may improve movement.

## SPECIFICATIONS

Feature	Detail
Brand	Flash Furniture
Model Name	Flash Furniture X40
Item Model Number	CH-00288-WH-GG
Color	White
Product Dimensions	29.25"D x 28"W x 51.25"H
Seat Depth	21.25 inches
Seat Back Interior Height	31 Inches
Arm Height (from floor)	27.25-30.25"H
Maximum Weight Recommendation	280 Pounds
Material	Metal, Twill, Plastic, Polyurethane, PVC, Plywood, Foam, Leather/Faux Leather
Back Style	Reclining (95° ~ 175°)
Special Feature	Adjustable, Massaging Lumbar, Slide-Out Footrest
UPC	889142923763

48" - 51.25" H



29.25 - 68" D

28" W

Image: Dimensional drawing of the chair, indicating height, width, and depth ranges.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Flash Furniture website. If you require assistance with parts or assembly, please contact Flash Furniture customer service directly.

