

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fujitsu General](#) /
- › [Fujitsu General K 9315014016 and K 9315212016 UTR-FA13-1 & UTR-FA13-2 Filter Combo Instruction Manual](#)

Fujitsu General K 9315014016, K 9315212016, UTR-FA13-1, UTR-FA13-2

Fujitsu General Air Filter Combo Instruction Manual

Models: K 9315014016, K 9315212016, UTR-FA13-1, UTR-FA13-2

1. INTRODUCTION

This instruction manual provides essential information for the proper installation, maintenance, and troubleshooting of your Fujitsu General Air Filter Combo. This combo includes two types of filters: K 9315014016 (UTR-FA13-1) and K 9315212016 (UTR-FA13-2). Please read this manual thoroughly before using the product to ensure optimal performance and longevity of your HVAC or mini-split system.

2. PRODUCT OVERVIEW

The Fujitsu General Air Filter Combo is designed to maintain air quality and system efficiency in compatible Fujitsu General HVAC and mini-split units. The package contains four disposable filters, consisting of two K 9315014016 (UTR-FA13-1) filters and two K 9315212016 (UTR-FA13-2) filters. These filters capture dust, pollen, and other airborne particles, contributing to a cleaner indoor environment and protecting the internal components of your air conditioning system.

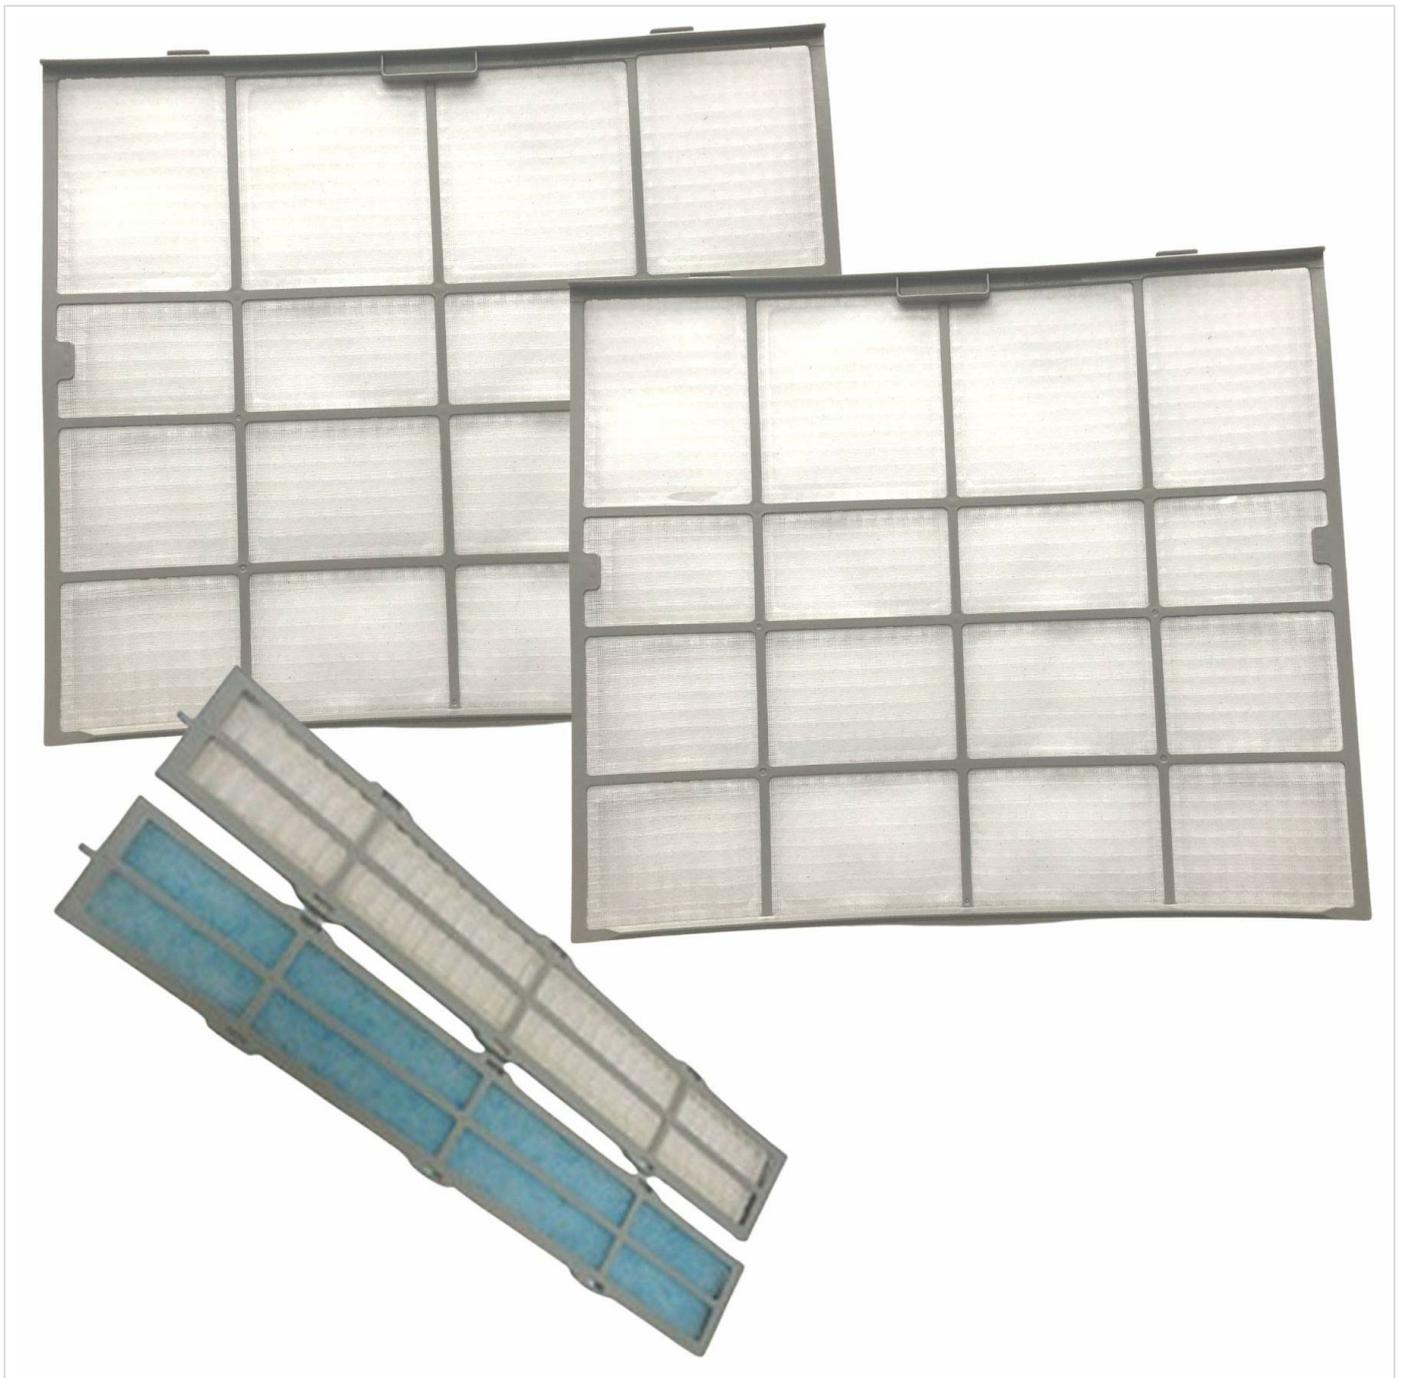


Image showing the two types of Fujitsu General air filters included in the combo pack.

3. SETUP AND INSTALLATION

Follow these general steps to replace the air filters in your Fujitsu General HVAC or mini-split system. Always refer to your specific unit's user manual for detailed instructions, as procedures may vary.

1. **Power Off:** Before beginning any maintenance, ensure the power to your HVAC or mini-split unit is completely turned off at the circuit breaker to prevent electrical hazards.
2. **Locate Filter Access:** Open the front panel or access cover of your indoor unit. The filter location is typically behind this panel.
3. **Remove Old Filters:** Carefully slide out the old filters. Note their orientation to ensure correct installation of the new filters. Dispose of used filters responsibly.
4. **Insert New Filters:** Identify the correct filter type (UTR-FA13-1 or UTR-FA13-2) for each slot. Slide the new filters into their respective slots, ensuring they are fully seated and oriented correctly (e.g., airflow direction if indicated).

5. **Close Access Panel:** Close the front panel or access cover securely.

6. **Restore Power:** Turn the power back on to your HVAC or mini-split unit at the circuit breaker.

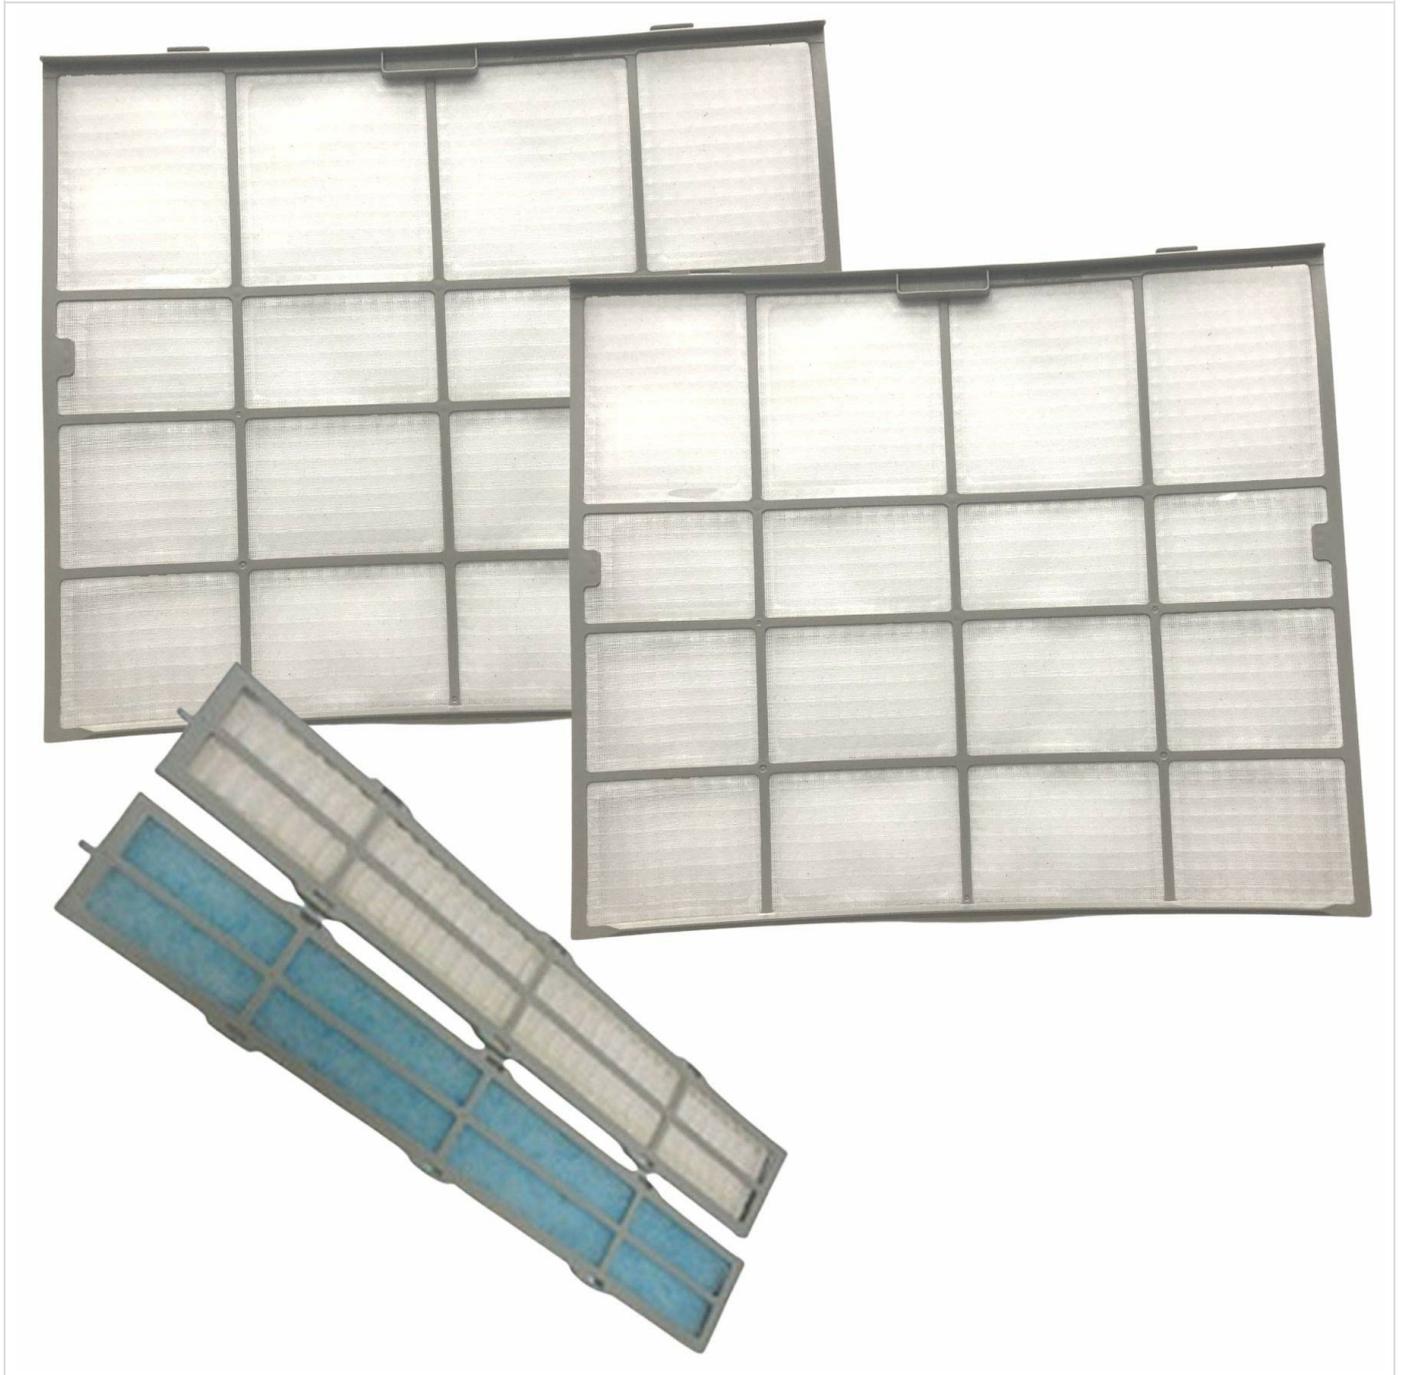


Image showing the Fujitsu General air filters, similar to how they would be handled during installation.

4. OPERATING INSTRUCTIONS

Once installed, the Fujitsu General air filters operate passively as part of your HVAC or mini-split system's air circulation. They continuously filter the air passing through the unit. No specific user interaction is required for their operation beyond proper installation and timely replacement.

- Ensure the unit's fan is operating normally after filter installation.
- Monitor your system's performance for any changes in airflow or cooling/heating efficiency, which could indicate a need for filter replacement.

5. MAINTENANCE

Regular maintenance of your air filters is crucial for maintaining indoor air quality and the efficiency of your Fujitsu General system. These filters are designed for single use and should be replaced periodically.

- **Replacement Frequency:** It is recommended to inspect and replace your air filters every 1 to 3 months, depending on usage, environmental conditions, and the presence of pets or allergies. Heavily used systems or dusty environments may require more frequent replacement.
 - **Disposal:** As these are disposable filters, they should be discarded after use. Do not attempt to clean or reuse them, as this can compromise their filtration effectiveness and potentially damage your system.
 - **Stocking:** Keep a supply of replacement filters on hand to ensure timely changes.
-

6. TROUBLESHOOTING

If you experience issues after installing new filters, consider the following common troubleshooting steps:

- **Reduced Airflow:**
 - Ensure filters are installed correctly and not backward.
 - Verify that the filters are the correct size and type for your unit.
 - Check if the filters are excessively dirty, even if recently replaced (unlikely with new filters, but possible if stored improperly).
- **Unusual Odors:**
 - New filters may have a slight manufacturing odor that dissipates quickly. If odors persist, ensure no other foreign objects are in the unit.
 - If the odor is musty, it might indicate mold growth elsewhere in the system, requiring professional inspection.
- **System Not Turning On:**
 - Confirm that the power to the unit was fully restored after installation.
 - Check the circuit breaker for your HVAC or mini-split system.

If problems persist after performing these checks, contact a qualified HVAC technician or Fujitsu General customer support for assistance.

7. SPECIFICATIONS

Brand	Fujitsu General
Model Numbers	K 9315014016 (UTR-FA13-1), K 9315212016 (UTR-FA13-2)
Compatible Devices	Fujitsu General HVAC and Mini-Split Systems
Reusability	Disposable
Number of Pieces	4 (2x UTR-FA13-1, 2x UTR-FA13-2)
Unit Count	1.0 Count (referring to the combo pack)
Global Trade Identification Number (GTIN)	03323284132180

8. WARRANTY AND SUPPORT

For specific warranty information regarding your Fujitsu General Air Filter Combo, please refer to the documentation provided with your original HVAC or mini-split system, or contact Fujitsu General customer support directly. As these are consumable replacement parts, their warranty may differ from the main unit.

For technical support or further inquiries, please visit the official Fujitsu General website or contact their customer service department.