

UBay EN3R39S

UBay EN3R39S Remote Control User Manual

Replacement Remote for Sharp 4K Smart TVs

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and troubleshooting of your UBay EN3R39S replacement remote control for Sharp 4K Smart TVs. Please read this guide thoroughly to ensure proper use and to maximize your viewing experience.

2. PRODUCT OVERVIEW

The UBay EN3R39S is a dedicated replacement remote control designed for various Sharp 4K Smart TV models. It functions as an infrared (IR) remote, requiring a direct line of sight to your television's IR sensor for optimal performance. No programming or pairing is required; simply insert batteries, and it is ready for use.

Note: This remote control is **not** compatible with Sharp Roku TV models.



Angled view of the UBay EN3R39S remote control, showcasing its ergonomic design and button layout.





Front view of the UBay EN3R39S remote control, displaying all functional buttons including power, volume, channel, and dedicated app buttons.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with

the markings inside the compartment.

4. Close the battery compartment cover securely.

3.2 Initial Use

No programming or pairing is required for this remote control. Once new batteries are installed, the remote is ready for immediate use with compatible Sharp 4K Smart TVs.

4. OPERATING INSTRUCTIONS

To operate your Sharp 4K Smart TV with the UBay EN3R39S remote control, point the remote directly at the television's IR sensor. Ensure there are no obstructions between the remote and the TV.

The remote features standard television controls including:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume.
- **Channel Up/Down (CH +/-):** Changes television channels.
- **Input Button:** Selects input sources (HDMI, AV, etc.).
- **Navigation Pad (Up, Down, Left, Right, OK):** For menu navigation and selection.
- **Back Button:** Returns to the previous screen or menu.
- **Dedicated App Buttons:** Quick access to popular streaming services like VUDU, Netflix, Fandango Now, and YouTube.

This remote is compatible with various Sharp 4K Smart TV models, including but not limited to: LC-50Q7030U, LC-55Q7030U, LC-43Q7000U, LC-43Q7020U, LC-43Q7050U, LC-43Q7060U, LC-43Q7070U, LC-43Q7080U, LC-50Q7000U, LC-55Q7000U, LC-65Q7000U, LC-55Q620U, LC-55Q7040U.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance diminishes. Always use new batteries of the specified type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If your UBay EN3R39S remote control is not functioning as expected, please follow these troubleshooting steps:

1. **Check for Obstacles:** Ensure there are no objects blocking the path between the remote control and the television's IR sensor. The sensor is typically located in the bottom left or bottom right corner of the TV.
2. **Replace Batteries:** Insert new AAA batteries into the remote. Verify that the batteries are installed correctly with the positive (+) and negative (-) ends oriented as indicated in the battery compartment.
3. **Power Cycle the Remote:**

- a. Remove the batteries from the remote.
 - b. Press every button on the remote at least once to discharge any residual power. This can also help identify if any buttons are stuck.
 - c. Re-insert the batteries into the remote.
4. **Power Cycle the TV:** If the remote still does not work, try power cycling your television. Unplug the TV from the power outlet, press and hold its power button for five seconds, then plug the TV back in and turn it on. Test the remote again.

7. SPECIFICATIONS

Brand	UBay
Model Number	EN3R39S
Product Dimensions	8.6 x 1.8 x 0.6 inches
Item Weight	3 ounces
Color	Black
Special Feature	Ergonomic design
Compatible Devices	Sharp 4K Smart Televisions
Power Source	2 x AAA Batteries (not included)

8. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your UBay EN3R39S remote control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty information.