

[Manuals.plus](#) /

› [Galanz](#) /

› Galanz GLR74BRDR12 Retro Refrigerator User Manual

Galanz GLR74BRDR12

Galanz GLR74BRDR12 Retro Refrigerator User Manual

Model: GLR74BRDR12

IMPORTANT SAFETY INFORMATION

This section outlines critical safety precautions to ensure safe operation and prevent injury or damage. Always read and understand these instructions before using your appliance.

- Read all instructions thoroughly before operating the appliance.
- Ensure the refrigerator is properly grounded to prevent electrical shock.
- Do not store explosive substances such as aerosol cans with flammable propellants in this appliance.
- Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- Unplug the refrigerator from the power outlet before cleaning or performing any maintenance.
- Supervise children to ensure they do not play with the appliance.

PRODUCT OVERVIEW

The Galanz GLR74BRDR12 is a 7.4 Cu. Ft. retro-style bottom mount refrigerator designed for efficient food storage. It features a separate freezer compartment, adjustable thermostat control, and energy-efficient operation, making it suitable for various living spaces.





Figure 1: Front view of the Galanz GLR74BRDR12 Retro Refrigerator, showcasing its vibrant red finish and classic design with chrome handles.

Product Features



Freezer



Energy Star



Adjustable Temperature



Interior Light



Retro Red Design



Figure 2: Key features of the refrigerator, including its freezer compartment, Energy Star certification, adjustable temperature control, interior LED lighting, and distinctive retro red design.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials, including tape and protective films. Inspect the refrigerator for any signs of shipping damage. It is recommended to retain the packaging materials for future transport or if the unit needs to be returned.

Placement

Place the refrigerator on a flat, stable surface that can support its weight when fully loaded. Avoid placing the unit in direct sunlight or near heat sources such as stoves, radiators, or heaters. Ensure there is adequate air circulation around the unit for optimal performance and energy efficiency.



Figure 3: The Galanz GLR74BRDR12 Retro Refrigerator integrated into a kitchen environment, demonstrating its compact footprint and aesthetic appeal.



Figure 4: Product dimensions for proper placement and clearance. The refrigerator measures approximately 20.8 inches deep, 24.1 inches wide, and 65.6 inches high.

Leveling

The refrigerator is equipped with adjustable leveling legs at the front. Use these legs to ensure the unit is perfectly level. Proper leveling is crucial for the doors to seal correctly and for the refrigerator to operate efficiently.

Initial Power-Up

After placing and leveling the refrigerator, allow it to stand upright for at least 2-4 hours before plugging it into a grounded electrical outlet. This allows the refrigerant to settle, which is important for the compressor's longevity and efficient cooling.

OPERATING INSTRUCTIONS

Temperature Control

The refrigerator features an adjustable mechanical thermostat control dial, typically located inside the refrigerator compartment. This dial allows you to set the desired temperature for both compartments.



Handle Design

Retro streamlined design gives you comfortable feeling.

Adjustable Mechanical Thermostat Control

Refrigerator mode 32°F to 46.4°F.

Freezer mode $\leq -0.4^{\circ}\text{F}$.



Crystal Crisper

Transparent and large capacity.

Figure 5: Details of the refrigerator's features, including the ergonomic handle, the thermostat control dial, and the transparent crisper drawer.

Turn the knob to set the temperature. Settings typically range from 0 (warmest) to 7 (coldest). For general use, a mid-range setting is often sufficient.

- Refrigerator compartment temperature range: 32°F to 47°F (0°C to 8°C).
- Freezer compartment temperature: $\leq -0.4^{\circ}\text{F}$ ($\leq -18^{\circ}\text{C}$).

Refrigeration

Refrigerator mode 32°F to 46.4°F



4.56 Cu.Ft

Freezer

Freezer mode $\leq -0.4^{\circ}\text{F}$



2.96 Cu.Ft



Figure 6: Internal capacity distribution and recommended temperature ranges for optimal food preservation in both the refrigerator (4.56 Cu.Ft.) and freezer (2.96 Cu.Ft.) sections.

Interior Lighting

The refrigerator is equipped with an LED interior light that automatically illuminates when the refrigerator door is opened, providing clear visibility of contents.

Storage

The refrigerator includes removable glass shelves and a crisper drawer to help organize food items efficiently.

- Use the crisper drawer for storing fruits and vegetables to maintain their freshness and humidity.
- Adjust the height of the glass shelves to accommodate items of various sizes.

MAINTENANCE AND CARE

Cleaning

Regular cleaning helps maintain the appearance and efficiency of your refrigerator. Always unplug the refrigerator from the power outlet before cleaning.

- Clean interior surfaces with a mild detergent and warm water. Rinse thoroughly and dry.
- Wipe exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild, non-abrasive cleaner.
- Do not use abrasive cleaners, scouring pads, or sharp objects, as they can damage surfaces.
- Regularly clean the door gaskets with a damp cloth to ensure a tight seal and prevent energy loss.

Defrosting

This refrigerator features a semi-automatic defrost system. While the refrigerator compartment typically defrosts automatically, manual defrosting of the freezer compartment may be required periodically if ice buildup becomes excessive (approximately 1/4 inch or 6mm thick).

- Turn off and unplug the unit from the power outlet.
- Remove all food items from both compartments and store them in a cooler.
- Allow ice to melt naturally. Place towels at the bottom to absorb water. Do not use sharp objects or heating devices to speed up defrosting, as this can damage the unit.
- Once defrosted, wipe the interior dry before plugging the unit back in and returning food items.

Power Outage

In the event of a power outage, keep the refrigerator door closed as much as possible to maintain the internal temperature and preserve food for a longer duration.

TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Refrigerator does not operate	Not plugged in; circuit breaker tripped; temperature control set to "OFF"	Check power cord connection; reset circuit breaker; adjust thermostat setting
Temperature is not cold enough	Door opened too frequently; warm food added; poor air circulation; thermostat setting too high	Minimize door openings; allow food to cool before storing; ensure proper spacing around unit; lower thermostat setting
Excessive noise	Refrigerator not level; objects vibrating against unit	Adjust leveling legs; ensure nothing is touching the back or sides of the refrigerator
Door does not close properly	Gasket dirty or damaged; unit not level; food blocking closure	Clean or replace gasket; level the unit; rearrange contents to allow door to close fully

SPECIFICATIONS

Detailed technical specifications for the Galanz GLR74BRDR12 Retro Refrigerator.

Feature	Detail
Model	GLR74BRDR12
Brand	Galanz
Product Dimensions (D x W x H)	20.79" x 24.09" x 65.55"
Capacity	7.4 Cubic Feet
Configuration	Freezer-on-Bottom
BEE Star Rating	DOE&E-Star
Color	Red
Installation Type	Freestanding
Number of Doors	2
Defrost System	Semi-Automatic

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your purchase or visit the official Galanz website. Keep your purchase receipt as proof of purchase for warranty claims.

Galanz Customer Support:

- Online Support: www.galanz.com/us/support
- Phone Support: Refer to your product registration card or the Galanz website for the most current contact number.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question