

[Manuals.plus](#) /

› [Lumoonosity](#) /

› Lumoonosity Planet Neon Sign - USB Powered Saturn LED Light Instruction Manual

Lumoonosity NSPLANET

Lumoonosity Planet Neon Sign - Instruction Manual

Model: NSPLANET

1. INTRODUCTION

The Lumoonosity Planet Neon Sign is a USB-powered LED light designed for decorative purposes. It features a clean, modern Saturn outline with vibrant blue and pink LED colors, providing a soft glow suitable for various indoor environments. This manual provides essential information for the safe and effective use of your neon sign.

This product is intended for indoor use only and operates on 5 Volts (DC) with a wattage of 3 watts.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- Neon Sign × 1
- Strong Adhesive × 3
- User Manual × 1
- Warranty Card × 1



Figure 2.1: Included components and key features of the Lumoonosity Planet Neon Sign.

3. SETUP AND INSTALLATION

The Lumoonosity Planet Neon Sign is designed for easy installation without causing damage to your walls. It can be hung or placed on a flat surface.

3.1 Wall Mounting

1. Choose a clean, dry, and smooth wall surface for installation.
2. Peel the backing from the included strong adhesives.
3. Apply the adhesives to the designated mounting points on the back of the neon sign. Ensure they are firmly pressed against the sign.
4. Carefully position the neon sign on the desired wall location and press firmly for several seconds to secure it. The adhesives are designed to hold the sign securely without leaving residue or holes.

Size Reference

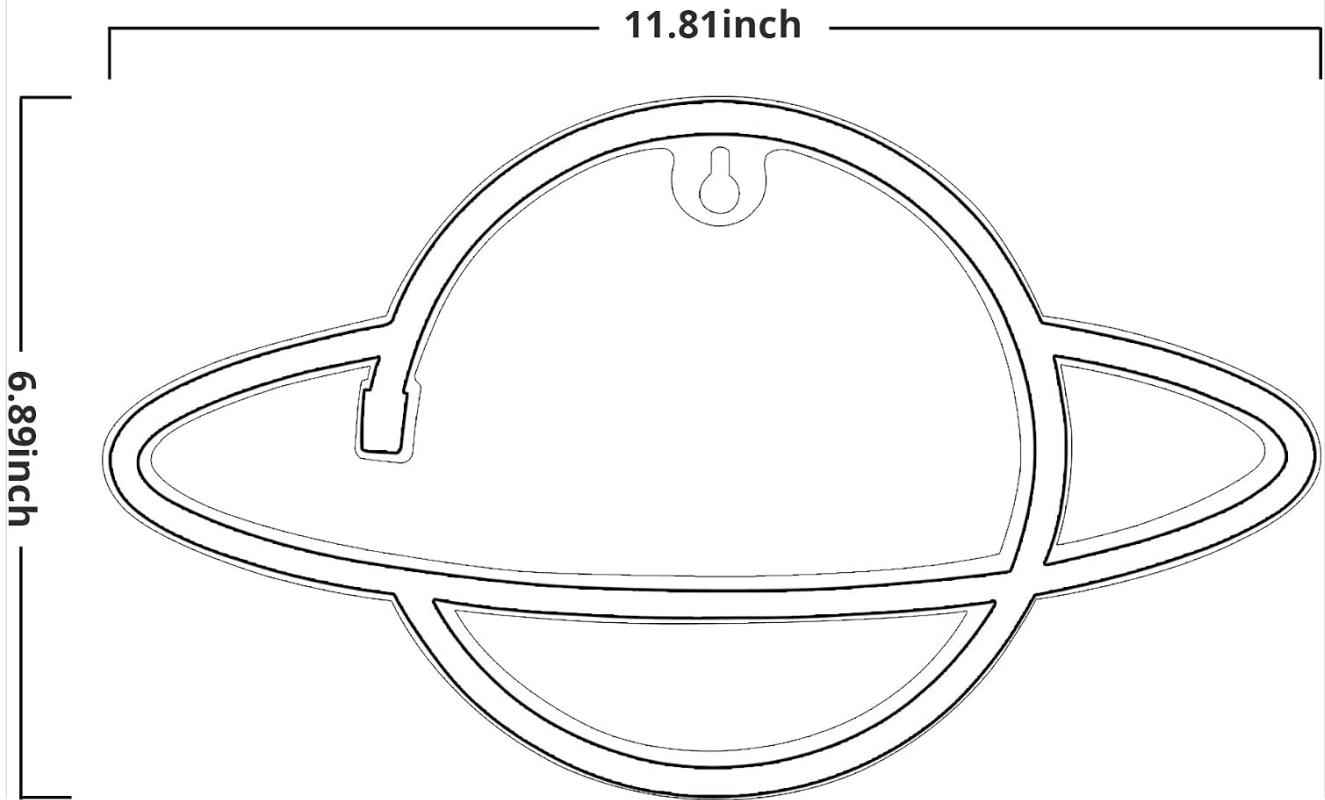


Figure 3.1: Applying adhesives to the back of the neon sign for wall mounting.

3.2 Video Guide: Unboxing and Installation

Your browser does not support the video tag.

Video 3.1: An unboxing and installation guide for the Lumoonosity neon sign, demonstrating how to set up the product.

4. OPERATING INSTRUCTIONS

The Lumoonosity Planet Neon Sign is simple to operate:

1. Connect the USB cable to a compatible USB power source (e.g., USB wall adapter, power bank, computer USB port).
2. Locate the On/Off switch integrated into the USB cable.
3. Toggle the switch to the 'On' position to illuminate the neon sign.
4. Toggle the switch to the 'Off' position to turn off the neon sign.

4.1 Video Guide: Product Overview

Your browser does not support the video tag.

Video 4.1: A brief overview of the Lumoonosity Planet Neon Sign, showcasing its design and illumination.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Lumoonosity Planet Neon Sign, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the sign with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the LED tubing or acrylic backing.
- **Handling:** Handle the sign with care to prevent bending or breaking the LED tubes.
- **Storage:** If storing the sign, ensure it is placed in a safe location where it will not be crushed or damaged.
- **Power Source:** Always use a compatible USB power source to prevent electrical damage.

6. TROUBLESHOOTING

If you encounter issues with your Lumoonosity Planet Neon Sign, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Sign does not light up	No power connection or faulty power source.	Ensure the USB cable is securely connected to a working USB power source. Try a different USB port or adapter. Check if the On/Off switch is in the 'On' position.
Sign flickers or dims	Insufficient power supply or loose connection.	Use a USB power source that provides adequate power (5V DC). Check all connections for tightness.
Adhesives not holding	Wall surface is not clean, dry, or smooth.	Clean the wall surface thoroughly before applying adhesives. Ensure the surface is dry. Reapply new adhesives if necessary, pressing firmly.

7. SPECIFICATIONS

- **Mounting Type:** Wall Mount
- **Product Dimensions:** 6.89"L x 11.81"W
- **Shape:** Planet (Saturn)
- **Item Weight:** 0.28 Kilograms (approx. 9.8 ounces)
- **Light Type:** Neon LED
- **Power Source:** Corded Electric (USB Powered)
- **Voltage:** 5 Volts (DC)
- **Wattage:** 3 watts
- **Type of Bulb:** LED
- **Switch Style:** Push button (On/Off switch on cable)
- **Special Features:** 2-way switching
- **Usage:** Indoor use only
- **Color:** Blue, Pink
- **Material:** Plastic
- **Manufacturer:** Lumoonosity
- **Model Number:** NSPLANET



Figure 7.1: Size reference for the Lumoonosity Planet Neon Sign.

8. WARRANTY AND SUPPORT

The Lumoonosity Planet Neon Sign comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures lifetime technical support.

For any questions, concerns, or technical assistance, please contact our customer service team. We aim to reply to all inquiries within 24 hours.

Please refer to the included Warranty Card for detailed terms and conditions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08NVVV76Q>

More documents and user manuals: **<https://manuals.plus/>**