

[Manuals.plus](#) /

› [MikoDream](#) /

› MikoDream Kids Alarm Clock Instruction Manual

MikoDream 001

MikoDream Kids Alarm Clock Instruction Manual

Model: 001

INTRODUCTION

The MikoDream Kids Alarm Clock is designed to make waking up fun and easy for children. Featuring dual alarm settings, adjustable brightness night light, voice-activated functions, and temperature detection, this clock is a perfect companion for toddlers, children, and students. Its unique emoji display adds an interactive and playful element to daily routines.



Figure 1: MikoDream Kids Alarm Clock (Gray Model)

SETUP

1. **Initial Charge:** Upon first use, fully charge the alarm clock. A USB charging cable is included.
2. **Power On:** Once charged, the clock will activate.
3. **Setting Time:** Use the control buttons on the back to set the current time. The clock supports both 12-hour and 24-hour formats.
4. **Setting Alarms:** The clock allows for dual alarm settings. Choose from five different ringtones and four volume levels for each alarm.

Dual Alarm Clock Design

🕒₁ One for waking up your children

🕒₂ The other for ensuring the second wake



4 Levels of Volume Adjustment & 5 Optional Ringtones

*** For heavy sleepers, we recommend using a sharper ringing tone.**

Figure 2: Dual Alarm Clock Setting Interface

OPERATING INSTRUCTIONS

- **Night Light Function:**
 - Click the top button to turn on/off the night lights.
 - Double-click the top button to activate/deactivate voice-activated night light mode.
 - Long press the top button to adjust the brightness of the night light.
- **Snooze Mode:** When the alarm rings, shake the clock to enter snooze mode. The alarm will ring again after

5 minutes. This can be repeated indefinitely until the top button is clicked to turn off the alarm.

- **Emoji Display:** The clock displays various cute expressions, providing playful interaction.
- **Temperature Detection:** The built-in smart temperature chip displays real-time room temperature.

Voice-activated Night Light with Adjustable Brightness

Click  Turn On/Off Night Lights

Double click  Turn On/Off Voice-activated Nightlight Mode

Long press  Adjust the Brightness of Night Lights



Figure 3: Night Light Control Functions

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or immerse the product in water.

- **Battery Care:** The battery icon is displayed every 20 seconds to remind you to charge when the power is less than 10%. Ensure regular charging to maintain battery life.
- **Storage:** Store in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.



Figure 4: Battery Status Indicators

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not turning on	Low battery or not charged.	Fully charge the alarm clock using the provided USB cable.
Alarm not sounding	Alarm not set or volume too low.	Verify alarm settings and adjust volume levels.

Problem	Possible Cause	Solution
Night light not working	Light function is off or battery is low.	Click the top button to turn on the light. Ensure clock is charged.
Voice-activated light not responding	Voice-activated mode is off or ambient noise is too high.	Double-click the top button to activate voice-activated mode. Ensure a quiet environment for optimal response.

SPECIFICATIONS

- **Brand:** MikoDream
- **Model Number:** 001
- **Color:** Gray
- **Display Type:** Digital
- **Power Source:** Battery Powered (Rechargeable)
- **Material:** Plastic
- **Special Features:** Adjustable Brightness, Dual Alarm, Adjustable Volume, Voice-Activated Night Light, Temperature Detection, Snooze Function
- **Product Dimensions:** 0.39"W x 0.39"H
- **Item Weight:** 9.1 ounces (259 Grams)

WARRANTY & SUPPORT

The MikoDream Kids Alarm Clock comes with a **Limited Warranty**. For specific details regarding warranty coverage and duration, please refer to the product packaging or contact MikoDream customer support. For any product inquiries, technical support, or warranty claims, please visit the official MikoDream store on Amazon or contact their customer service directly.

MikoDream Store: [Visit MikoDream Store](#)