

Columbia CSS14-001

Columbia Digital Sports Watch CSS14-001 User Manual

Model: CSS14-001

1. INTRODUCTION

Thank you for choosing the Columbia Digital Sports Watch, Model CSS14-001. This manual provides detailed instructions for the proper setup, operation, and maintenance of your watch. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

2. PRODUCT OVERVIEW

The Columbia Digital Sports Watch CSS14-001 is designed for active lifestyles, featuring a durable polycarbonate case, a comfortable silicone strap, and a clear digital display. It includes essential functions such as time, date, stopwatch, and alarm.

2.1 Watch Components

- **Display:** Shows time, date, and function information.
- **Buttons:** Typically four buttons (A, B, C, D) for mode selection, setting, and function control. Their exact functions are detailed in the 'Operating Instructions' section.
- **Case:** Durable polycarbonate material.
- **Strap:** Adjustable silicone strap with a tang buckle.
- **Case Back:** Stainless steel back for water resistance.



Figure 1: Front view of the Columbia Digital Sports Watch CSS14-001. This image shows the digital display and the general layout of the watch face and buttons.



Figure 2: Side view of the Columbia Digital Sports Watch CSS14-001. This image highlights the watch's profile and the placement of the control buttons on the side of the case.



Figure 3: Back view of the Columbia Digital Sports Watch CSS14-001. This image displays the stainless steel case back and the tang buckle mechanism of the silicone strap.

3. SETUP

3.1 Initial Setup

Your watch comes with a CR2 battery pre-installed. If the display is blank, press any button to activate it. If it remains blank, the battery may need replacement (refer to Section 5.2).

3.2 Setting Time and Date

The exact button sequence may vary slightly, but generally follows these steps:

1. **Enter Setting Mode:** Press the **MODE** button (often bottom-left) repeatedly until the time display starts flashing or a 'SET' indicator appears.
2. **Adjust Values:** Use the **ADJUST** or **START/STOP** button (often top-right or bottom-right) to increase or decrease the flashing value (e.g., hours, minutes).
3. **Navigate Fields:** Press the **MODE** button again to move to the next setting field (e.g., minutes, year, month, day).
4. **Exit Setting Mode:** Once all settings are adjusted, press the **MODE** button or a dedicated **EXIT** button (if available) to save and exit. The display will stop flashing.

Note: Some models may use a 'RESET' button (often top-left) in conjunction with 'ADJUST' for setting. Refer to the on-screen prompts if available.

4. OPERATING INSTRUCTIONS

4.1 Mode Switching

Press the **MODE** button (typically bottom-left) to cycle through the different functions:

- **Time Mode:** Displays current time and date.
- **Stopwatch Mode:** For measuring elapsed time.
- **Alarm Mode:** For setting and activating alarms.

4.2 Stopwatch Function

1. Enter Stopwatch Mode by pressing the **MODE** button.
2. Press the **START/STOP** button (typically top-right) to begin timing.
3. Press **START/STOP** again to pause the timer.
4. To resume, press **START/STOP**.
5. To reset the stopwatch to zero, press the **RESET** button (typically bottom-right or top-left) while the stopwatch is paused.

4.3 Alarm Function

1. Enter Alarm Mode by pressing the **MODE** button.
2. Press the **SET** button (or similar) to make the alarm time flash.
3. Use the **ADJUST** button to set the desired hour and minute.
4. Press **SET** again to confirm and exit.
5. To turn the alarm ON/OFF, press the **START/STOP** button while in Alarm Mode (without entering setting mode). An alarm icon will appear/disappear on the display.

4.4 Backlight

To illuminate the display in low-light conditions, press the **LIGHT** button (typically top-left). The backlight will remain active for a few seconds.

4.5 Water Resistance

This watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for showering, swimming in shallow water, and general water activities. **Do not press any buttons while the watch is submerged in water.** Not suitable for diving or high-pressure water activities.

5. MAINTENANCE

5.1 Cleaning

Wipe the watch case and strap with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly. Avoid using harsh chemicals or abrasive materials.

5.2 Battery Replacement

The watch uses one CR2 battery. When the display becomes dim or functions irregularly, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

6. TROUBLESHOOTING

- **Display is blank:** The battery may be depleted. Replace the battery (see Section 5.2).
- **Time is incorrect:** Re-set the time and date following the instructions in Section 3.2.
- **Backlight is dim or not working:** This could indicate a low battery. Replace the battery.
- **Screen misting:** If condensation appears inside the watch, it may indicate a breach in the water seal. Avoid further water exposure and seek professional service immediately.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable) or that the battery is not low. If the issue persists, professional service may be required.

7. SPECIFICATIONS

Model Number	CSS14-001
Brand	Columbia
Display Type	Digital
Movement Type	Digital Movement
Power Source	Battery Powered (1 CR2 battery included)
Case Material	Polycarbonate
Case Diameter	46 millimeters
Case Thickness	13.4 millimeters
Watch Glass Material	Crystal
Band Material	Silicone
Band Width	6 millimeters
Clasp Type	Tang Buckle
Water Resistance Depth	50 meters (5 ATM)
Item Weight	200 grams
UPC	810031870646

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer. The manufacturer of this product is Phantom Brand Group. Additional watch care instructions and manuals for similar models (e.g., Peak Patrol CSS14) may be found online at phantombrandgroup.com/watch-care-instructions.

