

Micro Touch MTTTMAX

Micro Touch MAX Lighted Personal Trimmer

MODEL: MTTTMAX

Introduction

The Micro Touch MAX Lighted Personal Trimmer is a versatile grooming device designed for precise hair removal. Constructed with German stainless steel bonded to titanium, it features a rubber non-slip grip for comfortable handling. This trimmer is suitable for various areas including eyebrows, sideburns, nose hair, ear hair, and necklines. A built-in light enhances visibility during use.

Safety Information

- Avoid contact with water. This device is not waterproof.
- Do not use the trimmer while it is charging.
- Handle the blades with care to prevent injury.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if service is required.

Package Contents

- Micro Touch MAX Lighted Personal Trimmer
- 1 AA Battery
- Cleaning Brush

Setup

Battery Installation

The Micro Touch MAX Trimmer operates on one AA battery. To install or replace the battery:

1. Gently twist the bottom section of the trimmer counter-clockwise to open the battery compartment.
2. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Twist the bottom section clockwise to securely close the battery compartment.



Image: The Micro Touch MAX Lighted Personal Trimmer, illustrating its design and the location of the battery compartment at the base.

Operating Instructions

Follow these steps for effective and safe use of your personal trimmer:

1. Ensure the trimmer has a fresh battery installed.
2. Turn on the trimmer using the power button located on the device body. The built-in light will activate.
3. For specific grooming tasks, consider using the appropriate attachment if provided (e.g., for eyebrow length control).
4. Gently move the trimmer over the area you wish to groom. Avoid applying excessive pressure.
5. After use, turn off the trimmer and clean it as described in the Maintenance section.

Specific Applications

- **Eyebrows:** Use the trimmer to carefully shape and trim stray hairs. For precise length, an eyebrow guide attachment may be used. Move the trimmer against the direction of hair growth.



Image: A man precisely trimming his eyebrow hair using the Micro Touch MAX Lighted Personal Trimmer, highlighting the built-in light for visibility.

- **Nose and Ear Hair:** Carefully insert the trimmer tip into the nostril or ear canal. Move it gently in a circular motion to trim unwanted hair. The built-in light aids in navigating these areas.



Image: A man using the Micro Touch MAX Lighted Personal Trimmer to trim hair around his ear, demonstrating its use for delicate

areas.

- **Neckline and Sideburns:** Use the trimmer to clean up edges and stray hairs along the neckline and sideburns. Hold the trimmer at an angle that allows for a clean, defined line.



Image: A man utilizing the Micro Touch MAX Lighted Personal Trimmer to neaten his neckline, showing its effectiveness for precise grooming.

Maintenance

Cleaning

Regular cleaning is essential for maintaining the performance and longevity of your trimmer. Dried hair or debris can impede its function.

1. After each use, turn off the trimmer.
2. Remove any attachments.
3. Use the provided cleaning brush to remove loose hairs from the blade area.
4. For a more thorough clean, carefully run warm water over the blade area only. **Do not submerge the entire device in water.**
5. Allow the blade area to air dry completely before storing or reattaching the battery compartment.

Storage

Store the trimmer in a cool, dry place away from direct sunlight and moisture. If the trimmer will not be used for an extended period, it is recommended to remove the AA battery to prevent potential leakage.

Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Trimmer does not turn on or operates intermittently.	Dead or improperly installed battery; debris obstructing motor/blades.	Replace the AA battery with a fresh one, ensuring correct polarity. Thoroughly clean the blade area and internal connections with the brush.
Trimmer is not cutting effectively.	Blades are dull or clogged with hair/debris.	Clean the blade head thoroughly using the cleaning brush and warm water (blade area only). Ensure the trimmer is moved gently against hair growth.
Built-in light is not working.	Battery issue; LED malfunction.	Replace the battery. If the issue persists, contact customer support.

Specifications

- **Model Number:** MTTTMAX
- **Power Source:** 1 x AA Battery (included)
- **Blade Material:** German Stainless Steel bonded to Titanium
- **Color:** Titanium
- **Product Dimensions:** 1.06 x 3.86 x 8.19 inches
- **Item Weight:** 3.17 ounces (0.09 Kilograms)
- **Recommended Use:** Trimming eyebrows, sideburns, nose, ears, and neckline.

Warranty and Support

For warranty information or technical support, please refer to the packaging or contact Micro Touch customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Micro Touch

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question