

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [IKEA](#) /
- › [IKEA EKET Cabinet Legs 10 cm - Instruction Manual](#)

IKEA 804.289.08

IKEA EKET Cabinet Legs 10 cm - Instruction Manual

Model: 804.289.08

PRODUCT OVERVIEW

The IKEA EKET cabinet legs are designed to elevate your EKET cabinet combination, creating a light and airy impression while also facilitating easier cleaning underneath the furniture. These metal legs feature adjustable height for stable placement on various floor surfaces.



Image: An EKET cabinet elevated by the 10 cm metal legs, demonstrating the clearance provided for cleaning and a lighter aesthetic.

PACKAGE CONTENTS

- 4 x Metal Legs (Height: 10 cm, Diameter: 3 cm, Max adjustable height: 11 cm)
- Required fasteners for assembly

SETUP AND ASSEMBLY INSTRUCTIONS

This product requires assembly. Please follow the steps below carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all 4 legs and fasteners are present.
2. **Identify Mounting Points:** Locate the designated mounting points on the underside of your IKEA EKET cabinet combination.
3. **Attach Mounting Plates:** Securely attach the mounting plates of each leg to the cabinet using the provided fasteners. Ensure they are tightened firmly.
4. **Adjust Leg Height:** Once all legs are attached and the cabinet is placed in its desired location, adjust the

height of each leg by rotating the foot until the cabinet is stable and level.

OPERATING INSTRUCTIONS

The primary function of these legs is to provide stable elevation for your EKET cabinet. The height adjustment feature allows for minor leveling on uneven floors. To adjust, simply rotate the bottom part of each leg clockwise to increase height or counter-clockwise to decrease it, until the cabinet is stable.

MAINTENANCE

- **Cleaning:** Wipe the legs clean with a damp cloth. Follow with a dry, clean cloth to remove any moisture. Avoid using abrasive cleaners or harsh chemicals.
- **Fastener Check:** Periodically check that all fasteners attaching the legs to the cabinet are properly tightened. Re-tighten if necessary to maintain stability and safety.

TROUBLESHOOTING

- **Cabinet Wobbles:** If the cabinet feels unstable or wobbles, ensure that all legs are securely attached and that their heights are adjusted correctly to compensate for any unevenness in the floor.
- **Difficulty Attaching:** Ensure you are using the correct fasteners and that the mounting plates are aligned with the pre-drilled holes on the EKET cabinet.

SPECIFICATIONS

Feature	Detail
Model Number	804.289.08
Quantity	4 pieces per package
Height	10 cm (adjustable up to 11 cm)
Diameter	3 cm
Color	Metal (Silver)
Materials	Tube: Stainless steel, Foot: Polypropylene plastic, Mounting plate: Steel, Epoxy powder coating
Product Weight	750 grams (total for 4 legs)

SAFETY INFORMATION

For your safety and to ensure the longevity of your furniture, it is crucial to:

- Always ensure all fasteners are securely tightened during assembly.
- Periodically check the tightness of all fasteners and re-tighten them if necessary. Loose fasteners can lead to instability and potential damage.

WARRANTY AND SUPPORT

For information regarding warranty coverage or to seek support for your IKEA EKET cabinet legs, please refer to the official IKEA website or contact IKEA customer service directly. Keep your purchase receipt as proof of purchase.

© IKEA. All rights reserved.