

YiLFo maquina cortar pelo-0582

YiLFo Professional Hair and Beard Trimmer User Manual

Model: maquina cortar pelo-0582 | Brand: YiLFo

1. INTRODUCTION

Thank you for choosing the YiLFo Professional Hair and Beard Trimmer. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new grooming device. Please read this manual thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Do not immerse the trimmer in water. The blade head is washable, but the main body is not.
- Keep the appliance away from water. Do not use it while bathing or showering.
- Unplug the trimmer before cleaning or when not in use.
- Do not operate the trimmer with a damaged cord or plug, or if it malfunctions or has been dropped or damaged.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this product only for its intended household use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Store the trimmer in a dry place.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Hair Trimmer
- 1 x USB Charging Cable

- 3 x Guide Combs (1mm, 2mm, 3mm)
- 1 x Cleaning Brush
- 1 x Lubricating Oil
- 1 x User Manual (English)

4. PRODUCT OVERVIEW

The YiLFo Professional Hair and Beard Trimmer is designed for precise and efficient grooming. It features a powerful motor, a sharp T-blade, and a smart LED display for convenience.



Figure 4.1: The YILFo Hair and Beard Trimmer along with its included accessories: guide combs, USB charging cable, cleaning brush, and lubricating oil.

Key Features:

- **Smart LED Display:** The integrated LED screen clearly shows the battery life, indicating when charging is required.
- **Fast Charging & Long Battery Life:** A full charge takes approximately 2 hours via USB, providing up to 180 minutes of cordless operation.
- **Powerful Motor:** Designed to handle various hair types without snagging or pulling, ensuring a smooth and efficient

cut.

- **Sharp T-Blade:** Features a high-speed electric machine with powerful performance and low noise. The cutting head is waterproof for easy cleaning under running water.
- **Ergonomic Design:** The vintage-inspired design offers a comfortable grip and easy control during use.



Figure 4.2: The intelligent LED display provides real-time battery percentage, ensuring you know when to recharge.

LAME de TYPE T à PAS de 0 DENT

Double lame en acier inoxydable



Lame lavable, facile à nettoyer



Figure 4.3: The sharp T-blade is made of stainless steel and is washable for easy cleaning after each use.

2 Heures

temps de charge

180 Minutes

Fonctionnement



Figure 4.4: The trimmer supports convenient USB charging, compatible with various power sources like adapters, power banks, and computers.

5. SETUP

5.1 Initial Charging

1. Before first use, fully charge the trimmer. Connect the USB charging cable to the trimmer's charging port and plug the other end into a USB power source (e.g., computer, USB adapter, power bank).
2. The LED display will show the charging progress. A full charge typically takes about 2 hours.
3. Once fully charged, the display will indicate 100%. Disconnect the charger.

5.2 Attaching Guide Combs

1. Ensure the trimmer is turned off before attaching or detaching guide combs.
2. Select the desired guide comb (1mm, 2mm, or 3mm) based on your preferred hair length.

3. Align the comb with the trimmer blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

6. OPERATING INSTRUCTIONS

6.1 Turning On/Off

- To turn on the trimmer, press the power button located on the body of the device. The LED display will illuminate.
- To turn off the trimmer, press the power button again.

6.2 Trimming Hair and Beard

1. Ensure hair is clean and dry for best results.
2. Attach the appropriate guide comb for your desired length. For a closer trim or detailing, use the trimmer without a comb.
3. Hold the trimmer with the blade flat against the skin or at a slight angle, depending on the area and desired cut.
4. Move the trimmer slowly and steadily against the direction of hair growth.
5. For beard trimming, start with a longer comb and gradually reduce the length if needed.
6. For outlining and detailing, use the trimmer without a comb, carefully guiding the blade along the desired lines.

7. MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your trimmer.

7.1 Cleaning the Blade

1. Turn off the trimmer and disconnect it from any power source.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to remove loose hairs from the blade and the trimmer body.
4. The blade head is waterproof. You can rinse the blade under running water. *Do not immerse the entire trimmer body in water.*
5. Allow the blade to air dry completely before reattaching or storing.

7.2 Oiling the Blade

1. After cleaning and drying the blade, apply 1-2 drops of the provided lubricating oil onto the teeth of the blade.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.
4. Oiling the blade regularly (e.g., after every few uses) helps maintain cutting performance and prevents rust.

7.3 Storage

- Store the trimmer in a cool, dry place, away from direct sunlight and moisture.
- Keep the blade protected when not in use, ideally with a blade guard or by storing it in its original packaging.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully. Check the LED display for battery level.
Poor cutting performance / pulling hair.	Blade is dirty or not oiled. Blade is dull or damaged.	Clean the blade thoroughly and apply lubricating oil. If the blade is dull, consider replacing it (contact support).
Trimmer makes unusual noise.	Blade needs oiling. Foreign object caught in blade.	Apply lubricating oil to the blade. Turn off and carefully inspect the blade for any obstructions.
LED display not working.	Trimmer is off or battery is completely dead.	Turn on the trimmer. If still off, connect to charger to see if it responds.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

- **Model Name:** 700AL
- **Model Number:** maquina cortar pelo-0582
- **Brand:** YiLFo
- **Blade Material:** Stainless Steel
- **Power Source:** Battery Powered
- **Battery Type:** Lithium Metal (included)
- **Charging Time:** Approximately 2 hours
- **Operating Time:** Up to 180 minutes (3 hours)
- **Product Dimensions (L x W x H):** 15 x 2.7 x 2 cm (5.9 x 1.06 x 0.79 inches)
- **Weight:** 180 grams (0.4 lbs)
- **Included Components:** Hair Trimmer, USB Charging Cable, 3 Guide Combs (1/2/3 mm), Cleaning Brush, User Manual, Lubricating Oil.
- **ASIN:** B08NX69S5F
- **UPC:** 764690362618

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or contact the retailer where you purchased the product.

For technical support, troubleshooting assistance, or inquiries about replacement parts, please contact YiLFo customer service. Contact information can typically be found on the product packaging or the retailer's website.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question