

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [VINABTY](#) /

> [VINABTY RM-ADP035 Remote Control User Manual for Sony Blu-ray Home Theater Systems](#)

VINABTY RM-ADP035

VINABTY RM-ADP035 Remote Control User Manual

For Sony Blu-ray Disc Player Home Theater Systems

1. INTRODUCTION

This manual provides instructions for the VINABTY RM-ADP035 replacement remote control. This remote is designed to be compatible with various Sony Blu-ray Disc Player Home Theater Systems, offering direct functionality without the need for programming.

Compatible models include: **BDV-E300, HCD-E300, BDV-Z7, SA-WSZ7, SS-TSZ7, HCD-Z7, BDV-E800W, HCD-E800W, HCD-E801, BDV-E801.**

2. SETUP: BATTERY INSTALLATION

The RM-ADP035 remote control requires two AA batteries for operation. No programming is needed; simply install the batteries to begin use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two new AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 2.1: Battery compartment with AA batteries.

This image shows the rear of the RM-ADP035 remote control. The battery cover is removed, revealing the compartment designed for two AA batteries. The batteries are shown correctly inserted, indicating their polarity.

3. OPERATION

Once batteries are installed, the RM-ADP035 remote control is ready for immediate use with your compatible Sony Blu-ray Disc Player Home Theater System. Point the remote directly at your device and press the desired function button.





RM-ADP035 

Figure 3.1: Front view of the RM-ADP035 remote control.

This image displays the front of the RM-ADP035 remote control, highlighting its ergonomic design and the layout of various control buttons, including power, numerical keys, navigation, volume, and playback controls.

Key Functions:

- **Power (I/O):** Turns the connected device on or off.
- **THEATRE/BRAVIA SYNC:** Activates theater mode or BRAVIA Sync functions.
- **TV I/O:** Controls the power of a connected TV.
- **Numerical Buttons (0-9):** For direct input of track numbers, channels, or other numerical selections.
- **TOP MENU/POP UP/MENU:** Accesses the main menu or pop-up menus of the Blu-ray player.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate through menus and confirm selections.
- **HOME:** Returns to the main home screen of the device.
- **RETURN:** Goes back to the previous screen or menu.
- **OPTIONS:** Displays additional options for the current content or menu.
- **TOOLS:** Accesses various tools or settings.
- **Volume (+/-):** Adjusts the audio volume.
- **Mute:** Mutes or unmutes the audio.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Controls media playback.
- **PROG (+/-):** Changes channels or tracks.
- **SCENE SEARCH:** Initiates scene search functionality.
- **D.TUNING/ANALOG/DIGITAL:** Selects tuning modes or input types.
- **SLEEP/NIGHT/DYNAMIC RANGE:** Activates sleep timer, night mode, or dynamic range control.

4. MAINTENANCE

Battery Care:

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both AA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

Cleaning:

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners, alcohol, or solvents, as these can damage the remote's finish or internal components.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote control is not working.	<ul style="list-style-type: none"> ◦ Dead or incorrectly inserted batteries. ◦ Obstruction between remote and device. ◦ Remote is too far from the device. 	<ul style="list-style-type: none"> ◦ Replace batteries with two new AA batteries, ensuring correct polarity. ◦ Remove any objects blocking the line of sight between the remote and the device's IR receiver. ◦ Move closer to the device.
Some buttons are not responding.	<ul style="list-style-type: none"> ◦ Low battery power. ◦ Button stuck or dirty. 	<ul style="list-style-type: none"> ◦ Replace batteries. ◦ Gently press and release the button multiple times. Clean around the button if visible dirt is present.
Remote works intermittently.	<ul style="list-style-type: none"> ◦ Weak batteries. ◦ Interference from other electronic devices. 	<ul style="list-style-type: none"> ◦ Replace batteries. ◦ Ensure no other devices are causing IR interference.

6. SPECIFICATIONS

Model Number: RM-ADP035

Brand: VINABTY

Compatible Devices: Sony Blu-ray Disc Player Home Theater Systems (BDV-E300, HCD-E300, BDV-Z7, SA-WSZ7, SS-TSZ7, HCD-Z7, BDV-E800W, HCD-E800W, HCD-E801, BDV-E801)

Battery Type: 2 x AA (not included)

Color: Black

Product Dimensions: 9.8 x 2 x 0.7 inches (approximately)

Item Weight: 3.84 ounces (approximately, without batteries)

Special Feature: Ergonomic design

7. WARRANTY AND SUPPORT

For any questions regarding the VINABTY RM-ADP035 remote control, including warranty information or technical support, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty terms and contact details.