

## COSTWAY HW67016FR

# COSTWAY Kids Play Tent Instruction Manual

Model: HW67016FR

Brand: COSTWAY

## 1. INTRODUCTION

Thank you for choosing the COSTWAY Kids Play Tent. This manual provides essential information for the safe assembly, operation, and maintenance of your play tent. Please read these instructions carefully before assembly and retain them for future reference.

This play tent offers a spacious and comfortable environment for children, measuring 120 cm x 105 cm with a height of 140 cm. It features a thick, anti-slip mat for added comfort and safety. Designed with a stable solid wood frame, it provides a secure structure for various activities.

The tent includes two small windows with curtains for ventilation and visibility, and a large mesh door curtain that can be tied back for easy access. Made from non-toxic and odorless Oxford fabric, it ensures a safe play area for your child.

## 2. SAFETY INFORMATION

- Always supervise children while they are playing in the tent.
- Keep the tent away from open flames, heat sources, and electrical heaters.
- Ensure all components are securely assembled before allowing children to use the tent.
- Do not hang heavy objects on the tent frame.
- Regularly inspect the tent for any damage or loose parts. Discontinue use if any damage is found.
- This product is intended for children aged 12 months to 3 years.

## 3. PACKAGE CONTENTS

Please verify that all parts are present before beginning assembly:

- 1x Tent Cover (Oxford fabric)
- 1x Anti-slip Mat
- Wooden Poles (various lengths)
- Connecting Tube Sleeves

- Angled Tube Sleeves
- Triangular Tube Sleeves
- 1x Assembly Instruction Manual

## 4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your play tent. Refer to the images for visual guidance on component identification and connection points.

1. **Step 1: Prepare Longer Tubes.** Use a connecting tube sleeve to join one 45 cm tube with one 55 cm tube. Repeat this to create two longer tubes in total.
2. **Step 2: Prepare Additional Longer Tubes.** Use a connecting tube sleeve to join one 45 cm tube with one 70 cm tube. Repeat this process to create five longer tubes in total.
3. **Step 3: Connect Base Tubes.** Install and connect the tubes created in Step 1 and Step 2 using an angled tube sleeve. This forms the initial corners of the tent base.
4. **Step 4: Complete Lower Structure.** After connecting all angled tube sleeves, the lower part of the tent frame will be fully assembled.



Image: Illustrates the firm joints and solid wood frame components used in assembly.

5. **Step 5: Insert Vertical Poles.** Insert four 80 cm tubes into the angled tube sleeves at each corner of the base structure. These will form the vertical supports.
6. **Step 6: Attach Triangular Sleeves.** Insert the large triangular tube sleeves onto the top of the four vertical tubes. Then, connect the tubes prepared in Step 2 to these large triangular tube sleeves.
7. **Step 7: Assemble Roof Ridge.** Insert a 70 cm tube into a large triangular tube sleeve, following the arrow direction. Connect two 70 cm tubes together using an angled tube sleeve to form the roof ridge.
8. **Step 8: Complete Frame Structure.** Insert the remaining tubes (from Step 2) into the angled tube sleeves, following the arrow directions. At this point, the complete house frame structure should be finished.



Image: The fully assembled play tent frame, ready for the fabric cover.

9. **Step 9: Install Tent Cover.** Once the frame is assembled, carefully place the tent cover over the structure. Begin by installing the lower tent cover, then proceed with the main body of the house cover.



Image: Shows the tent cover with breathable windows and the mesh door curtain.

## 5. OPERATING INSTRUCTIONS

The COSTWAY Kids Play Tent is designed for versatile use, both indoors and outdoors. It provides a personal space for children to engage in various activities.

- **Indoor Use:** Set up the tent in a playroom, bedroom, or living area. Ensure sufficient space around the tent for safe play.
- **Outdoor Use:** The tent can be used in a garden or park. Place it on a flat, stable surface. Avoid prolonged exposure to direct sunlight or heavy rain to preserve the fabric.
- **Ventilation:** Utilize the two small windows and the main door opening to ensure good air circulation within the tent. The mesh door curtain can be tied back for an open entrance.
- **Activities:** The spacious interior is suitable for reading, playing with toys, napping, or imaginative role-playing games. The included thick mat enhances comfort for these activities.



Image: Examples of children using the play tent for reading, playing, and napping.

## 6. MAINTENANCE

- **Cleaning the Fabric:** The Oxford fabric tent cover can be spot cleaned with a damp cloth and mild soap. Do not machine wash or tumble dry. Allow to air dry completely.
- **Cleaning the Mat:** The thick mat is washable. Refer to its specific care label for washing instructions.
- **Frame Care:** Wipe the wooden poles with a dry or slightly damp cloth. Avoid using harsh chemicals.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight.

## Matériaux de Qualité Supérieure pour un Confort Optimal



Oxford durable et doux pour la peau



Respirant et sûr



Facile à assembler



Tapis épais et lavable

Image: Highlights the quality fabric and the washable mat, indicating ease of maintenance.

## 7. TROUBLESHOOTING

- Tent is unstable:** Ensure all connecting tube sleeves are fully inserted and secured. Check that the wooden poles are correctly positioned in the sleeves.
- Difficulty fitting the tent cover:** Double-check that the frame is assembled according to the instructions and that the cover is oriented correctly before attempting to pull it over the frame.
- Missing parts:** If any parts are missing upon opening the package, please contact customer support immediately.

## 8. SPECIFICATIONS

Product Dimensions (L x W x H)	120 x 105 x 140 cm
Weight	4.5 kg
Recommended Age	12 months - 3 years

<b>Main Material</b>	Cotton (Mat), Oxford Fabric (Tent Cover), Wood (Frame)
<b>Color</b>	Beige
<b>Model Number</b>	HW67016FR
<b>Assembly Required</b>	Yes



Image: Visual representation of the tent's dimensions (120cm x 105cm x 140cm).

## 9. WARRANTY AND SUPPORT

COSTWAY products are designed for quality and durability. For warranty information, product support, or to inquire about replacement parts, please refer to the contact information provided with your purchase or visit the official COSTWAY website.

Please retain your proof of purchase for any warranty claims.

