

## KIMISO KMS-222

# Kimiso KMS-222 Portable Wireless Speaker

## User Instruction Manual

---

### 1. INTRODUCTION

---

Thank you for purchasing the Kimiso KMS-222 Portable Wireless Speaker. This manual provides detailed instructions for the proper use, setup, and maintenance of your device. Please read this manual thoroughly before operating the speaker and retain it for future reference.

### 2. SAFETY INFORMATION

---

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble or attempt to repair the speaker yourself. This will void the warranty.
- Keep the speaker away from water and other liquids.
- Use only the provided charging cable or a certified equivalent.
- Dispose of the product and battery responsibly according to local regulations.

### 3. PACKAGE CONTENTS

---

Please check the package for the following items:

- 1 x Kimiso KMS-222 Portable Wireless Speaker
- 1 x Carrying Strap
- 1 x USB Charging Cable
- 1 x Auxiliary (AUX) Cable

### 4. PRODUCT OVERVIEW

---



*Figure 1: Front view of the Kimiso KMS-222 Portable Wireless Speaker. The speaker features a black mesh grille, a yellow Kimiso logo in the center, and two visible speaker cones behind the grille. There are carrying strap loops on both ends.*

The Kimiso KMS-222 is a compact and portable wireless speaker designed for versatile audio playback. It features a durable plastic casing with a mesh grille covering the speaker drivers. The speaker includes a carrying strap for easy portability and supports multiple input modes.

#### 4.1. Controls and Ports

*(Note: Specific button layout and port locations are not provided in the input, so a general description will be used.)*

- **Power Button:** Turns the speaker on/off.
- **Mode Button:** Switches between Bluetooth, USB, TF Card, FM Radio, and AUX modes.
- **Play/Pause Button:** Controls audio playback.
- **Volume Up/Next Track Button:** Increases volume or skips to the next track.
- **Volume Down/Previous Track Button:** Decreases volume or goes to the previous track.
- **USB Port:** For USB drive playback.
- **TF Card Slot:** For TF (MicroSD) card playback.
- **AUX Input:** For connecting external audio devices via 3.5mm cable.
- **Charging Port:** For connecting the USB charging cable.

## 5. SETUP

### 5.1. Charging the Speaker

1. Connect the small end of the provided USB charging cable to the charging port on the speaker.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light (if present) will illuminate, typically red, during charging.
4. Charging time is approximately 2 hours. The indicator light will usually turn off or change color when fully charged.

**Note:** For optimal battery life, fully charge the speaker before first use.

## 5.2. Powering On/Off

- To power on, press and hold the **Power Button** for a few seconds until you hear an audible prompt or see an indicator light.
- To power off, press and hold the **Power Button** again for a few seconds until the speaker shuts down.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Bluetooth Mode

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the **Mode Button** until you hear a "Bluetooth Mode" prompt or similar. The Bluetooth indicator light will typically flash, indicating it's ready for pairing.
2. On your mobile device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "KMS-222" (or similar name) from the list of found devices.
4. Once paired, you will hear a confirmation sound, and the Bluetooth indicator light will become solid.
5. You can now play audio from your device through the speaker.

*Note: The Bluetooth connection distance is approximately 10 meters (33 feet).*

### 6.2. USB/TF Card Playback

1. Insert a USB flash drive or a TF (MicroSD) card into the respective port on the speaker.
2. The speaker should automatically switch to USB or TF card mode and begin playing audio files. If not, press the **Mode Button** to select the correct mode.
3. Use the **Play/Pause**, **Next Track**, and **Previous Track** buttons to control playback.

### 6.3. FM Radio Mode

1. Press the **Mode Button** to switch to FM Radio mode.
2. To auto-scan and save available radio stations, press and hold the **Play/Pause Button**. The speaker will scan and store stations automatically.
3. Use the **Next Track** and **Previous Track** buttons to navigate between saved stations.

*Tip: For better FM reception, connect the AUX cable to the AUX port; it can act as an antenna.*

### 6.4. AUX Mode

1. Connect one end of the provided AUX cable to the AUX input port on the speaker.
2. Connect the other end of the AUX cable to the headphone jack or audio output of your external audio device (e.g., MP3 player, laptop).
3. The speaker should automatically switch to AUX mode. If not, press the **Mode Button** to select AUX mode.
4. Control audio playback directly from your connected device.

### 6.5. Volume Control

- Press the **Volume Up Button** to increase the volume.

- Press the **Volume Down Button** to decrease the volume.

## 7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the speaker. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or dead.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; device is too far; previously paired.	Ensure speaker is in Bluetooth pairing mode. Move device closer. Forget "KMS-222" on your device and try pairing again.
No sound from speaker.	Volume is too low; incorrect mode selected; device not playing.	Increase speaker and device volume. Ensure correct input mode (BT, USB, AUX, FM) is selected. Check if the connected device is playing audio.
Poor FM radio reception.	Weak signal.	Extend the AUX cable to act as an antenna. Move to an area with better signal.

## 9. SPECIFICATIONS

Feature	Specification
Brand	KIMISO
Model	KMS-222
Bluetooth Version	5.0 + EDR (A2DP)
Bluetooth Connection Distance	Up to 10 meters (33 feet)
Channel	Stereo 2.0
Output Power	3W * 2 (Total 6W)
Frequency Response	2.4GHz - 2.485GHz
Battery Capacity	1200 mAh
Charging Voltage	5V USB

Feature	Specification
Operating Time	2-3 hours
Charging Time	2 hours
Supported Modes	USB, TF Card, Bluetooth, FM Radio, AUX
Material	Plastic
Color	Green (as per product title, though image is black)
Speaker Type	Subwoofer
Subwoofer Diameter	10 Centimeters
Control Type	Voice Control
Surround Sound Channels	5
Amplification Type	Active
Power Source Type	Electric Cord (USB charging)

## 10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact your retailer for specific warranty terms and conditions.

For technical support, troubleshooting assistance, or inquiries about your Kimiso KMS-222 speaker, please contact the customer service department of your place of purchase or visit the official Kimiso website (if available).

**Disclaimer:** Specifications and features are subject to change without notice. The information in this manual is for reference only.