

KIMISO KMS-1181

KIMISO KMS-1181 Portable Wireless Bluetooth Speaker User Manual

Model: KMS-1181

1. INTRODUCTION

Thank you for purchasing the KIMISO KMS-1181 Portable Wireless Bluetooth Speaker. This manual provides detailed instructions on how to set up, operate, and maintain your speaker to ensure optimal performance and longevity. Please read this manual carefully before using the product and keep it for future reference.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water or other liquids to prevent electric shock or damage.
- Use only the specified charging cable and power source.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.

3. PACKAGE CONTENTS

Please check the package contents upon opening. If any items are missing or damaged, contact your retailer.

- KIMISO KMS-1181 Portable Wireless Bluetooth Speaker
- USB Charging Cable
- User Manual

4. PRODUCT OVERVIEW



Figure 4.1: Front view of the KMS-1181 speaker with a smartphone docked. The speaker features a prominent grille with an illuminated LED light, indicating power and operational status.

MULTIPLE CONNECTION MODES



Figure 4.2: Side panel illustrating the multiple connection modes available on the KMS-1181 speaker. These include a TF (MicroSD) card slot, a USB port for U-disk playback, and a DC 5V input for charging. An ON/OFF switch is also visible.



Figure 4.3: Front view of the KMS-1181 speaker with a smartphone docked, showcasing the speaker's ability to display different LED light colors, in this case, red. This indicates the speaker's dynamic lighting feature.

Controls and Ports:

- **Power ON/OFF Switch:** Located on the side panel.
- **TF Card Slot:** For playing music directly from a MicroSD card.
- **USB Port:** For playing music directly from a USB flash drive (U Disk).
- **DC 5V Charging Port:** For connecting the USB charging cable.
- **Control Buttons:** (Specific buttons like Play/Pause, Volume Up/Down, Mode, Next/Previous Track are typically on the top or front, though not explicitly shown in provided images, they are standard for such devices.)

5. SETUP

5.1 Charging the Speaker

1. Connect the small end of the USB charging cable to the DC 5V charging port on the speaker.
2. Connect the larger end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light (if present) will illuminate during charging and turn off or change color when fully charged.
4. A full charge typically takes 2-3 hours.

5.2 Powering On/Off

- To power on, slide the ON/OFF switch to the 'ON' position. You will hear an audible prompt.
- To power off, slide the ON/OFF switch to the 'OFF' position.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Mode

1. Ensure the speaker is powered on. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light and an audible prompt.
2. On your smartphone or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select "KMS-1181" from the list of devices.
4. Once paired, the speaker will provide an audible confirmation, and the LED light will stop flashing.
5. You can now play audio from your device through the speaker.

6.2 USB/TF Card Mode

1. Insert a USB flash drive into the USB port or a TF (MicroSD) card into the TF card slot.
2. The speaker will automatically detect the storage device and switch to USB or TF card mode, beginning playback of compatible audio files.
3. Use the speaker's control buttons to navigate tracks (Next/Previous) and control playback (Play/Pause).

6.3 AUX Mode

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker (if available, not explicitly shown but common for 'Auxiliary' connectivity).
2. Connect the other end to the audio output jack of your external device (e.g., MP3 player, computer).
3. The speaker should automatically switch to AUX mode. If not, press the 'Mode' button (if available) to cycle through modes until AUX is selected.

6.4 Volume Control

- Volume can be adjusted directly on your connected device or using the volume control buttons on the speaker (if available).

7. MAINTENANCE

- **Cleaning:** Wipe the speaker's surface with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct

sunlight and extreme temperatures.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is low or dead.	Charge the speaker fully.
No sound from speaker.	Volume is too low; Device not connected; Incorrect mode.	Increase volume on speaker and device; Re-pair Bluetooth or check cable connection; Ensure correct mode (Bluetooth, USB, TF, AUX) is selected.
Bluetooth pairing fails.	Speaker is not in pairing mode; Device is too far; Interference.	Ensure speaker is in pairing mode (flashing LED); Move device closer to speaker; Turn off other Bluetooth devices nearby.
USB/TF card not playing.	Unsupported file format; Card/drive not inserted correctly; Corrupted files.	Ensure audio files are in a supported format (e.g., MP3); Reinsert the card/drive; Try a different card/drive.

9. SPECIFICATIONS

Feature	Specification
Model	KMS-1181
Brand	KIMISO
Connectivity Technology	Bluetooth, Auxiliary, USB
Compatible Devices	Personal Computer, Smartphone
Speaker Type	Woofers
Wattage	5 watts
Power Source Type	Electric Wire (for charging)
Material	Plastic
Color	Black
Mounting Type	Tabletop Stand
Special Features	USB Port, TF Card Slot, LED Lighting

10. WARRANTY AND SUPPORT

KIMISO products are designed and manufactured to the highest quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or service requests, please contact your local retailer or visit the official KIMISO website for contact information.

Note: The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.