



[Manuals.plus](#) /

> [GLARRY](#) /

> GLARRY 61-Key Portable Electronic Piano Keyboard Instruction Manual GLK447

GLARRY GLK447

GLARRY 61-Key Portable Electronic Piano Keyboard

MODEL: GLK447

Introduction

Thank you for choosing the GLARRY 61-Key Portable Electronic Piano Keyboard. This manual provides essential information for setting up, operating, and maintaining your new instrument. Please read it thoroughly to ensure proper use and to maximize your musical experience.



Figure 1: GLARRY 61-Key Portable Electronic Piano Keyboard with accessories.

1. Setup

1.1 Package Contents

Verify that all items are present in the package:

- GLARRY 61-Key Electronic Piano Keyboard
- Power Adapter (DC 12V)
- Headphones
- Microphone
- Music Stand
- Instruction Manual

1.2 Powering the Keyboard

The keyboard can be powered using the included power adapter or batteries.

- **Using Power Adapter:** Connect the DC 12V power adapter to the DC IN port on the back of the keyboard and plug it into a standard electrical outlet.
- **Using Batteries:** (Batteries not included) Locate the battery compartment on the underside of the keyboard. Insert the required number of AA batteries, ensuring correct polarity.

POWER ADAPTOR OR BATTERIES



Figure 2: Power options for the keyboard.

1.3 Connecting Accessories

Connect the headphones and microphone to their respective 3.5mm jacks on the keyboard. The music stand can be attached to the designated slots on the top panel.

HEADPHONES AND MICROPHONE INCLUDED

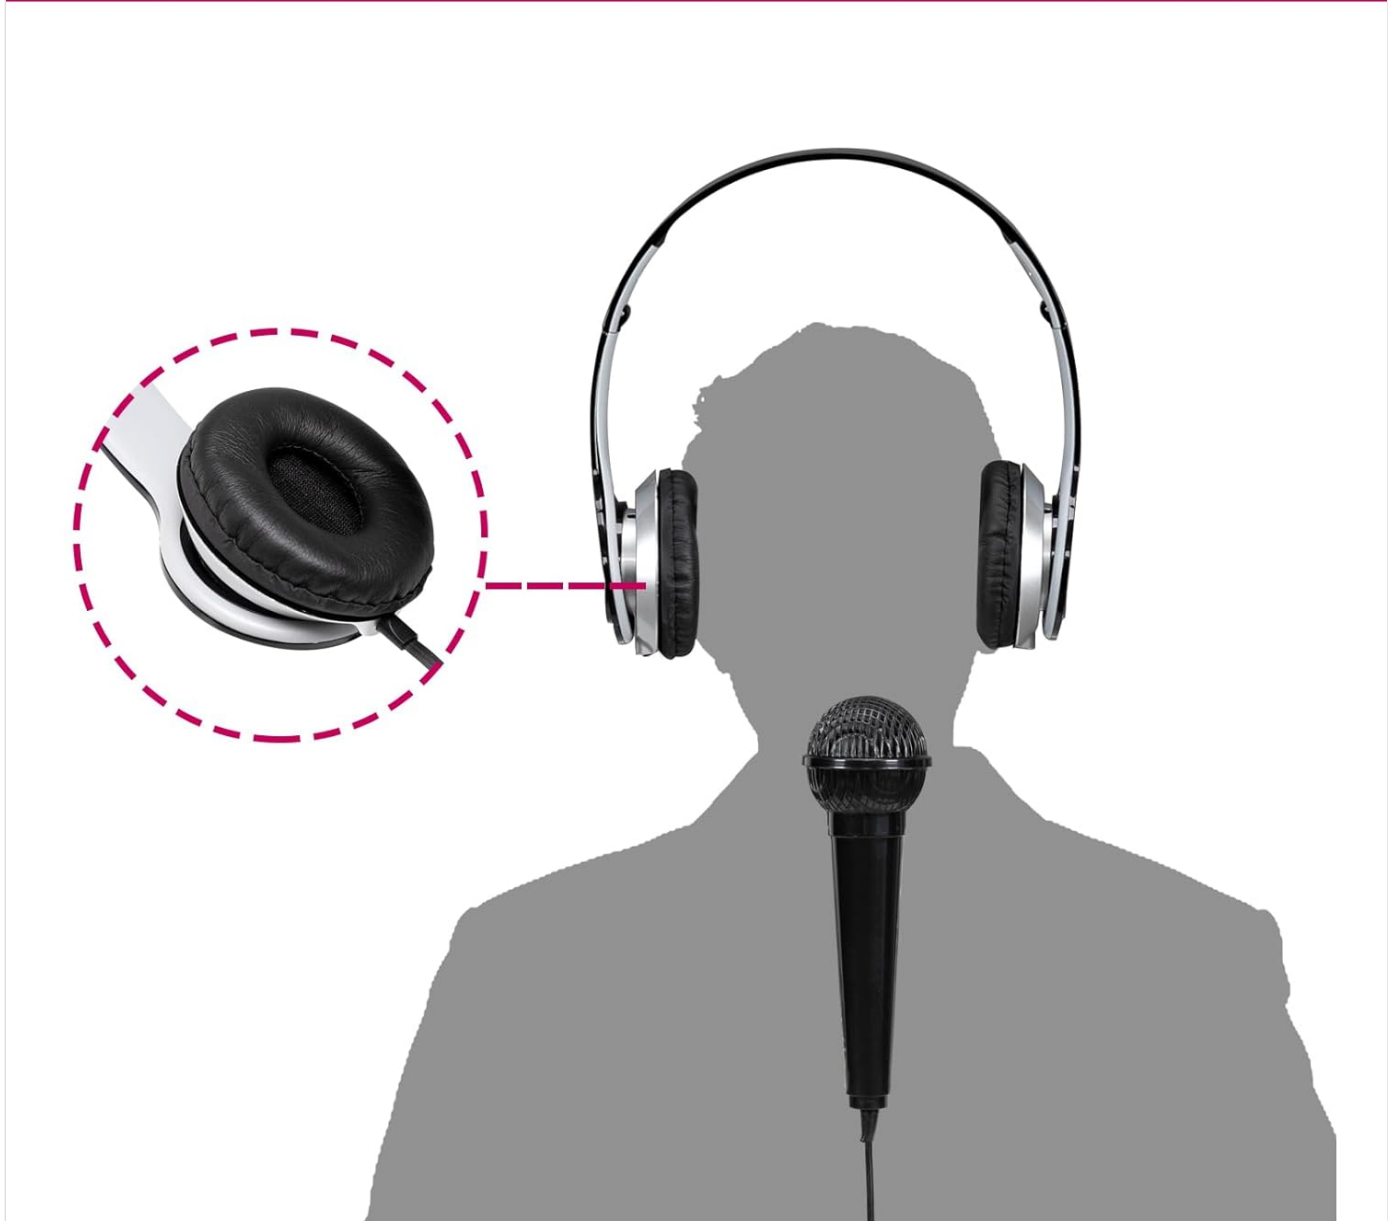


Figure 3: Headphones and microphone accessories.

2. Operating Instructions

2.1 Basic Controls and LCD Display

The keyboard features an LCD display that shows the status of various functions. Use the dedicated buttons to adjust volume, tempo, and other settings.




510 Tones / 300 Rhythms



LCD Display Screen



30 Demos

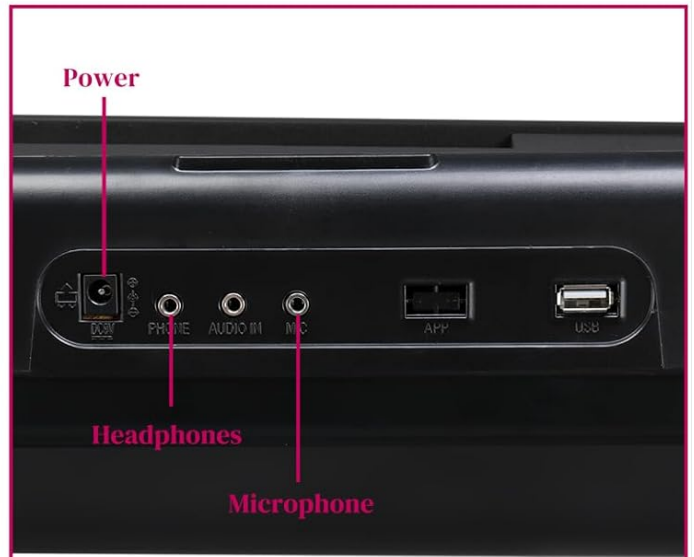

Application Socket

Figure 4: Keyboard control panel and connectivity options.

2.2 Tone and Rhythm Selection

The keyboard offers 510 timbres (tones) and 300 rhythms. Use the number selection buttons to choose your desired tone or rhythm. The LCD display will show your current selection.

2.3 Lighted Keys Function

For beginners, the 61 lighted keys provide visual guidance. Keys will light up to indicate which notes to play. This feature can be toggled ON/OFF using the dedicated button.

LIGHTED KEY FOR TEACHING

When you don't need to light the keyboard, you can turn it off at any time with one key.



Figure 5: Lighted keys feature and LED ON/OFF button.

2.4 Teaching Modes

Three teaching modes are available to assist learners:

- **Single Key Mode:** Focuses on individual notes.
- **Advanced Mode:** Guides through more complex melodies.
- **Master Mode:** For practicing full pieces.

These modes are designed to help users quickly familiarize themselves with the keyboard and learn songs.

2.5 Recording and Playback

The keyboard includes sound recording and playback functions, allowing you to record your performances and listen back to them.

2.6 Metronome and Other Functions

Utilize the metronome function for timing practice. Additional features include sound volume adjustment, multi-tone

selection, split/touch control, sustain, and vibrato.



Figure 6: Overview of keyboard functions.

3. Maintenance

To ensure the longevity and optimal performance of your keyboard, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. Avoid abrasive cleaners or solvents.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the keyboard or subjecting it to strong impacts. Do not place heavy objects on top of it.
- **Power:** Disconnect the power adapter when the keyboard is not in use for extended periods. Remove batteries if storing for a long time to prevent leakage.

4. Troubleshooting

If you encounter any issues with your keyboard, refer to the following common troubleshooting steps:

- **No Power:** Ensure the power adapter is securely connected to both the keyboard and a working electrical outlet. If using batteries, check that they are inserted correctly and are not depleted.
- **No Sound:** Check the master volume level. Ensure headphones are not plugged in if you intend to use the built-in speakers. Verify that the selected tone is active.
- **Keys Not Responding:** Ensure the keyboard is powered on. If specific keys are not responding, check for any obstructions or debris.
- **Distorted Sound:** Reduce the volume level. Ensure all connections (microphone, headphones) are secure.

If the issue persists after attempting these steps, please contact customer support.

5. Specifications

Feature	Specification
Brand	GLARRY
Model Number	GLK447
Number of Keys	61
Tones (Timbres)	510
Rhythms	300
Demo Songs	30
Teaching Modes	3 (Single Key, Advanced, Master)
Display	LCD Screen
Connectivity	3.5mm Jack (Headphones, Microphone, Auxiliary)
Power Source	Electric (DC 12V Adapter)
Item Weight	4.11 Kilograms (9.03 pounds)
Package Dimensions	37.6 x 14 x 5.25 inches
Color	Black

DIMENSION



Figure 7: Keyboard dimensions.

6. Warranty and Support

Specific warranty details and direct support contact information are not available in the provided product data. Please refer to the product packaging or the retailer's website for warranty claims and customer service inquiries.