

[Manuals.plus](#) /

› [SEB](#) /

› SEB Food Processor Drive Shaft MS-5A07205 User Manual

SEB MS-5A07205

SEB Food Processor Drive Shaft MS-5A07205 User Manual

Model: MS-5A07205 (Part No. 304633-8809)

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your SEB Food Processor Drive Shaft, model MS-5A07205. This component is a crucial replacement part designed to ensure the continued functionality of compatible SEB food processor models. Please read this manual thoroughly before attempting any installation or repair.

2. PRODUCT OVERVIEW

The drive shaft is an internal component responsible for transmitting rotational power from the food processor's motor to its various attachments, such as blades, whisks, or shredding discs. It is typically located within the central column of the food processor's bowl.



Figure 1: SEB Food Processor Drive Shaft MS-5A07205. This image shows the white plastic cylindrical component with a small metal shaft protruding from one end and a wider, hollow base designed to connect to the food processor's motor mechanism at the other.

Key Features:

- Durable plastic construction for longevity.
- Precision-engineered for seamless fit and power transmission.
- Essential for the operation of various food processor attachments.

3. SETUP AND INSTALLATION

Safety First: Always unplug your food processor from the power outlet before attempting any installation or removal of parts.

1. **Prepare the Food Processor:** Ensure the food processor is clean and completely unplugged. Remove the processing bowl and any attachments.
2. **Access the Drive Shaft Area:** Depending on your specific food processor model, you may need to remove the central spindle or a cover to access the old drive shaft. Refer to your food processor's original manual for detailed disassembly instructions if necessary.

- 3. **Remove the Old Drive Shaft:** Carefully lift or unscrew the old drive shaft from its position. Note its orientation for correct installation of the new part.
- 4. **Install the New Drive Shaft:** Align the new SEB MS-5A07205 drive shaft with the motor coupling at the base of the food processor. Gently push it down or twist it until it securely locks into place. Ensure it sits flush and does not wobble.
- 5. **Reassemble:** Reattach any covers or components you removed. Place the processing bowl back onto the base.
- 6. **Test:** Plug in the food processor and perform a quick test run without any ingredients to ensure the drive shaft rotates smoothly and quietly.

If you are unsure about any step, it is recommended to consult a qualified technician or refer to your food processor's specific service manual.

4. OPERATING CONSIDERATIONS

The drive shaft operates automatically as part of the food processor's motor system. Proper operation relies on correct installation and compatible attachments.

- **Attachment Compatibility:** Ensure that all attachments (blades, discs, etc.) are correctly seated onto the drive shaft before operating the food processor. Improper seating can cause damage to the shaft or attachments.
- **Overloading:** Avoid overloading the food processor, as excessive strain can put undue stress on the drive shaft and motor.
- **Foreign Objects:** Never allow foreign objects to fall into the food processor bowl during operation, as they can jam or damage the drive shaft.

5. MAINTENANCE AND CARE

Regular cleaning and inspection will prolong the life of your drive shaft and food processor.

- **Cleaning:** After each use, remove the drive shaft (if easily detachable) and clean it with warm, soapy water. Rinse thoroughly and dry completely before reassembly or storage. Do not use abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically inspect the drive shaft for any signs of wear, cracks, or damage. Check the metal tip for bending or corrosion and the plastic base for stripped grooves.
- **Storage:** Store the food processor and its components in a clean, dry place when not in use.

6. TROUBLESHOOTING

If you encounter issues with your food processor after installing the new drive shaft, consider the following:

Problem	Possible Cause	Solution
Drive shaft does not rotate.	• Incorrect installation. • Motor coupling issue. • Food processor not powered.	• Ensure shaft is fully seated. • Check food processor's power supply. • Consult food processor manual for motor issues.
Unusual noise during operation.	• Shaft not properly seated. • Damaged attachment. • Internal food processor issue.	• Re-seat the drive shaft. • Inspect attachments for damage. • Discontinue use and seek professional repair if noise persists.

Problem	Possible Cause	Solution
Attachments do not fit or spin.	• Incorrect drive shaft model. • Damaged attachment connection.	• Verify drive shaft model (MS-5A07205) is compatible with your food processor. • Inspect attachment for damage.

For issues not listed here, or if troubleshooting steps do not resolve the problem, please contact SEB customer support or a certified repair technician.

7. SPECIFICATIONS

- **Brand:** SEB
- **Model Number:** MS-5A07205
- **Part Number:** 304633-8809
- **Type:** Food Processor Drive Shaft
- **Material:** Durable Plastic, Metal (tip)
- **Weight:** Approximately 50 g (as per product information)
- **Compatibility:** Designed for specific SEB food processor models (refer to your appliance's compatibility list).

8. WARRANTY AND SUPPORT

For information regarding warranty coverage for this replacement part, please refer to the original purchase documentation or contact the retailer from whom the part was acquired. SEB provides customer support for its products. For technical assistance or inquiries about compatible food processor models, please visit the official SEB website or contact their customer service department.

Important: Always use genuine SEB replacement parts to ensure optimal performance and maintain product warranty.

© 2023 SEB. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08P24413Y>

More documents and user manuals: <https://manuals.plus/>