

## BELLA 17278

# BELLA 2.9 Qt Touchscreen Air Fryer Oven Instruction Manual

Model: 17278

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## GETTING STARTED: SETUP

---

### Unpacking

Carefully remove all packaging materials and labels from the BELLA 2.9 Qt Touchscreen Air Fryer. Ensure all components are present:

- Main Air Fryer Unit
- Removable Nonstick Crisping Tray
- Removable Nonstick Basket

### Before First Use

1. Wash the removable Nonstick Crisping Tray and Basket in warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the interior and exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. Place the air fryer on a stable, heat-resistant surface, ensuring adequate ventilation around the unit.
4. It is recommended to run the air fryer empty for about 10-15 minutes at 400°F (200°C) during its first use to eliminate any manufacturing odors. A slight odor may be present, which is normal.



Image: The BELLA 2.9 Qt Touchscreen Air Fryer in Matte Red, showcasing its compact design and digital display.

## OPERATING INSTRUCTIONS

## Control Panel Overview

The BELLA Air Fryer features an intuitive digital touchscreen for easy operation.

# Air Fry, Grill, Roast, Broil, and Reheat

**5 in 1** MULTI COOKER



Image: Close-up of the BELLA Air Fryer's digital touchscreen, highlighting the 5-in-1 multi-cooker functions: Air Fry, Grill, Roast, Broil, and Reheat.

## Cooking Functions (5-in-1 Multicooker)

- **Air Fry:** For crispy results with little to no oil.
- **Broil:** For browning and crisping the top layer of food.
- **Bake:** Ideal for cakes, pastries, and other baked goods.
- **Roast:** For cooking meats and vegetables to tender perfection.
- **Reheat:** To warm up leftovers quickly and efficiently.

## General Operation Steps

1. Place the Crisping Tray inside the Basket.
2. Place food on the Crisping Tray. Do not overfill the basket to allow for proper air circulation.
3. Slide the Basket back into the main unit until it clicks into place.
4. Plug the appliance into a wall outlet. The digital display will illuminate.
5. Select your desired cooking function (Air Fry, Broil, Bake, Roast, Reheat) using the touchscreen controls.
6. Adjust the temperature (up to 400°F / 200°C) and time using the +/- buttons.
7. Press the Start/Pause button to begin cooking.
8. During cooking, you may pull out the basket to shake or flip food. The unit will pause automatically and resume when the basket is reinserted.
9. The air fryer will beep when the cooking cycle is complete. Carefully remove the basket and transfer food to a serving dish.

## Cooking Tips

- For best results, shake the basket halfway through the cooking time for even browning.
- A small amount of oil (1-2 teaspoons) can be added to fresh ingredients for extra crispiness.
- The 1400-watt heating system and Circular Heat Technology ensure efficient cooking without preheating.
- Refer to a reliable air fryer recipe guide for specific cooking times and temperatures for various foods.

# Preheats 50% Faster

than regular ovens



Image: The BELLA Air Fryer on a kitchen counter with prepared food, demonstrating its rapid heating capability due to Circular Heat Technology.

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your BELLA Air Fryer.

### Daily Cleaning

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. The Nonstick Crisping Tray and Basket are removable and **dishwasher safe** for easy cleanup.
3. For stubborn food residue, soak the basket and tray in warm, soapy water for 10-15 minutes before washing.
4. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads.

# Removable and Dishwasher-safe Crisping Tray and Cooking Pan



Image: A hand demonstrating the removal of the crisping tray from the air fryer basket, highlighting the easy-to-clean, dishwasher-safe components.

## Deep Cleaning

- For the interior of the main unit, gently wipe with a damp cloth and mild detergent if necessary. Ensure no water enters the electrical components.
- Ensure all parts are completely dry before reassembling or storing the appliance.

## Storage

Store the air fryer in a cool, dry place. Ensure the power cord is neatly wrapped and secured.

## TROUBLESHOOTING

If you encounter issues with your BELLA Air Fryer, consult the following common problems and solutions:

| Problem                                | Possible Cause                                                       | Solution                                                                                                              |
|----------------------------------------|----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Air fryer does not turn on.            | Not plugged in; power outlet malfunction; basket not fully inserted. | Ensure the power cord is securely plugged into a working outlet. Push the basket firmly until it clicks into place.   |
| Food is not cooked evenly.             | Basket is overfilled; food not shaken or flipped.                    | Do not overfill the basket. Shake or flip food halfway through cooking for even results.                              |
| Food is not crispy.                    | Insufficient cooking time/temperature; too much moisture in food.    | Increase cooking time or temperature. Pat food dry before air frying. A light coating of oil can help.                |
| White smoke coming from the appliance. | Grease residue from previous use; fatty food being cooked.           | Clean the basket and crisping tray thoroughly after each use. For fatty foods, drain excess fat during cooking.       |
| Appliance smells during first use.     | Normal manufacturing residue burning off.                            | This is normal. Run the air fryer empty for 10-15 minutes at 400°F (200°C) before first use. Ensure good ventilation. |

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

| Feature                    | Detail                                       |
|----------------------------|----------------------------------------------|
| Model Number               | 17278                                        |
| Brand                      | BELLA                                        |
| Capacity                   | 2.9 Quarts (approx. 2.5 lbs food)            |
| Wattage                    | 1400 Watts                                   |
| Control Method             | Touchscreen Digital Control                  |
| Max Temperature            | 400°F (200°C)                                |
| Functions                  | Air Fry, Broil, Bake, Roast, Reheat (5-in-1) |
| Nonstick Coating           | Yes (PFOA-free)                              |
| Dishwasher Safe Parts      | Removable Crisping Tray and Basket           |
| Product Dimensions (DxWxH) | 15.11" x 15.11" x 14.68"                     |
| Item Weight                | 6.94 Pounds                                  |
| UPC                        | 829486172786                                 |



Image: Diagram showing the dimensions of the BELLA 2.9 Qt Air Fryer: 15.11 inches deep, 15.11 inches wide, and 14.68 inches high.

## WARRANTY AND SUPPORT

### Product Warranty

The BELLA 2.9 Qt Touchscreen Air Fryer (Model 17278) comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims.

### Customer Support

For any questions, assistance, or warranty claims, please contact BELLA customer support. Refer to the official BELLA website or your purchase documentation for the most current contact information.

You can also visit the official BELLA Store for more product information [BELLA Store on Amazon](#)

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question