

[Manuals.plus](#) /

› [BELLA](#) /

› BELLA 3 Qt Manual Air Fryer Oven User Manual

BELLA 17272

BELLA 3 Qt Manual Air Fryer Oven User Manual

Model: 17272

1. INTRODUCTION

Welcome to your new BELLA 3 Qt Manual Air Fryer Oven and 5-in-1 Multicooker. This appliance is designed to provide a convenient and healthy way to prepare a variety of meals, offering air frying, broiling, baking, roasting, and reheating functions. Its compact size and simple controls make it an ideal addition to any kitchen.



Image: The BELLA 3 Qt Manual Air Fryer Oven, showcasing its sleek black design and manual controls.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire,

electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

Familiarize yourself with the main components of your BELLA Air Fryer for optimal use.

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Features temperature and timer knobs.
- **Air Fryer Basket:** Removable, nonstick basket for holding food.
- **Crisping Tray:** Sits inside the basket to allow air circulation and crisping.
- **Handle:** For safely pulling out the air fryer basket.

Modern Design



BELLA 3 QT MANUAL AIR FRYER

Image: Front view of the BELLA Air Fryer, showing the main unit and handle.

Air Fry, Broil, Bake, Roast or Reheat

5 in 1 MULTI
COOKER



Image: Close-up of the manual control panel with temperature and timer knobs.

Preheats 50% Faster

than traditional ovens



Image: The removable air fryer basket and crisping tray.

4. SETUP AND FIRST USE

Before using your air fryer for the first time, follow these steps:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the air fryer basket and crisping tray with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances, ensuring adequate air circulation.
5. Plug the power cord into a grounded wall outlet.
6. It is recommended to run the air fryer empty for about 10 minutes at 400°F (200°C) during the first use to burn off any manufacturing residues. A slight odor may be present, which is normal.

5. OPERATING INSTRUCTIONS

Basic Operation

The BELLA Air Fryer features simple knob controls for temperature and time.

1. Place the crisping tray inside the air fryer basket.
2. Place your food into the air fryer basket. Do not overfill the basket to ensure even cooking.
3. Slide the basket back into the main unit until it clicks into place.
4. Turn the temperature knob to your desired cooking temperature (up to 400°F / 200°C).
5. Turn the timer knob to your desired cooking time (up to 60 minutes). The appliance will automatically turn off when the timer reaches zero.
6. During cooking, you may pull out the basket to shake or flip food for even results. The air fryer will pause and resume cooking once the basket is reinserted.
7. Once cooking is complete, carefully remove the basket and transfer food to a serving dish.

Video: An official product video demonstrating the BELLA 3 Qt Manual Air Fryer with Circular Heat Technology in operation, highlighting its ease of use and cooking capabilities.

Cooking Functions (5-in-1 Multicooker)

Your BELLA Air Fryer is a versatile 5-in-1 multicooker:

- **Air Fry:** Ideal for crispy foods like fries, chicken wings, and spring rolls, using significantly less oil.
- **Broil:** Achieve a browned, crispy finish on foods.
- **Bake:** Perfect for small cakes, muffins, or other baked goods.
- **Roast:** Cook meats and vegetables to tender perfection with a crispy exterior.
- **Reheat:** Quickly warm up leftovers, restoring their original texture.



Image: Example of crispy food, such as french fries, cooked in the air fryer basket.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and optimal performance of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

- **Air Fryer Basket and Crisping Tray:** These parts are PFOA-free nonstick and dishwasher safe. For stubborn food residue, soak them in warm, soapy water before cleaning.
- **Interior:** Wipe the interior of the appliance with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
- **Exterior:** Clean the exterior with a damp cloth.
- **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.

Detachable

Dishwasher-safe Basket



Image: A hand demonstrating the removal of the detachable air fryer basket and crisping tray for easy cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your BELLA Air Fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; Timer not set; Basket not fully inserted.	Ensure plug is securely in outlet; Set the timer; Push basket firmly into place.
Food is not cooked evenly.	Basket is overfilled; Food not shaken/flipped.	Cook in smaller batches; Shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; Fatty food being cooked.	Clean the basket and crisping tray thoroughly; Remove excess oil from food before air frying.

Problem	Possible Cause	Solution
Food is not crispy.	Too much moisture in food; Not enough oil (for some foods); Temperature too low.	Pat food dry before cooking; Lightly coat food with oil; Increase temperature or cooking time.

8. SPECIFICATIONS

Key technical specifications for the BELLA 3 Qt Manual Air Fryer Oven.

Feature	Detail
Model Name	BELLA 3.0 QT Manual Air Fryer
Capacity	3 Quarts (approx. 2.5 lbs food)
Wattage	1400 Watts
Control Method	Knob, Manual
Max Temperature Setting	400 Degrees Fahrenheit
Product Dimensions	15.11"D x 15.11"W x 14.68"H
Item Weight	6.9 Pounds
Material	Plastic (Polypropylene outer)
Nonstick Coating	Yes (PFOA-free)
Dishwasher Safe Parts	Basket and Crisping Tray
Air Frying Technology	Circular Heat Technology
UPC	829486172724



Image: Diagram showing the dimensions of the BELLA 3 Qt Manual Air Fryer.

9. WARRANTY AND SUPPORT

BELLA products are manufactured to the highest quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official BELLA website. In case of any issues or for technical support, please contact BELLA customer service.

A detailed User Manual in PDF format is also available for download:[Download User Manual \(PDF\)](#)

© 2025 BELLA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question