

BELLA 17277

BELLA 3 Qt Touchscreen Air Fryer Oven User Manual

Model: 17277

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level surface during operation.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the

outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PARTS AND FEATURES

Familiarize yourself with the components of your BELLA Air Fryer.



Image: The BELLA 3 Qt Touchscreen Air Fryer Oven in Matte Blue, showcasing its compact design and front

handle.

- **Digital Touchscreen Display:** For easy control of temperature and time settings.
- **Air Fryer Basket:** Removable, nonstick, and dishwasher safe for easy cleaning.
- **Crisping Tray:** Removable, nonstick, and dishwasher safe, designed to allow air circulation for even cooking.
- **Main Unit Housing:** Contains the heating element and fan.
- **Handle:** For safely pulling out the air fryer basket.

Removable and Dishwasher-safe Crisping Tray and Cooking Pan



Image: A hand demonstrating the removal of the crisping tray from the air fryer basket, highlighting the removable and dishwasher-safe components.

BEFORE FIRST USE

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wipe the exterior of the appliance with a clean, damp cloth.
3. Wash the air fryer basket and crisping tray in warm, soapy water. Rinse thoroughly and dry completely. These parts are also dishwasher safe.

4. Ensure all parts are dry before assembly and use.
5. It is recommended to run the air fryer empty for about 10-15 minutes on its highest temperature setting (400°F) during the first use to eliminate any manufacturing odors. A slight odor or smoke may be present, which is normal and will dissipate.

SETUP

1. Place the air fryer on a stable, level, heat-resistant surface. Ensure there is adequate space (at least 6 inches) around the appliance for proper air circulation.
2. Insert the crisping tray into the air fryer basket.
3. Slide the assembled air fryer basket into the main unit until it clicks securely into place.
4. Plug the power cord into a standard 120V AC electrical outlet. The digital display will illuminate.

OPERATING INSTRUCTIONS

General Operation

1. Prepare your food item(s) as desired.
2. Place the food into the air fryer basket, ensuring not to overfill. For optimal results, food should be in a single layer or spread out to allow air circulation.
3. Slide the basket back into the air fryer.
4. Press the Power button on the touchscreen to turn on the appliance.
5. Select your desired cooking function (Air Fry, Broil, Bake, Roast, Reheat) or manually adjust the temperature and time.
6. Adjust the temperature (up to 400°F) and time using the touchscreen controls.
7. Press the Start button to begin cooking. The appliance will automatically preheat if necessary (though often not required for this model due to Circular Heat Technology).
8. During cooking, for even crisping, it is recommended to shake the basket halfway through the cooking cycle. The air fryer will pause when the basket is removed and resume when reinserted.
9. Once the cooking cycle is complete, the air fryer will beep and automatically shut off.
10. Carefully remove the basket using the handle. Use tongs to remove food from the basket.

Air Fry, Grill, Roast, Broil, and Reheat

5 in 1 MULTI COOKER



Image: A close-up view of the BELLA Air Fryer's digital touchscreen, indicating its 5-in-1 multicooker capabilities for Air Fry, Grill, Roast, Broil, and Reheat.

Cooking Functions (5-in-1 Multicooker)

This appliance offers versatile cooking options:

- **Air Fry:** For crispy results with little to no oil. Ideal for fries, chicken wings, and frozen snacks.
- **Broil:** For browning and crisping the top layer of food.
- **Bake:** Suitable for small cakes, muffins, or other baked goods.
- **Roast:** For cooking meats and vegetables to tender perfection.
- **Reheat:** To warm up leftovers while maintaining texture.

Temperature and Time Adjustment

Use the dedicated temperature and time buttons on the touchscreen to increase or decrease settings. The maximum temperature is 400°F.

Shaking Food

For many recipes, especially those with smaller food items like fries or nuggets, shaking the basket halfway through the cooking time helps ensure even browning and crisping. The air fryer will automatically pause when

the basket is pulled out and resume cooking once it is reinserted.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your air fryer.

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. The air fryer basket and crisping tray are nonstick and dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge.
3. Do not use metal scouring pads or harsh abrasive cleaners on the nonstick surfaces.
4. Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. Clean the interior of the appliance with a damp cloth and mild detergent if necessary. Ensure no water enters the heating element area.
6. For stubborn food residue, soak the basket and tray in warm, soapy water for about 10 minutes before cleaning.
7. Ensure all parts are thoroughly dry before storing or next use.

TROUBLESHOOTING

Refer to this table for common issues and their solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not functioning.	Ensure the power cord is securely plugged into a working electrical outlet. Try plugging another appliance into the same outlet to verify it is working.
Food is not cooked evenly.	Basket is overcrowded. Food was not shaken or flipped.	Cook food in smaller batches. Shake or flip food halfway through the cooking process.
Food is not crispy.	Too much moisture in food. Not enough oil (for certain foods). Temperature too low or cooking time too short.	Pat food dry before air frying. Lightly spray or brush food with oil. Increase temperature or cooking time.
White smoke coming from the appliance.	Grease residue from previous use. Cooking fatty foods.	Clean the basket and crisping tray thoroughly after each use. For fatty foods, add a small amount of water to the bottom of the outer pan to prevent smoke.
Appliance smells like plastic during first use.	Normal for new appliances.	This will dissipate after a few uses. Run the air fryer empty for 10-15 minutes at 400°F before first use.

SPECIFICATIONS

Feature	Detail
Model Number	17277
Capacity	2.9 Quarts (approx. 3 Qt)
Wattage	1400 Watts
Max Temperature	400°F (200°C)
Control Method	Touchscreen Digital Control
Functions	Air Fry, Broil, Bake, Roast, Reheat (5-in-1 Multicooker)
Dimensions (DxWxH)	15.11"D x 15.11"W x 14.68"H
Material	Aluminum, Plastic
Nonstick Coating	Yes (Basket & Crisping Tray)
Dishwasher Safe Parts	Basket, Crisping Tray
Safety Features	60-minute Auto Shutoff, Audible Auto
UPC	829486172779



Image: Diagram illustrating the dimensions of the BELLA Air Fryer: 15.11 inches deep, 15.11 inches wide, and 14.68 inches high.

WARRANTY AND SUPPORT

The BELLA 3 Qt Touchscreen Air Fryer Oven comes with a 2-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical assistance, or product support, please contact BELLA customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.

For additional resources, you may visit the official BELLA store: [BELLA Store on Amazon](#).

