



[Manuals.plus](#) /

› [USARMT](#) /

› ONN Roku TV Remote Instruction Manual

## USARMT RC-AFIR 3226000858

# ONN Roku TV Remote Instruction Manual

Model: RC-AFIR 3226000858

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ONN Genuine Original Roku TV Remote Control, model RC-AFIR 3226000858. This remote is designed specifically for use with compatible ONN Roku TVs, ensuring seamless control and access to your favorite streaming services.

## PRODUCT OVERVIEW

The ONN Roku TV Remote is an infrared remote control featuring an ergonomic design for comfortable handling. It provides direct access to essential TV functions and popular streaming applications.



Front view of the ONN Roku TV Remote, showing all buttons including power, navigation, volume, and quick access app buttons.



Side view of the ONN Roku TV Remote, highlighting its ergonomic shape and side-mounted volume controls.

## SETUP

### Inserting Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open the compartment.
3. Insert two (2) 1.5V AAA Alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

No programming or pairing is required for this remote. Once batteries are inserted, it is ready for use with compatible ONN Roku TVs.

### Basic Functions

- **Power Button** ( ): Turns the TV on or off.
- **Navigation Pad (Purple Cross)**: Use the arrow buttons to navigate menus and content. The **OK** button confirms selections.
- **Volume Up/Down** ( ): Adjusts the TV volume. Located on the side of the remote.
- **Mute Button** ( ): Mutes or unmutes the TV audio. Located on the side of the remote.
- **Home Button** ( ): Returns to the Roku TV home screen.
- **Back Button** (←): Returns to the previous screen or menu.
- **Playback Controls** (◀◀, ▶, ▶▶): Rewind, Play/Pause, and Fast Forward for media playback.
- **Sleep Button** ( ): Sets the TV sleep timer.
- **Star Button** (\*): Accesses options or settings within certain apps or menus.

### Quick Access Application Buttons

The remote includes dedicated buttons for quick access to popular streaming services:

- **Netflix**
- **Disney+**
- **Hulu**
- **Vudu**

### Compatibility Information

This remote control is specifically designed for and compatible with the following ONN Roku TV models:

- 100012584
- 100012585
- 100012586
- 100012587
- 100012589
- 100012590
- 100018971

#### **Important Note:**

This remote is **NOT** compatible with any Roku Stick or Roku Player Box devices. It functions exclusively with the specified ONN Roku TV models.

## Only For ONN Roku TV



## Not For Roku Stick



## Not For Roku Player Box



Visual guide illustrating the remote's compatibility with ONN Roku TVs and its incompatibility with Roku streaming sticks and player boxes.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

## TROUBLESHOOTING

### Common Issues and Solutions

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote not responding	<ul style="list-style-type: none"> <li>• <b>Batteries:</b> Check if batteries are inserted correctly or need replacement.</li> <li>• <b>Line of Sight:</b> Ensure there is a clear line of sight between the remote's IR emitter and the TV's IR receiver. Obstructions can block the signal.</li> <li>• <b>Compatibility:</b> Verify that your TV is one of the compatible ONN Roku TV models listed in this manual.</li> </ul>
Buttons not working	<ul style="list-style-type: none"> <li>• <b>Stuck Buttons:</b> Check for any debris or stickiness preventing buttons from pressing fully.</li> <li>• <b>Battery Level:</b> Low battery power can cause intermittent button functionality. Replace batteries.</li> </ul>
Short operating range	<ul style="list-style-type: none"> <li>• <b>Low Batteries:</b> Weak batteries reduce the remote's signal strength. Replace them.</li> <li>• <b>Interference:</b> Other electronic devices or bright lights can interfere with the infrared signal.</li> </ul>

## SPECIFICATIONS

Feature	Detail
Model Number	RC-AFIR 3226000858
Brand	USARMT
Connectivity Technology	Infrared (IR)
Compatible Devices	ONN Roku Televisions (Specific models: 100012584, 100012585, 100012586, 100012587, 100012589, 100012590, 100018971)
Power Supply	2 x 1.5V AAA Alkaline Batteries
Special Feature	Ergonomic design

## WARRANTY AND SUPPORT

For any questions regarding your ONN Roku TV Remote, please refer to the product's original purchase documentation or contact the retailer/manufacturer for support. Specific warranty details may vary based on your purchase location and terms.