

## ForeverPRO FP-00432117

# ForeverPRO 00432117 Dishwasher Door Handle Instruction Manual

Model: FP-00432117

## 1. PRODUCT OVERVIEW

This manual provides detailed instructions for the installation and maintenance of the **ForeverPRO 00432117 Door Handle Black Shx**. This component is a high-quality replacement part designed to restore the functionality and appearance of your dishwasher door.

The ForeverPRO 00432117 door handle is engineered to meet or exceed OEM specifications and is compatible with a range of dishwasher models from various manufacturers.



*Image 1.1: The ForeverPRO 00432117 Dishwasher Door Handle. This image shows the sleek, black, curved design of the replacement handle.*

## 2. SAFETY INFORMATION

Before attempting any repair or installation, please read and understand the following safety precautions:

- **Disconnect Power:** Always ensure the dishwasher's power supply is completely disconnected at the circuit breaker before beginning any work. Failure to do so can result in electric shock or injury.
- **Wear Protective Gear:** Use appropriate personal protective equipment, such as work gloves and safety glasses, to prevent cuts or other injuries.
- **Handle with Care:** Be mindful of sharp edges or components inside the dishwasher door.
- **Professional Assistance:** If you are unsure about any step of the installation process, consult a qualified appliance repair technician.

## 3. PART IDENTIFICATION & COMPATIBILITY

### 3.1. Part Numbers

The ForeverPRO 00432117 Door Handle is a direct replacement for the following part numbers:

- 00432117
- 1050559
- 184598
- 432117
- AH3464295
- EA3464295
- PS3464295
- PS8714589

### 3.2. Compatible Models

This door handle is compatible with various Bosch, Thermador, and Gaggenau dishwasher models. Please verify your specific model number against the list below or consult your appliance's documentation to ensure compatibility.

Known compatible Bosch models include (but are not limited to):

- SHU9956 UC/12 (FD 8105 -)
- SHX33A06 UC/14 (FD 8211-)
- SHX43E06 UC/14 (FD 8211-)
- SHX46A06 UC/14
- SHX46A06 UC/14 (FD 8211-)
- SHX46B06 UC/14
- SHX46B06 UC/14 (FD 8211-)
- SHX56B06 UC/14 (FD 8211-)
- SHX99B06 UC/14 (FD 8212-)
- SHY56A06 UC/14 (FD8301-)
- SHY66C06 UC/14 (FD8301-)
- SHY99A06 UC/14 (FD 8212-)

## 4. INSTALLATION (SETUP)

---

The following steps provide a general guide for replacing a dishwasher door handle. Specific procedures may vary slightly depending on your dishwasher model. Refer to your dishwasher's service manual for precise instructions if available.

### 4.1. Tools Required

- Screwdriver set (Phillips and/or Torx, depending on your model)
- Pliers (optional, for stubborn connections)
- Work gloves

### 4.2. Installation Steps

1. **Disconnect Power:** Locate your dishwasher's circuit breaker in your home's electrical panel and turn it OFF. Verify power is off by attempting to start the dishwasher.
2. **Open Dishwasher Door:** Fully open the dishwasher door to access the inner panel.
3. **Remove Inner Door Panel:** Carefully locate and remove the screws securing the inner door panel to the outer panel. These screws are typically found along the perimeter of the inner panel. Keep track

of all screws for reassembly.

4. **Access Old Handle:** Once the inner panel is loose, gently separate it from the outer panel. You may need to disconnect any wiring harnesses or components attached to the inner panel (e.g., control panel wires) to gain full access to the handle mounting points.
5. **Remove Old Handle:** The old handle is usually secured by screws or clips from the inside of the door. Remove these fasteners and carefully detach the old handle.
6. **Install New Handle:** Position the new ForeverPRO 00432117 handle in place on the outer door panel. Secure it using the original screws or any new hardware provided with the handle. Ensure it is firmly seated and aligned.
7. **Reassemble Door:** Reconnect any wiring harnesses that were detached. Carefully align the inner door panel with the outer panel and secure it with the screws removed in Step 3. Ensure no wires are pinched.
8. **Restore Power & Test:** Close the dishwasher door. Return to your electrical panel and turn the dishwasher's circuit breaker ON. Test the new handle by opening and closing the dishwasher door several times to ensure it operates smoothly and securely.

## 5. OPERATING

---

As a replacement part, the ForeverPRO 00432117 Door Handle does not have operational controls. Its function is to provide a secure and ergonomic means of opening and closing your dishwasher door. Proper installation ensures smooth operation.

## 6. MAINTENANCE

---

To ensure the longevity and appearance of your new door handle, follow these simple maintenance guidelines:

- **Regular Cleaning:** Wipe the handle regularly with a soft cloth dampened with mild dish soap and water.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, scouring pads, or chemical solvents, as these can damage the finish of the handle.
- **Check Fasteners:** Periodically check the screws securing the handle to ensure they remain tight. If the handle feels loose, gently tighten the screws.

## 7. TROUBLESHOOTING

---

If you encounter issues after installing the new door handle, consider the following:

- **Handle Does Not Fit:** Double-check the compatibility list in Section 3.2 to ensure the part is correct for your specific dishwasher model. Verify that all old mounting hardware has been removed.
- **Handle Feels Loose:** Ensure all screws securing the handle to the door panel are fully tightened. If the issue persists, re-open the door panel and inspect the mounting points for any damage or misalignment.
- **Door Does Not Close Properly:** Verify that the door panel has been reassembled correctly and that no wires are pinched or obstructing the closing mechanism. Ensure the handle itself is not interfering with the door latch.

If troubleshooting steps do not resolve the issue, it is recommended to contact a qualified technician or ForeverPRO customer support.

## 8. SPECIFICATIONS

<b>Brand</b>	ForeverPRO
<b>Part Number</b>	FP-00432117 (Replaces 00432117)
<b>UPC</b>	194878195170
<b>Compatibility</b>	Bosch, Thermador, Gaggenau Dishwashers
<b>Material</b>	Durable composite material
<b>Color</b>	Black

## 9. WARRANTY & SUPPORT

ForeverPRO stands behind the quality of its products. This product comes with a **"No Questions Asked Money Back Guarantee"**. For specific warranty terms and conditions, please refer to the product packaging or contact ForeverPRO directly.

As a proud USA-based company, ForeverPRO is committed to customer satisfaction. For technical assistance, compatibility questions, or any other inquiries, please contact ForeverPRO customer support through their official channels.

*Note: This is not a Bosch OEM product. Use of manufacturer's trade names and logos are for identification and compatibility purposes only.*

© 2023 ForeverPRO. All rights reserved.

For the latest information, please visit the official ForeverPRO website.