



[Manuals.plus](#) /

› [ForeverPRO](#) /

› ForeverPRO WB48T10094 Oven Rack Instruction Manual

ForeverPRO WB48T10094

ForeverPRO WB48T10094 Oven Rack Instruction Manual

Model: WB48T10094 | Brand: ForeverPRO

INTRODUCTION

This manual provides essential instructions for the proper installation, use, and maintenance of your ForeverPRO WB48T10094 Oven Rack. This rack is designed as a replacement part for compatible GE range models. Please read this manual thoroughly before using the product to ensure safe and efficient operation.

SAFETY INFORMATION

- Always allow the oven and rack to cool completely before handling to prevent burns.
- Use oven mitts or heat-resistant gloves when adjusting or removing a hot oven rack.
- Ensure the oven rack is properly seated in the oven's rack guides before placing items on it.
- Do not overload the oven rack. Refer to your oven's manufacturer manual for maximum weight capacity.
- Keep children and pets away from a hot oven and its components.

PARTS LIST

The ForeverPRO WB48T10094 Oven Rack package includes:

- One (1) ForeverPRO WB48T10094 Oven Rack



Image of the ForeverPRO WB48T10094 oven rack, a replacement part for GE ranges. The rack features a standard wire design with side rails for sliding into oven slots.

SETUP AND INSTALLATION

1. **Unpack the Rack:** Carefully remove the oven rack from its packaging. Inspect it for any signs of damage.
2. **Ensure Oven is Cool:** Make sure your oven is completely cool before attempting to install or adjust the rack.
3. **Identify Rack Guides:** Locate the rack guides or slots inside your oven where the rack will be placed. These are typically embossed or molded into the oven's side walls.
4. **Insert the Rack:** Hold the oven rack level and slide it into the desired rack guides. Push it gently until it is fully seated and stable. Ensure both sides of the rack are evenly supported.
5. **Verify Stability:** Gently pull and push the rack to confirm it is securely in place and slides smoothly.

This rack is compatible with various GE range models, including those that originally used part numbers WB48X218, 3015396, 328135, 328727, 4335557, PS8755312, and WB48X0218.

OPERATING INSTRUCTIONS

- **Rack Placement:** Position the oven rack at the appropriate height for your cooking needs. For even cooking, generally place food in the center of the rack.
- **Loading Food:** Place bakeware or cooking dishes onto the rack carefully. Distribute weight evenly to maintain stability.
- **Multiple Racks:** If using multiple racks, ensure there is adequate space for air circulation around all items for optimal cooking results.
- **Removing Hot Items:** Always use oven mitts when removing hot items from the oven or when adjusting a hot rack.

MAINTENANCE AND CLEANING

Regular cleaning of your oven rack will help maintain its condition and ensure smooth operation.

1. **Cool Down:** Always allow the oven rack to cool completely before cleaning.
2. **Remove from Oven:** Slide the rack out of the oven for easier cleaning.
3. **Cleaning Method:**
 - For light soil, wash with warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry.
 - For stubborn baked-on food, soak the rack in hot, soapy water for several hours or overnight. Use a stiff brush or plastic scraper to remove residue. Avoid harsh abrasive cleaners or steel wool, which can damage the finish.
 - Some oven racks are dishwasher safe; however, hand washing is often recommended to prolong the life of the finish. Consult your oven's manual for specific rack cleaning recommendations.
4. **Drying:** Ensure the rack is completely dry before returning it to the oven.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack does not fit or is too loose.	Incorrect model compatibility or improper installation.	Verify that your oven model is listed as compatible with the WB48T10094. Ensure the rack is fully seated in the correct rack guides.
Rack is difficult to slide in or out.	Accumulated food debris or grease on rack or oven guides; rack not aligned properly.	Clean the oven rack and the oven's rack guides thoroughly. Ensure the rack is inserted straight and level.
Rack appears discolored or rusted.	Exposure to high heat and moisture; abrasive cleaning.	This is normal wear over time. Ensure proper cleaning methods are used. If rust is severe, consider replacement.

SPECIFICATIONS

Manufacturer	ForeverPRO
Part Number	WB48T10094
Item Model Number	WB48T10094
Included Components	Rack Oven
Compatibility	Compatible with GE Range models replacing WB48X218, 3015396, 328135, 328727, 4335557, PS8755312, WB48X0218, and various General Electric, Hotpoint, RCA, and Sears/Kenmore appliance models.

WARRANTY AND SUPPORT

ForeverPRO products are designed for durability and quality. For specific warranty information regarding your WB48T10094 Oven Rack, please refer to the official ForeverPRO website or contact their customer support directly. Keep your purchase receipt for warranty claims.

For further assistance, technical support, or to inquire about other replacement parts, please visit the [ForeverPRO](#)

[brand page on Amazon](#) or their official manufacturer website.