

BELLA 17273

BELLA 3 Qt Manual Air Fryer Oven Instruction Manual

Model: 17273

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

2. PRODUCT OVERVIEW

The BELLA 3 Qt Manual Air Fryer Oven is a versatile 5-in-1 multicooker designed for air frying, broiling, baking, roasting, and reheating. It features a 1400-watt heating system and Circular Heat Technology for efficient cooking without preheating.

Key Features:

- **Capacity:** 3.0 Quart (2.7 Liters), suitable for 2-4 people.
- **Power:** 1400 Watts for rapid heating.
- **Cooking Functions:** Air Fry, Broil, Bake, Roast, Reheat.
- **Controls:** Simple manual knob for temperature and timer settings.
- **Nonstick Components:** Removable PFOA-free nonstick basket and crisping tray.
- **Easy Cleaning:** Basket and crisping tray are dishwasher safe.
- **Temperature Range:** Up to 400°F.



Figure 2.1: Front view of the BELLA 3 Qt Manual Air Fryer Oven, showcasing its compact design and manual control knob.



Figure 2.2: Illustration of the removable nonstick crisping tray and cooking pan, highlighting their easy-to-clean design.

3. GETTING STARTED

Unpacking and Initial Cleaning:

1. Carefully remove all packaging materials and promotional labels from your air fryer.
2. Wash the cooking pan and crisping tray in warm, soapy water. Rinse and dry thoroughly.
3. Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
4. Ensure all parts are completely dry before first use.

Placement:

- Place the air fryer on a stable, heat-resistant surface.
- Ensure there is adequate space (at least 6 inches) around the appliance for proper air circulation.
- Do not place the air fryer near flammable materials or under cabinets.

4. OPERATING INSTRUCTIONS

The BELLA Air Fryer features simple manual controls for temperature and time, making operation straightforward.

Control Panel:

Removable and Dishwasher-safe Crisping Tray and Cooking Pan



Figure 4.1: Close-up of the manual control knob, indicating temperature settings from 175°F to 400°F.

- **Temperature Knob:** Located on the front, this knob allows you to select temperatures from 175°F to 400°F.
- **Timer Knob:** Located on top, this knob sets the cooking time up to 60 minutes. The appliance will automatically shut off when the timer reaches zero.

General Operation:

1. Place food in the crisping tray within the cooking pan. Do not overfill.
2. Slide the cooking pan back into the air fryer until it clicks into place.
3. Plug the power cord into a wall outlet.
4. Turn the temperature knob to your desired cooking temperature.
5. Turn the timer knob to the desired cooking time. The air fryer will begin heating.
6. For even cooking, especially with larger quantities, pull out the cooking pan halfway through the cooking time and gently shake or flip the food. Then, reinsert the pan to resume cooking.

7. When the timer reaches zero, the air fryer will automatically shut off and an audible signal will sound.
8. Carefully remove the cooking pan and transfer food to a serving dish. Be aware of hot steam.



Figure 4.2: The air fryer in a kitchen setting, demonstrating its compact size and the variety of dishes that can be prepared, utilizing Circular Heat Technology for faster cooking.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your air fryer.

Before Cleaning:

- Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.

Cleaning the Cooking Pan and Crisping Tray:

- The nonstick cooking pan and crisping tray are dishwasher safe. For best results, place them on the top rack.
- Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge.
- Do not use metal utensils or abrasive cleaning materials, as these can damage the nonstick coating.

Cleaning the Exterior:

- Wipe the exterior of the air fryer with a damp cloth.
- Never immerse the main unit in water or any other liquid.

Storage:

- Ensure the air fryer is clean and dry before storing.
- Store the appliance in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your BELLA Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; timer not set.	Ensure the power cord is securely plugged into a working outlet. Turn the timer knob to the desired cooking time.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped.	Do not overfill the basket. Shake or flip food halfway through cooking time.
Food is not crispy.	Not enough oil (for some foods); temperature too low; cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time as needed. Ensure food is in a single layer.
White smoke coming from the appliance.	Grease residue from previous use; high fat content food.	Clean the cooking pan and crisping tray thoroughly after each use. For high-fat foods, drain excess fat during cooking.

7. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	BELLA
Model Name	BELLA 3.0 QT Manual Air Fryer
Item Model Number	17273
Capacity	3.0 Quart (2.7 Liters)
Output Wattage	1400 Watts
Voltage	230 Volts (AC)
Control Method	Manual Knob
Min Temperature Setting	175 Degrees Fahrenheit
Max Temperature Setting	400 Degrees Fahrenheit
Product Dimensions	15.11"D x 15.11"W x 14.68"H

Feature	Specification
Item Weight	6.94 Pounds
Material	Plastic (Outer Material)
Nonstick Coating	Yes (PFOA-free)
Dishwasher Safe Parts	Cooking Pan, Crisping Tray
UPC	829486172731



Figure 7.1: Diagram illustrating the dimensions of the BELLA 3 Qt Manual Air Fryer Oven: 15.11 inches deep, 15.11 inches wide, and 14.68 inches high.

8. WARRANTY AND SUPPORT

BELLA stands by its products and is committed to customer satisfaction.

Warranty Information:

- This BELLA appliance comes with a **2-year limited warranty** from the date of purchase.
- The warranty covers defects in materials and workmanship under normal household use.
- It does not cover damage resulting from misuse, neglect, commercial use, or unauthorized repairs.

Customer Support:

For warranty claims, technical assistance, or product inquiries, please visit the official BELLA website or contact their customer service department. Keep your proof of purchase for warranty validation.

Online Support: www.bellahousewares.com/support