

Manuals.plus /

› AUNA /

› Auna CDC 200 DAB+ Portable CD Player User Manual

## AUNA CDC 200

# Auna CDC 200 DAB+ Portable CD Player User Manual

Model: CDC 200

## 1. INTRODUCTION

---

Thank you for choosing the Auna CDC 200 DAB+ Portable CD Player. This device combines a portable CD player with a DAB+ and FM radio tuner, offering versatile audio entertainment on the go. It supports various CD formats and features a built-in rechargeable battery for extended listening.

### Key Features:

- DAB+ and FM radio tuner for digital and analog broadcasts.
- Compatible with CD, CD-R, CD-RW, and MP3-CD formats.
- Integrated 1000 mAh rechargeable battery.
- Clear LC display for easy navigation.
- Bass boost function for enhanced audio.
- Micro USB charging port.
- Includes in-ear headphones.
- Anti-skip function for uninterrupted playback.

## 2. SETUP

---

### 2.1 Charging the Device

Before first use, fully charge the device. Use the included Micro USB cable to connect the player to a USB power source (e.g., a computer USB port or a 5V USB power adapter, not included).

## USO MÓVIL

con su batería  
potente de 1000 mAh

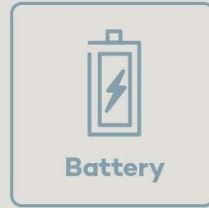


Image: The Auna CDC 200 Discman can be charged via its Micro USB port using various power sources like a power bank, wall adapter, or laptop.

### 2.2 Connecting Headphones

Plug the included in-ear headphones into the 3.5mm headphone jack on the side of the player. For optimal sound quality, ensure the plug is fully inserted.



## **INCLUIDO**

Para empezar  
inmediatamente con  
su toma para  
intraauriculares

Image: The device comes with in-ear headphones, ready for immediate use.

### **2.3 Inserting a CD**

1. Gently press the 'OPEN' button or slide the latch to open the CD compartment lid.
2. Place a CD (CD, CD-R, CD-RW, or MP3-CD) onto the spindle with the label side facing up.
3. Close the CD compartment lid firmly until it clicks into place.

## FORMATOS COMPATIBLES

CD, CD-R, CD-RW y MP3-CD



Image: The Discman supports various CD formats including CD, CD-R, CD-RW, and MP3-CD.

### 3. OPERATING INSTRUCTIONS

---

#### 3.1 Power On/Off

To turn the device ON, slide the 'ON/OFF' switch to the 'ON' position. To turn it OFF, slide the switch to 'OFF'.

#### 3.2 CD Playback

1. Insert a CD as described in Section 2.3.
2. Press the **PLAY/PAUSE** button to start playback.
3. Use the **PREVIOUS** (|<<) and **NEXT** (>>|) buttons to skip tracks.
4. Press and hold **PREVIOUS** or **NEXT** to fast forward or rewind within a track.
5. Press **STOP** to stop playback.

#### 3.3 DAB+/FM Radio Operation

The Auna CDC 200 features a DAB+ and FM radio tuner for a wide variety of regional and national stations.



## SINTONIZADOR DE RADIO DAB+ Y FM

variedad de programas de radio regionales y nacionales con calidad digital

Image: Enjoy a wide variety of regional and national radio programs with digital quality via the DAB+ and FM tuner.

1. Press the **DAB/CD** button to switch to radio mode.
2. Press the **SCAN** button to automatically scan for available stations.
3. Use the **TU+** and **TU-** buttons to manually tune or navigate through scanned stations.
4. Press the **MENU** button to access radio settings.

### 3.4 Controls and Display

The LC display provides clear information about the current track, radio station, and device status. Control buttons are conveniently located on the top surface.

## TODO A LA VISTA

Con pantalla clara LC



Image: The clear LC display provides all necessary information at a glance.

### 3.5 Anti-Skip Function

The integrated anti-skip function helps prevent interruptions during CD playback, ensuring a smooth listening experience even when the device is in motion.

## SIN INTERRUPCIONES

Con función integrada anti-skip



Image: The integrated anti-skip function ensures uninterrupted audio playback.

### 3.6 Bass Boost

Activate the bass boost function to enhance the low-frequency audio output for a richer sound experience. This control is typically located on the side of the device.

## 4. MAINTENANCE

To ensure the longevity and optimal performance of your Auna CDC 200, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use abrasive cleaners or solvents. For the CD lens, use a specialized CD lens cleaner if necessary, following its instructions carefully.
- **Storage:** Store the device in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. If storing for a long period, charge the battery to about 50% every few months.
- **Handling:** Handle CDs by their edges to avoid fingerprints and scratches. Always close the CD compartment lid gently.

## 5. TROUBLESHOOTING

If you encounter issues with your Auna CDC 200, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not power on.	Battery is discharged. Power switch is OFF.	Charge the battery. Ensure the power switch is in the 'ON' position.
No sound from headphones.	Headphones not properly connected. Volume is too low. Faulty headphones.	Ensure headphones are fully plugged in. Increase volume. Try different headphones.
CD does not play or skips.	CD is dirty or scratched. CD is inserted incorrectly. CD format not supported. Anti-skip buffer overwhelmed.	Clean the CD or try another. Reinsert the CD correctly. Ensure it's a supported format (CD, CD-R, CD-RW, MP3-CD). Avoid excessive shaking.
Radio reception is poor.	Weak signal. Location interference.	Move to a location with better signal. Extend the headphone cable (acts as antenna). Rescan for stations.
Charging not working.	Faulty Micro USB cable or power source.	Try a different Micro USB cable or power adapter. Ensure connections are secure.

## 6. SPECIFICATIONS

Feature	Specification
Model	CDC 200
Brand	AUNA
Weight	230 g
Connectivity Technology	USB
Number of Discs	1
Compatible Audio Formats	MP3
Compatible Devices	Headphones
MP3 Player Included	Yes
Battery Capacity	1000 mAh
Manufacturer Reference	MG3-90400-jfha

## 7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your

purchase or visit the official Auna website. Keep your proof of purchase for any warranty claims.