

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BEAUTURAL](#) /

› **BEAUTURAL Steamer for Clothes, Portable Garment Wrinkle Remover, Fast 30s Heat-up, Foldable and Handheld, 120V Only (Not for 220V Europe) Only for 120V White**

BEAUTURAL 722UK-009

BEAUTURAL Portable Garment Steamer User Manual

Model: 722UK-009

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- Read all instructions before using this product.
- To reduce the risk of contact with hot water, do not touch the steam head while the appliance is in use.
- Use this appliance only for its intended use as described in this manual.
- To reduce the risk of electric shock, do not immerse the appliance in water or other liquids.
- Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
- Keep the cord away from heated surfaces. Do not allow cord to contact hot surfaces.
- Do not operate appliance with a damaged cord or if the appliance has been dropped or damaged.
- This appliance is not intended for use by dependents and children. All use by dependents should be supervised by a responsible, capable adult.
- **CAUTION: Only use with 120V outlets. Plugging into 220V (even with an adapter) will damage the steamer.**

PRODUCT OVERVIEW

The BEAUTURAL Portable Garment Steamer is designed for quick and efficient wrinkle removal from various fabrics. Its compact and foldable design makes it ideal for travel and everyday use.



Figure 1: Front view of the BEAUTURAL Portable Garment Steamer, showcasing its sleek white design and steam nozzle.

Components:

- Steam Nozzle
- Water Tank (removable)
- Handle (foldable)
- Power Button / Steam Trigger
- Power Cord

SETUP

Before first use, ensure all packaging materials are removed. This steamer is designed for 120V outlets only.

1. **Unfold the Steamer:** Gently unfold the handle until it locks into place.
2. **Remove Water Tank:** Locate the removable water tank at the back of the steamer. Pull it out gently.



Compact Size Easy to carry and pack



Storage bag included

Figure 2: The steamer in its compact, folded state, ready for packing.

3. **Fill Water Tank:** Open the rubber stopper on the water tank and fill it with distilled water. Do not exceed the MAX fill line. Close the stopper securely.

The water tank is designed for easy removal and refilling.

4. **Reinsert Water Tank:** Slide the filled water tank back into the steamer until it clicks into place.
5. **Plug In:** Plug the power cord into a standard 120V electrical outlet. The indicator light will illuminate.

OPERATING INSTRUCTIONS

The BEAUTURAL steamer heats up quickly, allowing for efficient wrinkle removal.

1. **Heat-Up:** After plugging in, the steamer will heat up in approximately 30 seconds. The indicator light will change or turn off when ready.

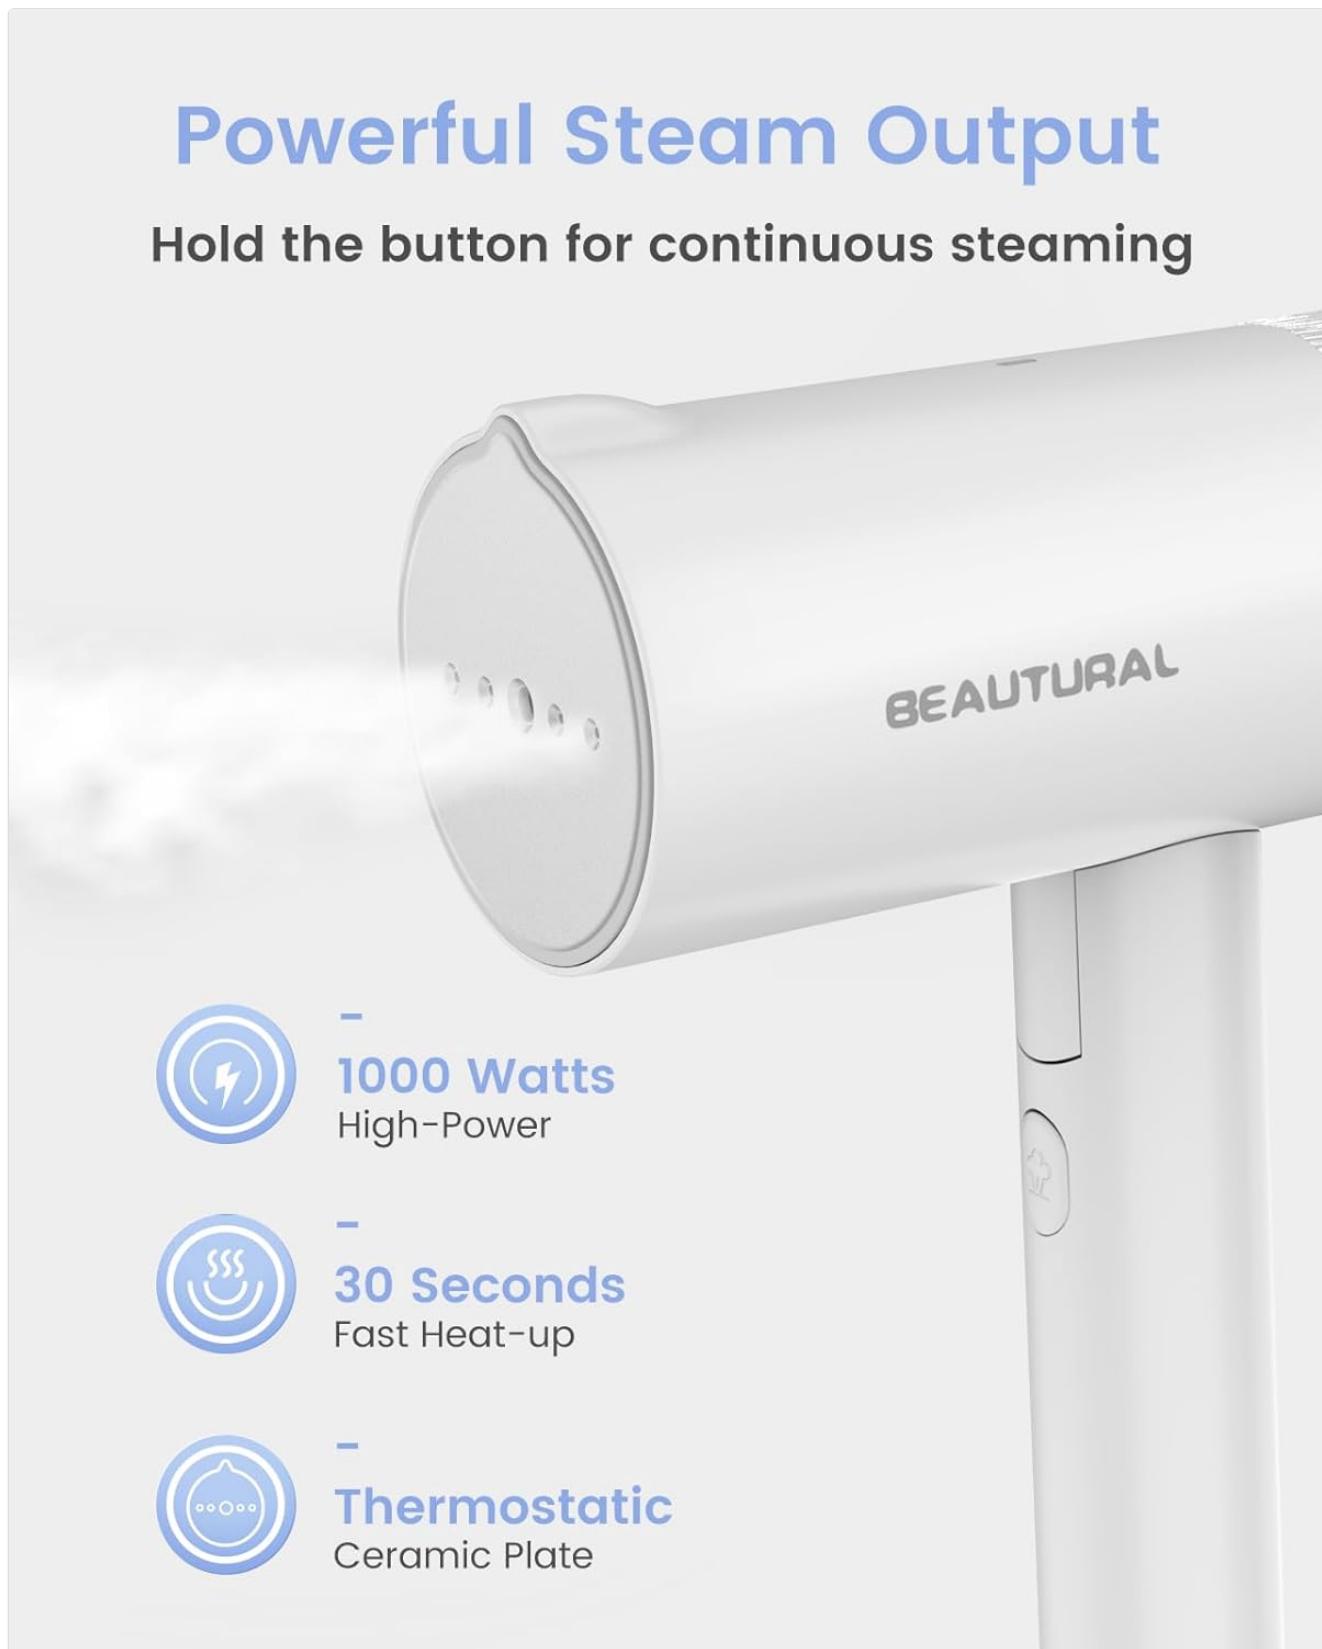


Figure 3: Illustrates the powerful steam output and quick 30-second heat-up time.

2. Steaming Garments:

- Hang the garment on a hanger or lay it flat on a clean, heat-resistant surface.
- Hold the steamer upright, ensuring the steam nozzle is facing away from you.
- Press and hold the steam trigger to release steam. For continuous steaming, hold the button.
- Move the steam nozzle slowly over the fabric, allowing the steam to penetrate and relax the fibers.

No-Spilling Design

2-in-1 vertical and horizontal steaming for better results



Figure 4: Demonstrates the steamer's versatile 2-in-1 vertical and horizontal steaming capability.

- The advanced electronic pump prevents leaks, allowing steaming at any angle, even upside down.

3. **Wrinkle Removal:** Continue steaming until wrinkles are smoothed out. For stubborn wrinkles, pass the steamer over the area multiple times.



Remove Wrinkles Efficient



▲ Before



▲ After

Figure 5: A visual comparison showing effective wrinkle removal after using the steamer.

4. **Fabric Compatibility:** The steamer is safe for use on most fabrics, including:

- Silk
- Wool
- Denim
- Cotton
- Linen
- Nylon



▲ Silk



▲ Wool



▲ Denim



▲ Cotton



▲ Linen



▲ Nylon

Multiple Fabric Steamer

One steamer for a wide range of fabrics



Figure 6: The steamer is suitable for a wide range of fabrics, as shown with examples.

5. **Finishing:** Once steaming is complete, release the steam trigger and unplug the appliance. Allow the garment to cool and dry before wearing.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your steamer.

Cleaning:

- Always unplug the steamer and allow it to cool completely before cleaning.
- Empty any remaining water from the tank after each use.
- Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Descaling:

Mineral deposits from water can build up over time, affecting steam output. Descaling your steamer regularly, especially if you notice reduced steam or spitting.

1. Mix a solution of 50% white vinegar and 50% distilled water.
2. Pour the solution into the water tank.
3. Plug in the steamer and allow it to heat up.
4. Run the steamer until half of the solution has been used.
5. Unplug and let it cool for 30 minutes.
6. Repeat the steaming process until the tank is empty.
7. Rinse the water tank thoroughly with fresh distilled water.
8. Fill the tank with fresh distilled water and run the steamer until empty to flush out any remaining vinegar.

Storage:

- Ensure the steamer is completely cool and dry before storing.
- Empty the water tank.
- Fold the handle for compact storage.
- Store the steamer in a cool, dry place, away from direct sunlight and moisture. The included storage bag can be used for protection.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------------|--|--|
| No steam or low steam output. | Water tank is empty. Steamer not heated sufficiently. Mineral buildup. | Refill water tank. Wait for the indicator light to signal readiness. Perform descaling procedure. |
| Water spitting from nozzle. | Overfilled water tank. Mineral buildup. Steamer not fully heated. | Do not overfill the water tank. Perform descaling procedure. Allow steamer to fully heat up before use. |
| Steamer not turning on. | Not plugged in correctly. No power from outlet. Damaged power cord. | Ensure plug is fully inserted. Check household circuit breaker or try another outlet. Contact customer support if cord is damaged. |

SPECIFICATIONS

Specification

Weight: 1.43 Pounds



Figure 7: Product dimensions and weight for the BEAUTURAL Steamer.

- **Model:** 722UK-009
- **Power:** 1000 Watts
- **Voltage:** 120 Volts (US/Canada compatible only)
- **Heat Time:** Approximately 30 seconds
- **Water Tank Capacity:** 150 Milliliters (5.08 fl oz)
- **Product Dimensions:** 6.69" L x 2.97" W x 8.85" H

- **Item Weight:** 1.43 Pounds

WARRANTY AND SUPPORT

BEAUTURAL products are manufactured to the highest quality standards. For warranty information, product support, or to register your product, please visit the official BEAUTURAL website or refer to the warranty card included with your purchase.

You can also find additional support and a downloadable user manual (PDF) at: [BEAUTURAL User Manual PDF](#)

© 2023 BEAUTURAL. All rights reserved.