

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic Oven Toaster Bistro NT-D700-K User Manual](#)

Panasonic NT-D700-K

Panasonic Oven Toaster Bistro NT-D700-K User Manual

Model: NT-D700-K

1. INTRODUCTION AND OVERVIEW

Thank you for purchasing the Panasonic Oven Toaster Bistro NT-D700-K. This appliance is designed to provide versatile cooking options, from perfectly toasted bread to various oven dishes, with ease and precision. Please read this manual thoroughly before use to ensure safe and optimal operation.

Key Features:

- Far and Near Triple Heater & Intelligent Control:** Optimizes toasting based on internal temperature and ambient environment, offering 7200 programs for consistent results.
- Versatile Toasting:** Achieves crispy exteriors and fluffy, hot interiors for both thick-cut and frozen bread.
- Rich Automatic Menus:** Includes options for arranged toast, French bread reheating, and slow-baked sweet potatoes.
- 8-Stage Temperature Control Oven Cooking:** Allows precise temperature adjustment from 120°C to 260°C for various oven dishes without preheating.

高級感漂う モノトーン&シンプルデザイン



The Panasonic Oven Toaster Bistro NT-D700-K, available in black and white finishes.

2. SETUP

Unpacking and Placement:

1. Carefully remove the oven toaster from its packaging. Retain packaging for future transport or storage.
2. Place the unit on a stable, flat, heat-resistant surface. Ensure adequate clearance (at least 10 cm) from walls and other appliances for proper ventilation.
3. Do not place the unit near water sources or heat-sensitive materials.

Initial Cleaning:

Before first use, wipe the interior and exterior of the unit with a damp cloth. Wash the baking tray and mochi grill net with mild detergent and warm water, then dry thoroughly.

Power Connection:

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance.

Included Accessories:

- Baking Tray
- Mochi Grill Net

3. OPERATING INSTRUCTIONS

The Panasonic Oven Toaster Bistro NT-D700-K features an intuitive control panel with a dot liquid crystal display and a click dial for easy operation.

「じっくり焼きいも」メニュー

甘みと香りが引き出された ねっとり甘い*食感



*NT-D700「焼きいも」メニューと比較した場合。芋の品種や時期により出来栄えは変わります。

The control panel with dot liquid crystal display and click dial, showing internal dimensions (Width: 26cm, Depth: 25cm, Height: 9.5cm).

3.1 Basic Toasting (Intelligent Control)

The oven toaster utilizes a 'Far and Near Triple Heater' system combined with intelligent control to deliver optimal toasting results. It automatically adjusts heating based on the bread's condition and the oven's internal environment.

15

種類

自動メニュー

ビストロの充実したメニュー

◎画像はイメージです。



中と外を同時に加熱し
冷凍厚切り食パンでも
中までアツアツに。

「焼きいも専門店」
の味を再現！
ねっとりとした
食感に仕上がります。



絶妙な火加減でパン
と卵を焼き上げます。
おまかせだから
忙しい朝の朝食に！

Diagram illustrating the Far and Near Triple Heater system, heating the toast simultaneously from inside and out for a crispy exterior and fluffy interior.

To toast bread:

1. Place up to two slices of bread on the grill rack.
2. Select the desired toast setting using the dial. The intelligent control will automatically determine the optimal cooking time and temperature.
3. Press the start button. The unit will beep when toasting is complete.

火力・時間の設定要らず！ 7200通りのトーストプログラム

食パンの状態や庫内の環境に合わせ、焼き方を最適化



冷凍厚切り食パンでも
おまかせで極上トーストに！

A slice of perfectly toasted bread with melting butter, demonstrating the ideal result from the oven toaster.

3.2 Automatic Menus

The Bistro oven toaster offers 15 automatic menus for various food items, including specialized options for different types of toast and baked goods.



遠近トリプルヒーター

遠赤外線
ヒーター

近赤外線
ヒーター

焦がさず
中まで
アツアツ

 
© 画像はイメージです。

トーストの中と外を同時に加熱
外はサクッと中はふんわりに

冷凍厚切りトーストのサーモビューアー断面


非搭載NT-T300

表面は
焼けているが
中の温度が低い



新製品 NT-D700

 表面を焦がさず
中まで熱が
伝わっている



※トースト表面の焼き色が同等時点の比較。

An overview of the 15 automatic menu options available on the Panasonic Oven Toaster Bistro.

- Thick-Cut Toast:** Automatically adjusts for thick-cut or frozen bread, ensuring a crispy exterior and fluffy interior.
- Baked Sweet Potato:** Recreates the taste of specialty baked sweet potatoes with a moist and tender texture.



A close-up view of a baked sweet potato, showcasing its soft and sweet interior, achieved with the dedicated menu.

- **Arranged Toast:** Suitable for toast with toppings, such as egg toast.
- **Mochi:** Automatically bakes mochi (rice cakes) up to 6 pieces.

大切な人に料理をふるまい、
食卓には笑顔があふれる。
誰もがそんなよろこびを実感できる、
期待を超えるおいしさを、おまかせで。
つくるときも、食べるときも
幸せで満たしたい、ピストロです。

Several pieces of mochi (rice cakes) baking on the grill net, demonstrating the appliance's ability to cook multiple items simultaneously.

- **Croissant:** Reheats croissants to a perfect crispness.

3.3 Oven Cooking (Manual Mode)

The oven toaster offers an 8-stage temperature control for manual oven cooking, ranging from 120°C to 260°C. This allows for a wide variety of dishes without the need for preheating.

OVEN TOASTER **Bistro**



A collage of diverse dishes prepared using the oven cooking function, including gratin, grilled vegetables, Dutch baby pancakes, and berry clafoutis.

To use manual oven cooking:

1. Place your food on the baking tray or in an oven-safe dish.
2. Use the dial to select the desired temperature (120°C to 260°C).
3. Set the cooking time.
4. Press the start button.

4. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Panasonic Oven Toaster Bistro NT-D700-K.

4.1 Daily Cleaning:

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the interior and exterior surfaces with a soft, damp cloth. For stubborn stains, use a small amount of mild detergent.
- Clean the baking tray and mochi grill net after each use. They can be washed with warm, soapy water

and dried thoroughly.

4.2 Deep Cleaning:

- For accumulated grease or food residue inside the oven, use a non-abrasive oven cleaner designed for toaster ovens, following the product instructions.
- Do not immerse the main unit in water or any other liquid.
- Avoid using abrasive sponges, metal scrubbers, or harsh chemical cleaners, as these can damage the surfaces.

5. TROUBLESHOOTING

If you encounter any issues with your oven toaster, please refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Unit does not turn on	Power cord not properly plugged in; Power outage; Circuit breaker tripped.	Ensure power cord is securely plugged in; Check household power supply; Reset circuit breaker.
Food not cooking evenly	Food placed too close to heating elements; Uneven food distribution; Grill rack not positioned correctly.	Adjust food position; Ensure food is spread evenly; Verify grill rack is in the correct slot.
Smoke or unusual odor during operation	Food residue on heating elements or interior; First use (normal for initial burn-off).	Unplug and clean the interior thoroughly once cooled; If it's the first use, this should subside after a few minutes. If persistent, contact support.
Display not working	Power issue; Unit malfunction.	Check power connection; Unplug and plug back in after a few minutes. If issue persists, contact support.

6. SPECIFICATIONS

Specification	Detail
Manufacturer	Panasonic
Model Number	NT-D700-K
Color	Black
Main Unit Dimensions (W x D x H)	34.1 x 32.8 x 26.9 cm
Internal Dimensions (W x D x H)	26.0 x 25.0 x 9.5 cm
Capacity	6.18 Liters
Power Source	AC (Battery-free operation)

Specification	Detail
Other Functions	Automatic cooking menus, 8-stage temperature control
Package Weight	5.57 kg

7. WARRANTY AND SUPPORT

Manufacturer's Warranty:

This Panasonic Oven Toaster Bistro NT-D700-K comes with a manufacturer's warranty period of **12 months** from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support and Repair Inquiries:

For any inquiries regarding repairs or technical support for Panasonic products, please contact the Panasonic Repair Consultation Desk:

- **Telephone:** 0120-878-554
- **Reception Hours:** 9:00 AM to 7:00 PM (JST)
- **Special Hours (Sundays, Public Holidays, Year-End/New Year):** 9:00 AM to 5:30 PM (JST)

You can also search for "Panasonic Repair" online for more information and service options.