

[Manuals.plus](#) /

› [Ufree](#) /

› Ufree Beard Trimmer for Men, Waterproof Electric Razor for Nose, Body, Face & Mustache, Cordless Hair Clippers Shavers Grooming Kit, Gifts for Men Husband Father Silver - Instruction Manual

Ufree U-1176

Ufree Beard Trimmer for Men - Instruction Manual

Brand: Ufree | Model: U-1176

PRODUCT OVERVIEW

The Ufree Beard Trimmer is a comprehensive grooming solution designed for precision and versatility. This kit provides all the tools necessary for maintaining facial hair, body hair, and more, ensuring a clean and comfortable grooming experience.

Key Features

- **Multi-Functional Grooming Kit:** Includes 6 trimmer heads for face, beard, mustache, nose, groin, pubic hair, and other body parts. Comes with 5 guide combs (3, 6, 9, 12mm) and adjustable sideburn combs for diverse cutting options.
- **Waterproof Design:** Fully washable and suitable for both wet and dry use, including in the shower. Detachable blades simplify cleaning.
- **High-Performance Blades:** Stainless steel blades with a precise gap design and R-shaped 360° skin-friendly obtuse edge for safe, quick, and irritation-free trimming.
- **Long Battery Life & LED Display:** Features a powerful Lithium-ion battery, offering 90 minutes of use after only 1.5 hours of charging. The LED display shows remaining power and charging reminders.
- **Powerful Motor with 2 Speed Modes:** Provides efficient and even cutting with low noise, featuring adjustable speed for optimal performance.



Image: The Ufree Beard Trimmer kit, showcasing the main trimmer unit and various attachments including different trimmer heads, guide combs, and charging cable.

ALL IN ONE MEN GROOMING KIT



Image: Visual representation of the trimmer's multi-functional capabilities, including hair clipping, foil shaving, beard trimming, nose trimming, body trimming, and design trimming.

SELF-SHARPENING BLADES

Cut the thickest hair with ease



Image: Close-up view highlighting the self-sharpening stainless steel blades, emphasizing their safety, sharpness, durability, and close cutting distance.

SETUP

Initial Charging

Before first use, fully charge your Ufree Beard Trimmer. Connect the USB charging cable to the trimmer's charging port and plug the other end into a compatible USB power adapter (not included). The LED display will indicate charging status. A full charge takes approximately 1.5 hours and provides up to 90 minutes of cordless operation.

ULTRA LONG BATTERY LIFE

Up to 30Days runtime on a single charge

• Remaining Battery • Travel Lock



1.5_{Hr} = 90_{Min}

Charging Time

Working Time

Image: The trimmer connected to a USB-C charging cable, with its LED display showing '99' for usage time and a charging indicator, illustrating its quick charge and long battery life.

Attaching Trimmer Heads and Guide Combs

1. **Selecting a Head:** Choose the desired trimmer head (e.g., beard trimmer, hair clipper, nose trimmer) based on your grooming needs.
2. **Attaching the Head:** Align the chosen head with the main body of the trimmer and gently push until it clicks securely into place.
3. **Selecting a Guide Comb:** If needed, select one of the five guide combs (3mm, 6mm, 9mm, 12mm, or sideburns comb) for desired hair length.
4. **Attaching the Guide Comb:** Slide the guide comb onto the trimmer head until it locks into position. Ensure it is firmly attached before use.



Image: The Ufree trimmer alongside its various interchangeable heads and guide combs, demonstrating the range of grooming options available.

OPERATING INSTRUCTIONS

Powering On/Off and Speed Modes

- **To Power On:** Press the power button located on the front of the trimmer. The LED display will illuminate.
- **Changing Speed:** The trimmer features two speed modes. Press the power button again to switch between modes (e.g., standard and high power).
- **To Power Off:** Press and hold the power button for a few seconds until the display turns off.

Trimming Techniques

- **For Beard/Hair Trimming:** Use the appropriate guide comb. Hold the trimmer with the blades facing

away from you and move against the direction of hair growth for an even cut.

- **For Detail Trimming/Edging:** Remove the guide comb. Use the precision trimmer head to create sharp lines and edges.
- **For Nose/Ear Hair:** Use the dedicated nose trimmer head. Gently insert the tip into the nostril or ear canal and move in a circular motion.
- **Wet or Dry Use:** The trimmer is designed for both wet and dry use. For a smoother shave, consider using it with shaving foam or gel in the shower.



Money Back



Support



Warranty

Image: A man using the Ufree trimmer to neatly trim his beard, demonstrating its ease of use for facial grooming.

Quantified Trust



8M+
Units Sold



20+
Countries Served



17 Years
of Precision in Personal Care



24/7
Customer Service

Image: A man using the Ufree trimmer to cut a child's hair, illustrating its suitability for home use and versatile cuts.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your trimmer.

Cleaning the Trimmer Heads

1. **Detach the Head:** After each use, turn off the trimmer and detach the trimmer head by pushing it forward as shown in the manual.
2. **Rinse Blades:** Rinse the detached trimmer head under running water. The waterproof design allows for easy cleaning.
3. **Brush Away Debris:** Use the included cleaning brush to remove any trapped hairs or debris from the blades and inside the head.
4. **Dry Naturally:** Allow the trimmer head to air dry completely before reattaching it to the main unit or storing. Do not use a cloth on the blades as it may damage them.

Cleaning the Main Unit


- Wipe the main unit with a damp cloth. Do not submerge the main unit in water, although it is waterproof, direct submersion is not recommended for the charging port area.
- Ensure the charging port is dry before plugging in the charger.



Image: An internal view of the trimmer highlighting its heavy-duty motor and waterproof design, indicating its suitability for wet cleaning.

How to Remove/Install the Blade?

Remove: Push the blade forward to remove.
Install: Align the protruding part of the blade with body groove, press the blade.

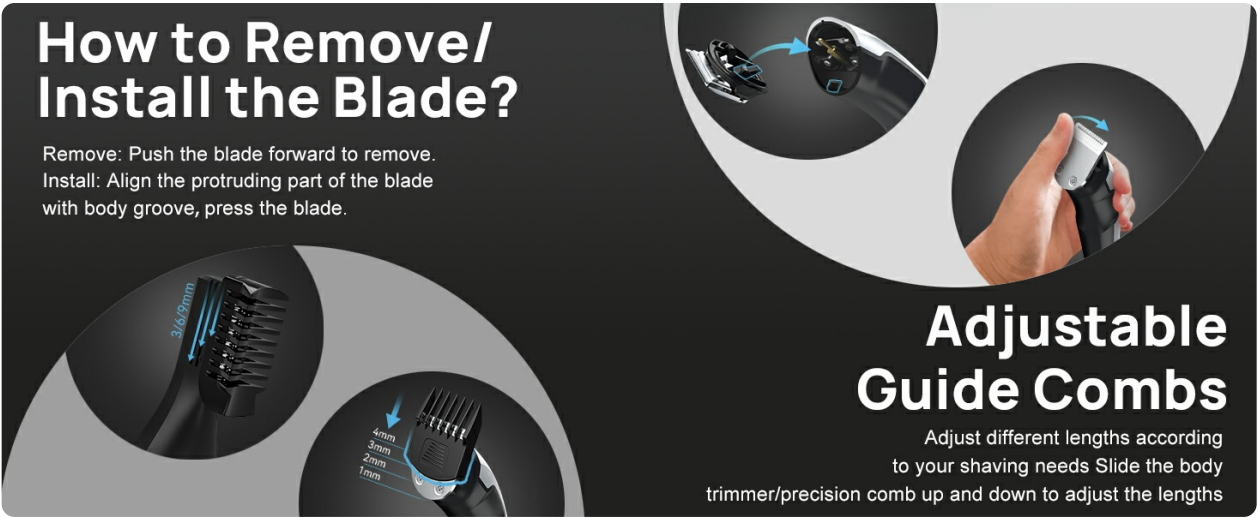

Adjustable Guide Combs

Adjust different lengths according to your shaving needs. Slide the body trimmer/precision comb up and down to adjust the lengths.

Image: Instructions demonstrating how to remove and install the trimmer blade by pushing it forward and aligning it with the body groove, along with a visual of adjustable guide combs.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on or charge.	Battery is depleted; charging cable/adaptor faulty; charging port is wet or obstructed.	Ensure the trimmer is fully charged (1.5 hours). Try a different USB cable or power adapter. Ensure the charging port is dry and free of debris.
Trimmer pulls hair or cuts unevenly.	Blades are dull or clogged; incorrect trimming technique; low battery.	Clean the trimmer head and blades thoroughly. Ensure the guide comb is securely attached. Charge the trimmer fully. Trim against the direction of hair growth.
Trimmer makes unusual noise.	Debris caught in the motor; head not properly attached.	Detach and reattach the trimmer head to ensure it's secure. Clean the trimmer head and check for any obstructions. If the issue persists, contact customer support.
LED display is not working.	Trimmer is off; battery is completely dead; internal malfunction.	Press the power button to turn on the trimmer. Charge the trimmer for at least 15 minutes. If still unresponsive, contact customer support.

SPECIFICATIONS

- **Product Dimensions:** 2.87 x 0.13 x 6.22 inches

- **Item Weight:** 1.41 Pounds (0.64 Kilograms)
- **Model Number:** U-1176
- **Manufacturer:** Ufree
- **Color:** Silver
- **Hair Type:** Dry, All
- **Charging Time:** 1.5 hours
- **Working Time:** 90 minutes
- **Power Source:** Lithium-ion Battery
- **Waterproof Rating:** Yes (suitable for wet/dry use)
- **Recommended Uses:** Face, Beard, Body, Mustache, Nose, Pubic, Groin, Ball, Ear, Eyebrows, Chest, Armpit

WARRANTY AND SUPPORT

Ufree is committed to providing high-quality products and excellent customer service.

- **Money Back Guarantee:** Enjoy a 30-day money-back guarantee.
- **Warranty:** This product comes with a 1-year warranty from the date of purchase.
- **Customer Support:** Ufree offers 24/7 customer service. If you encounter any problems or have questions, please do not hesitate to contact us.



Image: A customer service representative with a headset, symbolizing Ufree's commitment to 24/7 support.

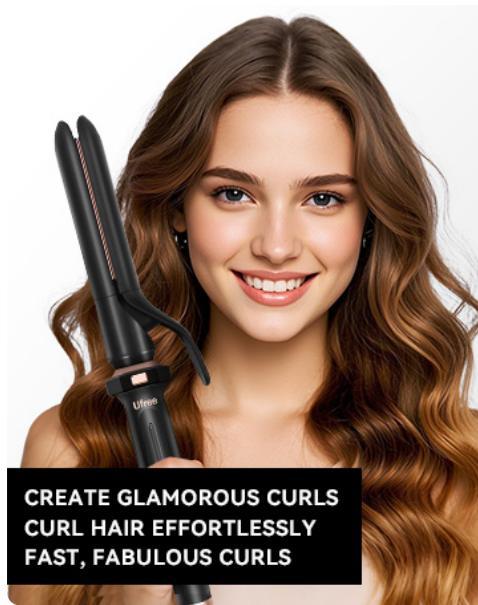


Image: Infographic detailing Ufree's market presence and customer service commitment, including 8M+ units sold, 20+ countries served, 17 years in personal care, and 24/7 customer service.

For further assistance, please refer to the official User Manual PDF available at [Ufree Beard Trimmer User Manual \(PDF\)](#)