

[Manuals.plus](#) /

> [Essy](#) /

> [Essy Premium Electric Foot File BK-506 User Manual](#)

Essy BK-506

Essy Premium Electric Foot File BK-506 User Manual

Model: BK-506 | Brand: Essy

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Essy Premium Electric Foot File, Model BK-506. Please read this manual thoroughly before first use and retain it for future reference. This device is designed to help remove hard, dead skin and calluses from your feet, promoting smoother and healthier skin.

SAFETY INFORMATION

- The device features pressure lock technology, which automatically stops the unit if excessive force is applied during use. This is a safety measure to prevent skin injury.
- Do not push the device forcefully into your skin. Allow the rotating roller to gently remove dead skin.
- This device is water-resistant (IPX-6 rated) and suitable for both dry and wet usage. However, do not submerge the entire device in water.
- Keep out of reach of children.
- Consult a healthcare professional if you have diabetes, poor circulation, or any foot conditions before using this device.

PACKAGE CONTENTS

Please check the box to ensure all items are present:

- 1 x Essy Premium Electric Foot File device
- 1 x Head cover
- 2 x Fine grinding rollers (for regular foot care)
- 2 x Medium grinding rollers (for rough and dry skin)
- 1 x Coarse grinding roller (for calluses and cracked skin)
- 1 x USB charging cable
- 1 x Cleaning brush

- 1 x User manual

In the box



For regular feet care



For rough and dry skin



For feet callouses, cracked skin



Guard



USB cord



Manual



Image: Contents of the Essy Premium Electric Foot File package, showing the device, different roller types, USB charging cable, and a cleaning brush.

SETUP

1. Charging the Device

1. Before first use, fully charge the device.
2. Connect the USB charging cable to the device's charging port and to a suitable USB power source (e.g., computer, wall adapter).
3. The LED display will indicate the battery level during charging. A full charge typically takes approximately 2 hours.
4. Disconnect the cable once fully charged. The device is rechargeable and does not require replaceable batteries.

2. Installing/Replacing Rollers

1. Ensure the device is turned off.

2. To remove a roller, press the release button on the side of the device and gently pull the roller head away.
3. To install a new roller, align the roller head with the device and push it firmly until it clicks into place.
4. Select the appropriate roller for your needs:
 - **Fine Roller:** For light exfoliation and regular foot care.
 - **Medium Roller:** For rough and dry skin.
 - **Coarse Roller:** For stubborn calluses and cracked skin.

OPERATING INSTRUCTIONS

Follow these steps for optimal results:

1. **Step 1: Prepare Your Feet**

Wash or soak your feet to soften the skin. Dry them thoroughly if you prefer dry usage, or proceed with wet usage.

2. **Step 2: Use the Foot File**

Press the power button to turn on the device. The device has two adjustable grinding speeds. Press the button again to switch between speed 1 and speed 2. Gently glide the rotating roller over the areas with hard skin or calluses. Do not apply excessive pressure; the device will stop if too much force is used. Move the device in short, light strokes. The integrated LED light helps illuminate hard-to-reach areas.

3. **Step 3: Moisturize**

After filing, rinse your feet to remove any dead skin particles. Apply a moisturizing cream to keep your feet soft and hydrated.

4. **Step 4: Enjoy Smooth Feet**

Regular use will help maintain soft, smooth, and healthy-looking feet.



STEP 1 Wash or soak your feet



STEP 2 Use the file on dry or wet skin



STEP 3 After, moisturise your feet



STEP 4 Enjoy your smooth and healthy feet!

Image: Step-by-step guide for using the Essy Premium Electric Foot File, illustrating preparation, filing, moisturizing, and the final result.

MAINTENANCE

Cleaning the Device

1. Ensure the device is turned off and disconnected from any charging cable before cleaning.
2. Remove the roller head by pressing the release button.
3. Use the provided cleaning brush to remove any dead skin particles from the roller head and the device.
4. The roller head can be rinsed under running water. Ensure it is completely dry before reattaching or storing.
5. Wipe the main body of the device with a damp cloth. Do not use abrasive cleaners or immerse the main body in water.
6. Store the device in a cool, dry place, away from direct sunlight.

TROUBLESHOOTING

If you encounter any issues with your Essy Premium Electric Foot File, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Connect it to the USB charging cable and allow it to charge for at least 30 minutes before attempting to turn it on again.
- **Roller stops during use:** This is likely due to the pressure lock technology. Reduce the pressure you are applying to your skin. The device is designed to stop if too much force is detected to prevent injury.
- **Reduced effectiveness:** The roller head may be worn out or clogged with dead skin. Clean the roller head thoroughly or replace it with a new one. Ensure you are using the appropriate roller grit for the skin condition.
- **Unusual noise or vibration:** Turn off the device immediately. Check if the roller head is correctly installed and free from any obstructions. If the issue persists, discontinue use and contact customer support.

For issues not covered here, please refer to the Warranty & Support section.

SPECIFICATIONS

Specifications

Achieve your results quickly and effortlessly



POWERFUL MOTOR

Expands the usage 2x more



RECHARGEABLE

No replaceable batteries needed



LED BATTERY INDICATOR

Real-time report of battery power



LED LIGHT

Helps to locate treatable spots



TWO SPEEDS

Two modes to suit your needs



WATERPROOF

For dry and wet usage

Image: Key features and specifications of the Essy Premium Electric Foot File, highlighting its powerful motor, LED light, rechargeable nature, two speed settings, battery indicator, and waterproof design.

Feature	Detail
Model Name	Essy Premium
Model Number	BK-506
Brand	Essy
Power Source	Rechargeable (USB charging)
Battery Capacity	1200mAh Li-ion
Charging Time	Approx. 2 hours
Operating Speeds	2 speeds

Feature	Detail
Water Resistance	IPX-6 (Waterproof for dry and wet usage)
Safety Feature	Pressure Lock Technology
Dimensions (L x W x H)	16 x 7 x 3.5 cm
Weight	150 Grams
Material	Plastic, Steel
Included Rollers	Fine, Medium, Coarse (5 total)

WARRANTY & SUPPORT

The Essy Premium Electric Foot File comes with a 5-year warranty, provided by Essy Premium. This warranty covers manufacturing defects and ensures product quality.



Image: Essy Premium Certificate of Excellence, highlighting a 5-year warranty and commitment to customer satisfaction.

For warranty claims, technical support, or any questions regarding your device, please contact Essy customer service. Refer to the product packaging or the official Essy website for contact details.

