

[Manuals.plus](#) /

› [Classic Cantabile](#) /

› Classic Cantabile DP-230 Digital Piano Instruction Manual

Classic Cantabile DP-230

Classic Cantabile DP-230 Digital Piano Instruction Manual

Model: DP-230

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Classic Cantabile DP-230 Digital Piano. Please read these instructions thoroughly before operating the instrument and retain them for future reference. This digital piano offers a realistic playing experience with its hammer-action keyboard and a wide range of features suitable for both beginners and experienced musicians.

2. SAFETY INSTRUCTIONS

- **Power Supply:** Use only the specified power adapter. Ensure the voltage matches your local power supply. Disconnect the power cord during thunderstorms or when not in use for extended periods.
- **Placement:** Place the piano on a stable, level surface. Avoid direct sunlight, heat sources, and excessive humidity. Keep away from strong electromagnetic fields.
- **Moisture:** Do not expose the instrument to rain or moisture. Do not place objects containing liquids on the piano.
- **Ventilation:** Ensure proper ventilation around the instrument. Do not block ventilation openings.
- **Cleaning:** Use a soft, dry cloth for cleaning. Avoid abrasive cleaners, waxes, or solvents.
- **Children:** Keep small parts and packaging materials away from children to prevent choking hazards.

3. PACKAGE CONTENTS

Please check that all items are present in your package:

- Classic Cantabile DP-230 Digital Piano
- Power Adapter
- Adjustable Piano Bench (Solid wood, matte white, black corduroy cover, height adjustable 47-56 cm, max. load

120 kg)

- Headphones (Frequency range 20-20,000 Hz, padded, ear-enclosing, 4m cable)
- Piano School Book for Beginners (DIN A4, 44 pages, with access to training videos, PlayAlongs, and MIDI files)
- Music Stand

Im Set enthalten:



Figure 3.1: Included accessories: piano bench, headphones, and piano school book.

4. SETUP

4.1 Assembly

The Classic Cantabile DP-230 requires some assembly. Follow the instructions provided in the separate assembly guide for detailed steps. Ensure all screws are tightened securely before use. It is recommended to have two people for assembly due to the instrument's weight.

4.2 Connecting the Pedals

Connect the pedal unit cable to the corresponding port on the underside of the piano. Ensure a firm connection.

Drei Pedale (Sustain, Soft, Sostenuto) für dynamisches und expressives Spiel



CLASSIC CANTABILE

Figure 4.1: The three integrated pedals for dynamic and expressive playing.

4.3 Power Connection

Connect the power adapter to the DC IN port on the rear of the piano, then plug it into a suitable power outlet.

Ideal für Einsteiger & Familien

kreative Musikstunden mit den Liebsten

Einfache Handhabung

Benutzerfreundlich und innovativ

Schlankes Design

Passend für jedes Zuhause



Figure 4.2: The Classic Cantabile DP-230 Digital Piano fully assembled.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **POWER** button located on the control panel to turn the piano on or off.

5.2 Volume Control

Adjust the overall volume using the **MASTER VOL** knob or buttons on the control panel.

5.3 Voice Selection

The DP-230 features 40 different voices. Refer to the detailed voice list in the separate user manual for specific instructions on how to select and combine voices.

5.4 Rhythm Selection

Access the 200 accompaniment rhythms. Use the **RHYTHM VOL** control to adjust the rhythm volume independently.

5.5 Metronome

Activate the built-in metronome to assist with timing. The tempo can be adjusted from 20 to 280 beats per minute (bpm).



Figure 5.1: Integrated metronome for practice and retractable keyboard cover for protection.

5.6 Touch Response

The 88-key hammer-action keyboard includes touch response, allowing for dynamic expression based on how hard or soft you play the keys.



88 gewichtete Tasten
mit Hammermechanik

Anschlagsdynamik
für ein äußerst realistisches Spielgefühl

Layer- und Split-Funktion
für das Kombinieren und Aufteilen von Klängen

Figure 5.2: The 88 weighted keys with hammer mechanism provide a realistic playing feel.

5.7 Layer and Split Functions

The piano supports Layer and Split functions, allowing you to combine different sounds or divide the keyboard into two sections with separate voices.

6. CONNECTIONS

The DP-230 offers various connectivity options:

- **Headphone Jacks (2x 6.3 mm stereo):** Connect up to two pairs of headphones for silent practice.
- **Audio IN/OUT (RCA):** Connect external audio devices for playback or output the piano's sound to an amplifier or recording device.
- **MIDI IN/OUT:** Connect to other MIDI-compatible instruments or devices.
- **USB to Host:** Connect the piano to a computer for MIDI data transfer, allowing use with music software.



Figure 6.1: Overview of the rear panel connections.



Zwei Kopfhöreranschlüsse

Ermöglichen lautloses
Üben, ideal für späte Stunden

USB-to-Host-Anschluss

Für nahtlose Verbindung mit
Computern und Musiksoftware

Figure 6.2: Two headphone jacks for silent practice and USB-to-Host for computer connectivity.

7. KEY FEATURES

- **88-Key Hammer Mechanism:** Provides a realistic piano feel with graded hammer action.
- **128-Note Polyphony:** Allows up to 128 notes to sound simultaneously, ensuring complex pieces are played without note drop-out.
- **40 Voices & 200 Rhythms:** A versatile selection of instrument sounds and accompaniment styles.
- **3 Pedals:** Sustain, Soft, and Sostenuto pedals for expressive control.
- **Integrated Speakers:** Two 15-watt speakers deliver clear and powerful sound.
- **Retractable Keyboard Cover:** Protects the keys from dust and damage when not in use.
- **Adjustable Music Stand:** Conveniently holds sheet music.



128-fache Polyphonie

bis zu 128 Töne gleichzeitig

40 Sounds und 200 Rhythmen

Orgel, Akkordeon oder Streichinstrument & mehr

Hochwertige Materialien

gewährleisten Langlebigkeit und Stabilität

Figure 7.1: Features including 128-note polyphony, 40 voices, and 200 rhythms.

8. MAINTENANCE

8.1 Cleaning

Wipe the piano's surface with a soft, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water and a mild soap solution, then wipe dry immediately. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the finish.

8.2 Keyboard Care

Regularly wipe the keys with a soft, dry cloth. If keys become sticky, use a slightly damp cloth with a very mild soap solution, then dry thoroughly. Do not allow liquids to seep between the keys.

8.3 Storage

When not in use, ensure the keyboard cover is closed to protect the keys from dust. Store the piano in a stable environment, away from extreme temperatures and humidity fluctuations.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	Power off, volume too low, headphones connected, speaker issue.	Ensure power is on. Increase MASTER VOL. Disconnect headphones if sound is desired from speakers. Check speaker connections.
Distorted sound	Volume too high, faulty connection, external interference.	Lower volume. Check all audio cable connections. Move away from other electronic devices.
Keys unresponsive	Instrument malfunction, specific setting.	Turn the piano off and on again. Consult the full user manual for advanced settings that might disable keys. If problem persists, contact support.
Pedals not working	Pedal unit not connected properly.	Check the pedal unit cable connection to the piano.

10. SPECIFICATIONS

Feature	Detail
Brand	Classic Cantabile
Model	DP-230
Color	Matte White
Number of Keys	88
Keyboard Type	Hammer Mechanism, Touch Response
Polyphony	128-note
Voices	40
Rhythms	200
Metronome Tempo Range	20-280 bpm
Pedals	3 (Sustain, Soft, Sostenuto)
Speakers	2 x 15 Watt
Connections	Audio IN/OUT (RCA), MIDI IN/OUT, USB to Host, 2x Headphone (6.3 mm stereo), Power Supply
Item Dimensions (L x W x H)	138 x 41.5 x 83 cm
Item Weight	41.5 kg
Skill Level	Student

11. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you encounter any issues not covered in this manual or require technical assistance, please contact Classic Cantabile customer support or your authorized dealer. Keep your proof of purchase for warranty claims.