



[Manuals.plus](#) /

> [Cuisinart](#) /

> Cuisinart AMW-60 3-in-1 Microwave AirFryer Oven Instruction Manual

Cuisinart AMW-60

Cuisinart AMW-60 3-in-1 Microwave AirFryer Oven

Instruction Manual

INTRODUCTION

The Cuisinart AMW-60 3-in-1 Microwave AirFryer Oven is a versatile kitchen appliance designed to combine the functionalities of a microwave, an air fryer, and a convection oven into a single unit. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance.



Image: Front view of the Cuisinart AMW-60 3-in-1 Microwave AirFryer Oven, showcasing its sleek black design and digital control panel, alongside a box for an extended protection plan.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

- Do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors.
- Always unplug from outlet when not in use and before cleaning.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.

PARTS AND FEATURES

Familiarize yourself with the components of your Cuisinart AMW-60:

- **Control Panel:** Sleek touchpad controls with white LED Display for various functions and settings.
- **Oven Cavity:** 0.6-cubic foot capacity stainless steel interior.
- **Rotating Glass Tray:** For even cooking in microwave mode.
- **Airfry Basket:** Specifically designed for air frying.
- **Bake/Drip Pan:** Used for baking and collecting drips during air frying.
- **Oven Light:** To view cooking progress.



Image: The Cuisinart AMW-60 oven with its door open, revealing the stainless steel interior, rotating glass tray, and the airfry basket/bake pan setup.

1. **Unpacking:** Carefully remove all packaging materials and accessories. Ensure all components listed in "Parts and Features" are present.
2. **Placement:** Place the oven on a flat, stable, heat-resistant surface. Ensure adequate ventilation around the unit (at least 4 inches of clearance on all sides). Do not place it near heat sources or in direct sunlight.
3. **Power Connection:** Plug the appliance into a grounded electrical outlet.
4. **First Use:** Before first use, wipe down the interior and accessories with a damp cloth. Run the oven empty on a high temperature setting for about 10-15 minutes to burn off any manufacturing residues. A slight odor may be present, which is normal.

OPERATING INSTRUCTIONS

Microwave Functions

The microwave function offers quick and efficient heating and cooking.

- **Power Levels:** Select from 11 power levels (0-10) to adjust cooking intensity.
- **Auto Cook:** Utilize preset options for common foods like popcorn, potato, and vegetables.
- **Defrost:** Defrost food by time or by weight for optimal results.
- **Reheat:** Convenient preset for reheating leftovers.

AirFryer Functions

Achieve crispy results with significantly less oil using the air fryer function.

- **Adjustable Time and Temperature:** Manually set cooking time and temperature for precise control.
- **Preset Options:** Dedicated presets for popular air-fried items such as French fries, chicken wings, and frozen snacks.
- Ensure the Airfry Basket and Bake/Drip Pan are correctly positioned for air frying.

Convection Oven Functions

The convection oven function allows for baking and roasting with even heat distribution.

- **Adjustable Time and Temperature:** Set desired baking time and temperature.
- Ideal for baking items like a 4-pound chicken or casseroles.

Additional Features

- **Child Lock:** Activate the convenient child lock option to prevent unintended operation. Refer to the control panel instructions for activation/deactivation.
- **Oven Light:** The interior oven light illuminates the cavity, allowing you to monitor cooking progress without opening the door.



Image: A detailed view of the Cuisinart AMW-60's digital control panel, showing the various function buttons for microwave, airfry, and convection oven modes, along with time and temperature controls.

CARE AND CLEANING (MAINTENANCE)

Regular cleaning ensures optimal performance and longevity of your appliance.

- **Interior:** The stainless steel interior is designed not to absorb odors and is easy to clean. Wipe with a damp cloth and mild detergent after each use. For stubborn stains, use a non-abrasive cleaner specifically designed for stainless steel.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Glass Tray, Airfry Basket, Bake/Drip Pan:** These accessories can be washed in warm, soapy water or placed in the dishwasher (top rack recommended for basket/pan). Ensure they are completely dry before reinserting.
- **Unplug:** Always unplug the oven from the power outlet before cleaning.

TROUBLESHOOTING

If you encounter issues with your Cuisinart AMW-60, refer to the table below for common problems and solutions.

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| Oven does not start. | Not plugged in; door not closed properly; child lock activated. | Ensure plug is securely in outlet; close door firmly; deactivate child lock. |
| Food not cooking evenly. | Food quantity too large; improper placement of food/accessories. | Reduce food quantity; ensure food is placed centrally on the glass tray or in the airfry basket. |
| Unusual noise during operation. | Glass tray not seated correctly; foreign object inside. | Check glass tray placement; inspect interior for any loose items. |
| Display not working. | Power outage; unit unplugged. | Check power supply; ensure unit is plugged in. |

If the problem persists after attempting these solutions, please contact Cuisinart customer support.

SPECIFICATIONS

| Feature | Detail |
|--------------------------------|----------------------------|
| Model Number | E9CUIAMW60 |
| Product Dimensions (D x W x H) | 14.4" x 17.9" x 13.8" |
| Item Weight | 25 Pounds |
| Capacity | 0.6 Cubic Feet |
| Wattage | 1500 watts |
| Material | Stainless Steel (interior) |
| Color | Black |
| Manufacturer | Cuisinart |



Image: Diagram showing the dimensions of the Cuisinart AMW-60, with depth (14.4"), width (17.9"), and height (13.8") clearly marked.

WARRANTY AND SUPPORT

Your Cuisinart AMW-60 3-in-1 Microwave AirFryer Oven comes with a **Full Manufacturer Protection**. Additionally, this bundle includes a **1 Year Extended Protection Plan**, providing enhanced coverage beyond the standard manufacturer's warranty.

For warranty claims, technical support, or service inquiries, please contact Cuisinart Customer Service. Keep your proof of purchase and model number readily available.

For more information, visit the official Cuisinart website or refer to the warranty card included with your product.

© 2023 Cuisinart. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.