

[Manuals.plus](#) /

› [Galanz](#) /

› Galanz Microwave Oven ExpressWave User Manual

Galanz GEWWD16S1SV11

Galanz Microwave Oven ExpressWave User Manual

MODEL: GEWWD16S1SV11

1. Important Safety Information

Please read all instructions carefully before using this appliance to ensure safe and efficient operation. Keep this manual for future reference.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Always ensure proper ventilation around the microwave oven.
- This appliance is intended for household use only.

2. What's in the Box

Your Galanz Microwave Oven ExpressWave package includes the following components:

- 1 Sensor & Inverter Microwave Oven
- 1 Glass Turntable
- 1 Roller Ring
- 1 Shaft
- 1 Power Cord



The Galanz Microwave Oven ExpressWave, showcasing its sleek stainless steel design and control panel.

3. Setup and Installation

The Galanz Microwave Oven ExpressWave is designed for versatile placement:

- **Countertop Installation:** Place the microwave on a stable, flat surface, ensuring adequate clearance around the unit for ventilation.
- **Built-in Installation:** This unit can be built into cabinetry with the use of compatible trim kits (trim kits are not included and must be purchased separately). Ensure proper ventilation is maintained as per the trim kit instructions.

Faster Cooking for Delicious Meals

1.6

Cu.Ft.

1100

Watt

10

Power Levels



Illustration of the microwave oven on a countertop, highlighting its compact design and dimensions for easy placement.

4. Operating Instructions

The Galanz ExpressWave microwave oven offers a range of features for convenient and efficient cooking.

4.1 Patented Inverter Technology

The ExpressWave features patented Inverter Technology for faster cooking, reheating, and defrosting. Unlike traditional microwave heating systems that pulse on and off, the inverter creates continuous, constant, even heat to maintain exacting temperature during the cooking process. This technology helps to lock in flavor and freshness, providing more accurate and even cooking results.

Patented Inverter Technology

 


Constant even heat for more accurate, even cooking

Locks in flavor and freshness



VS



INVERTER TECHNOLOGY
Galanz

NON-INVERTER
OTHER

Visual representation of the patented Inverter Technology, showing how continuous, even heat is distributed within the microwave cavity for superior cooking.

4.2 Express Cooking Knob

This innovative microwave has a unique Express Cooking Knob that makes everything faster and easier to use. Just turn the knob to select time and then press it to quickly start your microwave cooking.



A close-up view of the Express Cooking Knob, illustrating its intuitive design for quick time selection and cooking initiation.

4.3 Sensor Cook & Sensor Reheat

A built-in humidity sensor ensures that your food is never undercooked or overcooked. For precooked dishes, Sensor Reheat stops automatically when food is hot and ready to eat. The microwave includes 6 Sensor Cook Programs (Corn on the Cob, Fish, Fresh Vegetable, Ground Meat, Oatmeal, Rice) and 7 Sensor Reheat Programs (Chili, Frozen Entrée, Frozen Pizza, Mac and Cheese, Mashed Potatoes, Pasta, Rice).

Ultimate Cooking Versatility



The control panel highlighting the Sensor Cook and Sensor Reheat options, indicating the variety of pre-programmed settings available for optimal cooking.

4.4 Preset Menus

The microwave features 6 Preset Menus for common food items: Popcorn, Beverage, Potato, Frozen Vegetable, Dinner Plate, and Soup. These presets simplify cooking by automatically setting the appropriate time and power levels.

6 Preset Menus



An image displaying the microwave in a kitchen setting, with an overlay indicating the 6 convenient preset menu options for various food types.

4.5 Power Levels

The 1100 Watt microwave oven offers 10 variable power levels, allowing you to adjust the cooking power from 10% to 100% to suit your specific cooking needs.

4.6 +30 SEC Function

Quickly add 30 seconds to your cooking time with the dedicated +30 SEC button.

4.7 Kitchen Timer

Utilize the built-in kitchen timer for general timing needs, independent of microwave cooking functions.

4.8 Child Safety Lock


Activate the child safety lock to prevent unintended operation of the microwave oven, enhancing household safety.

Official product video demonstrating the key features and functionalities of the Galanz ExpressWave Sensor Microwave Oven, including its premium design, Express Cooking Knob, Sensor Cook/Reheat, and various presets for different foods.

5. Maintenance and Cleaning

The Galanz ExpressWave microwave oven features an easy-clean interior, simplifying the cleaning process and maintaining hygiene.

- Wipe the interior and exterior surfaces with a damp cloth and mild detergent regularly.
- The glass turntable and roller ring can be removed for thorough cleaning with warm, soapy water.
- Avoid using abrasive cleaners or scouring pads that could damage the surfaces.

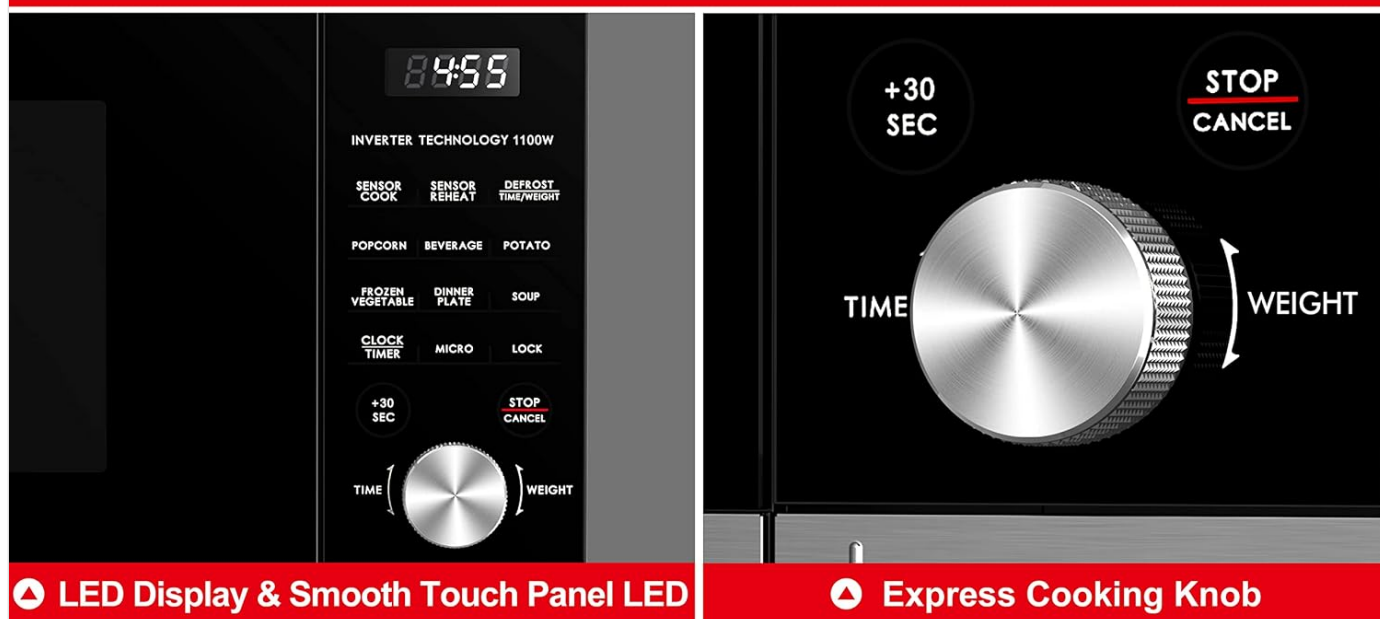

An image showing a hand cleaning the interior of the microwave, emphasizing its easy-to-clean surface.

6. Troubleshooting

If you encounter any issues with your Galanz Microwave Oven ExpressWave, please refer to the following common

troubleshooting tips:

- **Oven not operating:** Ensure the power cord is securely plugged into a grounded electrical outlet. Check your household fuse or circuit breaker. Make sure the door is closed securely.
- **Food not heating:** Verify that the cooking time and power level are set correctly. Ensure the door is fully closed.
- **Unusual noise during operation:** Check that the turntable and roller ring are correctly positioned and free from obstructions.
- **Display not working:** Unplug the unit for a few minutes and then plug it back in to reset the control panel.

For more detailed troubleshooting or persistent issues, please contact Galanz customer support or refer to the full user manual.

7. Specifications

Feature	Detail
Capacity	1.6 Cubic Feet
Wattage	1100 watts
Voltage	120 Volts / 60Hz
Product Dimensions (D x W x H)	17.69" x 21.86" x 12.25"
Item Weight	33.5 pounds
Color	Stainless Steel
Material	Stainless Steel
Installation Type	Countertop or Built-in
Special Feature	Child Safety Lock
Turntable Size	12.8" Glass Turntable

8. Warranty Information

The Galanz Microwave Oven ExpressWave comes with a **1 Year Limited Warranty**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the official warranty documentation provided with your product or contact Galanz customer support.

9. Support

For further assistance, detailed instructions, or to download the complete user manual in PDF format, please visit the official Galanz website or use the link below:

[Download Full User Manual \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08P5L78G7>

More documents and user manuals: <https://manuals.plus/>