

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [COSTWAY](#) /

> [COSTWAY Artist Easel with Drawer - Instruction Manual](#)

COSTWAY 43x44x151-194.5CM

COSTWAY Artist Easel with Drawer

Model: 43x44x151-194.5CM

INTRODUCTION

Thank you for choosing the COSTWAY Artist Easel with Drawer. This easel is designed for artists, students, and adults, offering a stable and adjustable platform for various painting styles. Crafted from natural beech wood, it features a robust H-frame structure, an adjustable canvas support, and a convenient storage drawer and tray. Please read this manual carefully before assembly and use to ensure proper function and longevity of your easel.

SAFETY INSTRUCTIONS

- Ensure all components are securely fastened before use to prevent instability.
- Do not overload the easel or drawer beyond its intended capacity.
- Keep small parts away from children during assembly.
- Place the easel on a flat, stable surface to avoid tipping.
- Avoid exposing the easel to extreme temperatures or humidity, which can damage the wood.
- Use caution when adjusting the height and canvas support to prevent pinching fingers.

PACKAGE CONTENTS

Please verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact customer service.

- 1 x Easel Stand (unassembled)
- Assembly Hardware (screws, nuts, etc.)
- Instruction Manual

ASSEMBLY INSTRUCTIONS

Assembly of your COSTWAY easel is designed to be straightforward. Follow these steps carefully:

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.

2. Identify the main frame pieces. The easel features an H-shaped frame for stability.
3. Attach the base legs to the main vertical supports using the provided hardware. Ensure all connections are firm.
4. Install the sliding canvas support mechanism. This includes the adjustable canvas tray and the upper canvas clamp.
5. Assemble the storage drawer and slide it into its designated slot at the base of the easel.
6. Tighten all screws and bolts once the easel is fully assembled to ensure maximum stability.



Assemblage facile en peu de temps

Châssis robuste avec une bonne stabilité

Conception professionnelle avec un travail exquis

Temps de création pour les débutants, les artistes et les étudiants



Figure 1: Overview of easel assembly features, highlighting easy assembly, robust chassis, professional design, and suitability for various users.

Chevalet avec tiroir de rangement

Des détails plus fins permettent une meilleure utilisation de l'expérience lors de votre création

Bonne praticité



Grand tiroir



Plateau pratique



Quincaillerie en métal solide



Joints à mortaise et tenon

Figure 2: Detailed view of the easel's storage features, including the large drawer, practical tray, solid metal hardware, and mortise and tenon joints for durability.

OPERATING INSTRUCTIONS

The COSTWAY easel offers adjustable features for optimal comfort and versatility during your creative process.

Adjusting Easel Height

The easel's overall height is adjustable from 151 cm to 194.5 cm. This allows you to comfortably paint whether standing or sitting. Loosen the adjustment knobs on the main vertical support, slide the upper section to your desired height, and then securely tighten the knobs.

Adjusting Canvas Support

The sliding canvas support can accommodate canvases up to 92 cm in height. To adjust the canvas tray, loosen the knob located on the side of the tray, slide it up or down to the desired position, and then tighten the knob firmly. The upper canvas clamp also features a pivoting knob to secure the top of your canvas.

Réglage de la hauteur du support de toile coulissant

Le support de toile supérieur et inférieur sont réglables
S'adapte bien aux différents besoins individuels et peut accueillir des toiles jusqu'à 92 cm



Figure 3: Illustration of the adjustable canvas support, showing how to raise and lower the canvas tray and secure the canvas with the top knob. The easel can accommodate canvases up to 92 cm.

Using the Storage Drawer and Tray

The easel includes a large drawer and a spacious tray for organizing your painting supplies. Use the drawer for storing paints, brushes, and other tools, keeping them within easy reach during your creative sessions.



Figure 4: Diagram highlighting key features: adjustable canvas button, height-adjustable canvas tray, practical tray, large drawer, solid metal hardware, and mortise and tenon joints.

MAINTENANCE

Proper care will ensure the longevity of your COSTWAY easel.

- **Cleaning:** Wipe the easel with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the beech wood finish.
- **Wood Care:** As the easel is made of natural beech wood, occasional treatment with wood oil or wax can help maintain its appearance and protect it from drying out.
- **Hardware:** Periodically check all screws and bolts and tighten them if necessary to maintain stability.
- **Storage:** When not in use, store the easel in a dry environment away from direct sunlight or extreme temperature fluctuations.

TROUBLESHOOTING

If you encounter any issues with your easel, refer to the following common problems and solutions:

- **Easel feels wobbly:** Ensure all assembly screws and bolts are fully tightened. Check that the easel is

placed on a level surface.

- **Canvas support slides down:** Make sure the adjustment knob for the canvas tray is securely tightened after setting the desired height.
- **Drawer sticks or is difficult to open/close:** Check for any obstructions in the drawer runners. Ensure the drawer was assembled correctly and is aligned within its slot.
- **Difficulty adjusting height:** Loosen the adjustment knobs sufficiently before attempting to slide the components. Ensure no paint or debris is obstructing the sliding mechanism.

If problems persist, please contact COSTWAY customer support for further assistance.

SPECIFICATIONS

Feature	Specification
Brand	COSTWAY
Material	Beech Wood
Color	Brown (Natural Wood)
Overall Dimensions (L x W x H)	44 cm x 41.5 cm x 151 cm - 194.5 cm
Net Weight	5.7 kg
Max. Canvas Height	92 cm
Assembly Required	Yes
Easel Type	Single Mast Easel



Figure 5: Detailed dimensions of the easel and its components, including the drawer and overall height adjustments.

WARRANTY AND SUPPORT

Specific warranty information for this product is not available in the provided documentation. For any warranty claims, technical support, or inquiries regarding replacement parts, please contact COSTWAY customer service directly through their official website or the retailer where the product was purchased.

You can visit the COSTWAY brand store for more information: [COSTWAY Official Store](#)