



Manuals.plus /

› KOOKOO /

› KOOKOO MoriMori Design Lamp with Loudspeaker User Manual

KOOKOO MM1004M

KOOKOO MoriMori Design Lamp with Loudspeaker

Model: MM1004M

INTRODUCTION

Thank you for purchasing the KOOKOO MoriMori Design Lamp with Loudspeaker. This versatile device combines the warm, ambient light of a classic lantern with the convenience of a modern Bluetooth speaker. Designed for both indoor and outdoor use, it offers a unique blend of aesthetics and functionality. Please read this manual carefully to ensure proper use and maintenance of your device.



Figure 1: KOOKOO MoriMori Design Lamp (Mint Green)

The image shows the KOOKOO MoriMori Design Lamp in Mint Green, featuring a classic lantern design with a clear glass shade and a warm LED filament. The base houses the speaker and controls.

PACKAGE CONTENTS

Please check the box for the following items:

- KOOKOO MoriMori Design Lamp with Loudspeaker
- Rechargeable Lithium Polymer Battery (pre-installed)
- USB Charging Cable (Type-C or Micro USB, depending on model variant)
- User Manual



Figure 2: Product Packaging

The image displays the cylindrical cardboard packaging for the MoriMori LED Lantern Speaker, showing product information and a silhouette of the lamp.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your MoriMori lamp:

- **Glass Shade:** Protects the LED light source.
- **LED Filament:** Provides warm, dimmable light.
- **Dimmer Knob:** Controls light brightness.
- **Speaker Grille:** Located at the base, allows sound output.
- **LED Power Button:** Turns the lamp on/off.
- **Bluetooth Power Button:** Turns the Bluetooth speaker on/off and initiates pairing.
- **Charging Port:** USB-C or Micro USB port for charging.
- **Reset Button:** (If applicable, usually a small pinhole) For resetting the device.



Figure 3: Speaker Grille Detail

A close-up view of the base of the MoriMori lamp, highlighting the speaker grille openings and the "ON/OFF LED" and "ON/OFF Bluetooth" buttons.

SETUP

1. Charging the Device

Before first use, fully charge your MoriMori lamp. The device is equipped with a rechargeable Lithium Polymer battery.

1. Locate the charging port on the side of the lamp's base. This may be a Micro USB or Type-C port depending on your specific model.
2. Connect the provided USB charging cable to the lamp's charging port.
3. Connect the other end of the USB cable to a compatible 5V-1A USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate during charging and turn off or change color when fully charged.
5. A full charge provides up to 10 hours of operating time.



Figure 4: Charging Ports (Micro USB and Type-C variants)

The images show two different charging port types found on MoriMori lamps: a Micro USB port with "Micro USB 5V-1A" label and a Type-C port with "TYPE-C 5V-1A" label, both located on the base of the lamp.

OPERATING INSTRUCTIONS

1. Lamp Operation

1. To turn the LED lamp on or off, press the "ON/OFF LED" button located on the base.
2. To adjust the brightness, rotate the dimmer knob located on the side of the lamp. Turning the knob clockwise will increase brightness, and counter-clockwise will decrease it. The light is dimmable, allowing for various ambient settings.



Figure 5: Lamp Controls

The image shows the full MoriMori lamp, with the dimmer knob clearly visible on the side of the lamp's neck, above the base.

2. Bluetooth Speaker Operation

1. To turn the Bluetooth speaker on or off, press the "ON/OFF" button with the Bluetooth icon located on the base.
2. When the speaker is turned on for the first time or is not paired, it will automatically enter pairing mode. The Bluetooth indicator light will flash.
3. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings and search for available devices.
4. Select "MoriMori" (or similar name) from the list to pair.
5. Once successfully paired, the Bluetooth indicator light will stop flashing and remain solid. You can now play audio

through the lamp's speaker.

- The speaker will automatically reconnect to the last paired device when turned on, if the device is within range.

MAINTENANCE

To ensure the longevity and optimal performance of your MoriMori lamp, follow these maintenance guidelines:

- **Cleaning:**
 - Wipe the lamp's body with a soft, dry cloth.
 - For the glass shade, use a soft, damp cloth and a mild glass cleaner if necessary. Ensure the lamp is off and unplugged before cleaning.
 - Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Battery Care:**
 - Avoid fully discharging the battery frequently.
 - Charge the device regularly, even if not in use, to maintain battery health.
 - If storing for an extended period, charge the battery to about 50% and recharge every few months.
- **Storage:** Store the lamp in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your MoriMori lamp, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted.	Charge the lamp fully.
Lamp light is dim or flickers.	Low battery or dimmer knob setting.	Charge the lamp. Rotate the dimmer knob to increase brightness.
Bluetooth speaker does not connect.	Speaker is off, not in pairing mode, or device is out of range.	Ensure speaker is on and Bluetooth button is pressed for pairing. Move device closer. Check your device's Bluetooth settings.
Poor sound quality.	Device too far from speaker, interference, or low battery.	Move device closer. Avoid obstacles. Charge the lamp.
Lamp is unresponsive.	Software glitch.	Locate the reset button (if available, usually a small pinhole) and gently press it with a thin object (e.g., paperclip).

SPECIFICATIONS

- **Model Number:** MM1004M
- **Dimensions:** 4.33 x 4.33 x 10.63 inches (11 x 11 x 27 cm)
- **Weight:** 1.1 pounds (0.5 kg)
- **Power Source:** Battery Powered
- **Battery Type:** 1 Lithium Polymer battery (included)
- **Operating Life:** Up to 10 hours

- **Charging Input:** 5V-1A (via Micro USB or Type-C)
- **Light Source:** Dimmable LED
- **Speaker Connectivity:** Bluetooth
- **Material:** Glass (shade), Metal/Plastic (base)
- **Manufacturer:** KooKoo GmbH
- **Country of Origin:** China

SAFETY INFORMATION

Please read and follow these safety precautions to prevent damage to the device or injury to yourself:

- Do not expose the device to water or excessive moisture. While splash-proof, it is not fully waterproof.
- Keep the device away from direct heat sources, open flames, and extreme temperatures.
- Do not attempt to disassemble or modify the device. This will void the warranty and may cause damage.
- Use only the provided or recommended charging cable and a compatible power adapter (5V-1A).
- Keep out of reach of children and pets.
- Handle the glass shade with care to avoid breakage.

WARRANTY AND SUPPORT

This product is manufactured by KooKoo GmbH. For warranty information, technical support, or service inquiries, please contact the manufacturer directly or refer to their official website. Please retain your proof of purchase for warranty claims.

Manufacturer: KooKoo GmbH

For further assistance, you may visit the KOOKOO Store on Amazon: [KOOKOO Amazon Store](#)