

[Manuals.plus](#) /

› [Braun](#) /

› Braun CareStyle 1 IS1012BL Steam Generator Iron User Manual

## Braun IS1012BL

# Braun CareStyle 1 IS1012BL Steam Generator Iron User Manual

Model: IS1012BL | Brand: Braun

## INTRODUCTION

---

Thank you for choosing the Braun CareStyle 1 IS1012BL Steam Generator Iron. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before first use and keep them for future reference.



**Figure 1:** Braun CareStyle 1 IS1012BL Steam Generator Iron. This image shows the complete steam generator iron unit, with the iron resting securely on its base, and the power cord neatly wrapped around the base.

## SAFETY INSTRUCTIONS

---

- Always ensure the appliance is unplugged before filling with water or cleaning.
- Do not immerse the iron or base unit in water or other liquids.
- Keep the appliance out of reach of children.
- Do not touch the hot soleplate or steam.
- Use the iron only on a stable, heat-resistant surface.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.


## PRODUCT OVERVIEW

---

The Braun CareStyle 1 IS1012BL is designed for efficient and convenient ironing. Key features include:

- **SuperCeramic FreeGlide 3D Soleplate:** Ensures smooth gliding over all fabrics and obstacles.
- **DoubleSteam Technology:** Provides powerful steam for faster wrinkle removal.
- **1.5 Liter Water Tank:** Allows for extended ironing sessions.
- **Precision Temperature Control:** Four settings for various fabric types.
- **Compact Design:** Easy to store and handle.

## Caractéristiques

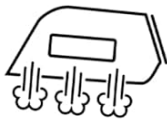


**Puissance  
de 2200 W**



**Vapeur  
continue de  
110 g/min**



**5,5 bar /  
340 g/min jet  
de vapeur**

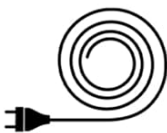

**Longueur  
du cordon  
de 1,5 m**



**Figure 2:** Key Features of the Braun CareStyle 1. This image highlights the appliance's specifications including 2200W power, 110 g/min continuous steam, 5.5 bar pressure, 340 g/min steam shot, and a 1.5m cord length.

## SETUP

1. **Unpacking:** Carefully remove the iron and all accessories from the packaging. Retain packaging for storage or transport.

2. **Positioning:** Place the steam generator iron on a stable, level, and heat-resistant surface, such as an ironing board designed for steam generators.

3. **Filling the Water Tank:**

- Ensure the appliance is unplugged.
- Open the water tank cap.
- Fill the 1.5-liter water tank with tap water up to the 'MAX' indicator. Do not overfill.
- Close the water tank cap securely.



**Figure 3:** Filling the 1.5 Liter Water Tank. This image demonstrates the process of refilling the non-removable 1.5-liter water tank with tap water, allowing for extended ironing sessions.

4. **Connecting to Power:** Plug the power cord into a suitable grounded electrical outlet (240V).

## OPERATING INSTRUCTIONS

---

1. **Power On and Heating:**

- Once plugged in, the iron will begin to heat up. The indicator light will illuminate.
- Wait for the indicator light to turn off or change color (depending on model) to signal that the iron has reached the selected temperature.

## 2. Selecting Temperature:

- Use the temperature dial on the iron to select the appropriate setting for your fabric type.
- The iron offers four precision settings: Synthetic, Wool/Silk/Polyester, Cotton/Linen, and Max.
- Always check the garment's care label for recommended ironing temperature.



**Figure 4:** Adjustable Thermostat. This image displays the temperature control dial on the iron, illustrating the four precision settings available for different fabric types to ensure optimal ironing results.

## 3. Ironing with Steam:

- Press the steam trigger located under the handle to release continuous steam.
- For an extra burst of steam (steam shot), press the steam boost button. This is useful for stubborn wrinkles.
- The FreeGlide 3D soleplate allows for smooth gliding in all directions, even over buttons and zippers.

## Technologie FreeGlide 3D

**Ne laissez rien vous ralentir.  
Glissez en arrière sur tous les  
obstacles, tels que les boutons,  
les poches et les fermetures éclair.**



**Figure 5:** FreeGlide 3D Soleplate. This image shows the unique rounded soleplate design gliding effortlessly over fabric, demonstrating its ability to navigate around obstacles like buttons without snagging.

#### 4. Vertical Steaming:

- Hold the iron vertically, close to the garment (e.g., hanging clothes, curtains).
- Press the steam trigger to release steam and refresh fabrics.



**Figure 6:** Vertical Steaming Function. This image illustrates the iron being used in a vertical position to steam hanging garments,

effectively removing wrinkles and refreshing fabrics.

### 5. After Use:

- Unplug the appliance from the power outlet.
- Allow the iron to cool down completely before storing.
- Wrap the power cord around the designated storage area on the base unit.

## MAINTENANCE

---

### 1. Cleaning the Soleplate:

- Ensure the iron is cool and unplugged.
- Wipe the SuperCeramic soleplate with a damp cloth and a non-abrasive cleaner if necessary.
- Do not use abrasive scouring pads or harsh chemicals.

### 2. Descaling (Anti-Calc System):

- The appliance features an integrated descaling system.
- A descaling indicator light will illuminate when descaling is required.
- Refer to the full instruction manual for detailed descaling procedures. This typically involves a simple flush process without filters.

### 3. Emptying the Water Tank:

- It is recommended to empty any remaining water from the tank after each use to prevent limescale buildup.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No steam output.	Water tank is empty. Iron not hot enough.	Refill the water tank. Allow the iron to heat up to the selected temperature.
Water leaking from soleplate.	Temperature setting too low for steam. Overfilling the water tank.	Increase the temperature setting. Do not fill past the 'MAX' line.
Iron not heating up.	Not plugged in. Power outlet malfunction.	Ensure the power cord is securely plugged in. Test the outlet with another appliance.
White flakes on clothes.	Limescale buildup.	Perform the descaling procedure as outlined in the full manual.

If you encounter issues not listed here, please contact customer support.

## SPECIFICATIONS

---

Brand	Braun
-------	-------

<b>Model Number</b>	IS1012BL
<b>Color</b>	White / Blue
<b>Power</b>	2200 Watts
<b>Voltage</b>	240 Volts
<b>Continuous Steam Output</b>	110 g/min
<b>Steam Shot</b>	340 g/min
<b>Steam Pressure</b>	5.5 bar
<b>Water Tank Capacity</b>	1.5 Liters (non-removable)
<b>Soleplate Type</b>	SuperCeramic FreeGlide 3D
<b>Cord Length</b>	1.5 meters
<b>Item Weight</b>	2.62 Kilograms
<b>Product Dimensions (L x W x H)</b>	Approx. 39 cm x 20 cm x 18 cm (iron height) / 15 cm (base height)

# BRAUN



**Figure 7:** Product Dimensions. This image provides a visual representation of the steam generator iron's dimensions: approximately 39 cm in length, 20 cm in width, and 18 cm in height for the iron, with the base being 15 cm high.

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Braun website. Keep your proof of purchase for any warranty claims.

**Manufacturer:** De'Longhi

**ASIN:** B08P7N1WMK