

[Manuals.plus](#) /

› [Philips](#) /

› Philips Senseo Original HD6553/67 Coffeemachine User Manual

Philips HD6553/67

Philips Senseo Original HD6553/67 Coffeemachine

USER MANUAL

1. Introduction

Welcome to the user manual for your new Philips Senseo Original HD6553/67 Coffeemachine. This manual provides essential information on how to set up, operate, maintain, and troubleshoot your coffee machine to ensure optimal performance and a delightful coffee experience. Please read this manual carefully before first use and keep it for future reference.

2. Safety Information

Before using the appliance, read this important information carefully and save it for future reference. Incorrect use can lead to potential hazards.

- Always connect the appliance to an earthed wall socket.
- Do not immerse the appliance in water or any other liquid.
- Keep the appliance and its cord out of reach of children.
- Do not operate the appliance if the plug, the mains cord, or the appliance itself is damaged.
- Always unplug the appliance before cleaning.
- Use only Senseo coffee pods with this machine.
- The hotplate and coffee spout can become very hot during and after operation. Avoid contact.

3. Product Overview

Familiarize yourself with the components of your Philips Senseo Coffeemachine.



Figure 1: Overview of the Philips Senseo Original HD6553/67 Coffeemachine, showing the water reservoir, coffee spout, pod holder, and control panel.

Key components include:

- **A. Water Reservoir:** Holds water for brewing.
- **B. Pod Holder:** For inserting one or two coffee pods.
- **C. Coffee Spout:** Dispenses brewed coffee.
- **D. Drip Tray:** Collects excess liquid and supports cups.
- **E. Power Button:** To turn the machine on/off.
- **F. 1-Cup Button:** For brewing a single cup of coffee.
- **G. 2-Cup Button:** For brewing two cups of coffee simultaneously.

4. Setup and First Use

Follow these steps to set up your coffeemachine for the first time.

1. **Unpacking:** Remove all packaging materials from the coffeemachine.
2. **Placement:** Place the machine on a stable, flat surface. Ensure there is enough space around it for ventilation.
3. **Rinsing:** Before first use, rinse the machine. Fill the water reservoir with fresh cold water up to the MAX indication. Place a bowl under the coffee spout. Press the 2-cup button to start the rinsing cycle. Repeat this process once more.
4. **Power Connection:** Plug the machine into an earthed wall socket.

5. Operating Instructions

Brewing coffee with your Senseo machine is simple and quick.

Brewing One or Two Cups of Coffee

1. **Fill Water Reservoir:** Fill the water reservoir with fresh cold water up to the MAX indication.
2. **Insert Pod(s):** Open the lid and place one coffee pod in the 1-cup pod holder for a single cup, or two coffee pods in the 2-cup pod holder for two cups. Ensure the coffee side of the pod faces downwards. Close the lid firmly.
3. **Place Cup(s):** Place one or two cups under the coffee spout.
4. **Select Brew:** Press the 1-cup button for one cup or the 2-cup button for two cups. The machine will start brewing.



Figure 2: The Senseo machine brewing two cups of coffee simultaneously, showcasing the Crema Plus system.



Figure 3: The Senseo machine brewing a single cup of coffee, demonstrating its versatility.

Crema Plus Technology

Your Senseo machine features Crema Plus technology, which ensures a fine, velvety crema layer on every cup of coffee, enhancing the aroma and taste.

Automatic Power-Off

For energy saving and safety, the Senseo coffeemachine automatically switches off 30 minutes after the last coffee preparation.

6. Maintenance and Cleaning

Regular cleaning and maintenance will prolong the life of your coffeemachine and ensure consistent coffee quality.

Daily Cleaning

- **Water Reservoir:** Empty and rinse the water reservoir daily.
- **Drip Tray and Grid:** Remove and empty the drip tray and grid after each use. Rinse them with warm water and a mild detergent.
- **Coffee Spout:** The coffee spout can be removed for cleaning. Rinse it under running water.
- **Pod Holders:** Rinse the pod holders under running water after each use.

Descaling

Descaling is crucial for maintaining optimal performance and preventing limescale buildup. The frequency depends on water hardness and usage. It is recommended to descale every 3 months or when the descaling indicator lights up.

1. Use a Senseo descaler or a citric acid-based descaler. Do not use vinegar.
2. Follow the instructions on the descaler packaging for mixing with water.
3. Fill the water reservoir with the descaling solution.
4. Place a large bowl (at least 1.5L) under the coffee spout.
5. Start the descaling cycle according to the specific instructions in the full manual (usually by pressing both 1-cup and 2-cup buttons simultaneously or a dedicated descaling button).
6. After the descaling cycle, rinse the machine thoroughly by running several cycles with fresh water.

7. Troubleshooting

If you encounter issues with your coffeemachine, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No coffee is dispensed.	Water reservoir is empty.	Fill the water reservoir with fresh water.
	Machine is clogged with limescale.	Descal the machine.
Coffee is too weak.	Incorrect coffee pod used.	Ensure you are using Senseo coffee pods.
	Pod holder is dirty.	Clean the pod holder thoroughly.
Machine leaks.	Water reservoir not properly seated.	Ensure the water reservoir is correctly placed.
	Drip tray is full.	Empty and clean the drip tray.

If the problem persists after trying these solutions, please contact Philips customer support.

8. Specifications

Detailed technical specifications for the Philips Senseo Original HD6553/67 Coffeemachine.

Feature	Specification
---------	---------------

Feature	Specification
Brand	Philips
Model Number	HD6553/67
Product Dimensions	21.31 x 31.5 x 32.99 cm
Item Weight	1.7 kg
Colour	Black
Voltage	230 Volts
Coffee Maker Type	Drip Coffee Machine
Special Feature	Integrated Coffee Grinder (Note: This feature is listed in product data, but Senseo machines typically use pods and do not have an integrated grinder. Please verify with product documentation if this is critical.)
Automatic Power Off	Yes, after 30 minutes

9. Warranty and Support

Your Philips Senseo Original HD6553/67 Coffeemachine comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, spare parts, or any questions regarding your coffeemachine, please visit the official Philips support website or contact their customer service line. Keep your proof of purchase handy when contacting support.

Philips Official Website: www.philips.com

© 2023 Philips. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08P967NK8>

More documents and user manuals: <https://manuals.plus/>