

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ALLIMITY](#) /

› [ALLIMITY RC1994906 Remote Control User Manual for Thomson TV](#)

ALLIMITY RC1994906

ALLIMITY RC1994906 Remote Control User Manual

For Thomson TV Models: 46E91NF32, 40E90NH22, 32E92NH22, 26E92NH22, 22E92NH22, 32E90NH22, 32E92NH22W

1. PRODUCT OVERVIEW

This manual provides instructions for the ALLIMITY RC1994906 replacement remote control, designed for use with various Thomson TV models. This remote offers direct functionality without requiring complex setup procedures. Compatible Thomson TV models include: 46E91NF32, 40E90NH22, 32E92NH22, 26E92NH22, 22E92NH22, 32E90NH22, 32E92NH22W.



Figure 1: Front view of the ALLIMITY RC1994906 remote control, showing all buttons and layout.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA alkaline batteries (not included). Rechargeable batteries may not be compatible or provide optimal performance.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



RC1994906



Figure 2: Side view of the remote control, illustrating its ergonomic design.

2.2 Initial Use

No programming or pairing is required for this replacement remote control. Once batteries are installed, it is ready for immediate use with compatible Thomson TV models.

3. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your Thomson TV. Ensure there are no obstructions between the remote and the TV.

3.1 Basic Functions

- **Power (Red Button):** Turns the TV on or off.
- **Source:** Selects input sources (e.g., HDMI 1, AV, TV).
- **Number Buttons (0-9):** Direct channel selection.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (PR +/-):** Changes TV channels.
- **Mute:** Silences the TV audio.
- **Menu:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **Exit:** Exits the current menu or function.
- **Info:** Displays information about the current program or input.
- **Return:** Returns to the previous screen or channel.

3.2 Advanced Functions

- **List:** Accesses the channel list.
- **AV:** Switches to AV input.
- **FAV:** Accesses favorite channels.
- **Guide:** Opens the electronic program guide (EPG).
- **Presets:** Accesses preset picture or sound modes.
- **Zoom +/-:** Adjusts screen zoom.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within TV menus or interactive services, as indicated on screen.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback if supported by the TV.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries. Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new alkaline batteries.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Verify that the remote control is pointed directly at the TV.

- **Limited functionality:**

- Confirm your TV model is listed as compatible. While this remote is designed for the specified Thomson models, some advanced functions may vary based on the specific TV's firmware or features.

6. SPECIFICATIONS

Brand	ALLIMITY
Model Name	RC1994906
Connectivity Technology	Infrared
Compatible Devices	Thomson TV models: 46E91NF32, 40E90NH22, 32E92NH22, 26E92NH22, 22E92NH22, 32E90NH22, 32E92NH22W
Maximum Range	10 Meters
Battery Type	Alkaline (AAA)
Number of Buttons	25

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or manufacturer's official website where the product was purchased. Keep your purchase receipt as proof of purchase.

