

## arsvita UsAsCDc01

# Arsvita CD/VCD/DVD Laser Lens Cleaner Disc Instruction Manual

Model: UsAsCDc01

Brand: Arsvita

## 1. INTRODUCTION

---

The Arsvita CD/VCD/DVD Laser Lens Cleaner Disc is designed to maintain the optimal performance of your CD, VCD, and DVD players. Over time, dust and debris can accumulate on the laser lens, leading to playback issues such as slow loading, skipping, or freezing of discs. This cleaning disc utilizes a specialized two-brush process to gently and effectively remove these deposits, restoring clear audio and video quality and extending the lifespan of your player.

## 2. PACKAGE CONTENTS

---

Verify that all items are present in your package:

- 1 x Arsvita CD/VCD/DVD Laser Lens Cleaner Disc
- 1 x Microfiber Cleaning Cloth
- 1 x User Manual (this document)

# Compatible with CD/VCD/DVD Player



Image: Contents of the Arsvita CD/VCD/DVD Laser Lens Cleaner package, showing the cleaning disc and microfiber cloth.

### 3. COMPATIBILITY

This cleaning disc is designed for use with the following player types:

- CD Players
- VCD Players
- DVD Players

**Important:** This cleaner is **not compatible** with the following devices:

- Blu-Ray Players

- PlayStation 1/2/3/4
- Xbox/Xbox 360/Xbox One/Xbox X
- Nintendo Wii/Wii U
- Bose Players



Image: Visual guide illustrating compatible CD/VCD/DVD players and explicitly listing incompatible devices like Blu-Ray players and gaming consoles.

## 4. OPERATING INSTRUCTIONS

Follow these steps to clean the laser lens of your compatible player:

1. **Insert the Cleaning Disc:** Open the disc tray of your CD/VCD/DVD player. Carefully place the Arsvita cleaning disc into the tray, ensuring it is seated correctly.
2. **Start Playback:** Close the disc tray. The player should automatically begin to read the disc. If not, press the "Play" button on your player or remote control. The cleaning disc contains audio tracks that will play during the cleaning process.
3. **Allow Cleaning to Complete:** Let the disc play through its entire cleaning cycle. The integrated brushes on the disc will gently clean the laser lens as it spins. The cleaning process typically lasts a few minutes.
4. **Remove the Disc:** Once the cleaning cycle is complete and the audio stops, open the disc tray and carefully remove the cleaning disc.
5. **Test Playback:** Insert a regular CD, VCD, or DVD into your player to verify improved playback quality. If issues persist, you may repeat the cleaning process.



## Easy to Use

No additional cleaning agents are required. Just put it in the CD player and let it finish playing the set tracks.

Image: A hand inserting the Arsvita cleaning disc into a DVD player's disc tray.

**Improve Playback Quality**  
Improve the Image and Playback Quality Extend the life of your player.

Microfiber Cloth Usage: CD Disc CD Player TV Screen ...

Image: Step-by-step visual guide for inserting, playing, and removing the cleaning disc.

Your browser does not support the video tag.

Video: Demonstration of inserting the Arsvita Laser Lens Cleaner disc into a car CD player and the cleaning process.

## 5. MAINTENANCE

To ensure the longevity of your discs and player, regular maintenance is recommended:

- **Cleaning the Disc:** After use, store the cleaning disc in its protective case to prevent dust accumulation.
- **Using the Microfiber Cloth:** The included microfiber cloth can be used to gently wipe the surfaces of your CDs, VCDs, and DVDs to remove fingerprints and light dust before playback. Always wipe from the center outwards in straight lines, not in circles.



Image: The cleaning disc stored in its box and the microfiber cloth in use.

## 6. TROUBLESHOOTING

If you encounter issues, consider the following:

- **Persistent Playback Issues:** If slow loading, skipping, or freezing continues after multiple cleaning cycles, the issue may not be related to a dirty laser lens. Consider consulting your player's manual or a professional technician.
- **Incompatible Player:** Ensure your player is a standard CD, VCD, or DVD player. This cleaner is not designed for Blu-Ray players, gaming consoles (PlayStation, Xbox, Nintendo Wii/Wii U), or Bose players. Using it with incompatible devices may not resolve the issue and could potentially cause damage.
- **Disc Condition:** Heavily scratched or damaged discs cannot be repaired by this lens cleaner. Inspect your discs for physical damage.

## Easy Operation

- 1 Insert and press "PLAY".
- 2 Rewind when cassette stops and eject.
- 3 Repeat the process can make better effect.
- 4 Take it out and store it. It is reusable.



Image: A visual representation of improved playback quality on a television screen after using the cleaner.

## 7. SPECIFICATIONS

<b>Brand</b>	Arsvita
<b>Model Number</b>	UsAsCDc01
<b>Item Weight</b>	1.76 ounces
<b>Package Dimensions</b>	5.39 x 4.96 x 0.47 inches
<b>Material</b>	Microfiber, Plastic, Metal
<b>Color</b>	Red

## 8. SUPPORT

Arsvita is committed to providing high-quality products and excellent customer service. If you have any questions, concerns, or are not completely satisfied with your purchase, please contact us directly.

**Contact Email:** [Arsvita@126.com](mailto:Arsvita@126.com)

We aim to respond to all inquiries within 48 hours. Your satisfaction is guaranteed.