

[Manuals.plus](#) /

› [warmiplanet](#) /

› Warmiplanet Ceiling Fan Instruction Manual

warmiplanet WICF04

Warmiplanet 52-Inch Ceiling Fan with LED Light and Remote Control

MODEL: WICF04

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your new Warmiplanet 52-inch Ceiling Fan. Please read all instructions carefully before beginning installation and retain this manual for future reference. This ceiling fan is designed to provide optimal air circulation and lighting for your indoor spaces.



Figure 1: Warmiplanet 52-inch Ceiling Fan

Safety Information

To reduce the risk of electrical shock, fire, or injury to persons, read and follow all instructions carefully.

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes.
- The fan must be mounted with a minimum of 7 feet (2.1 meters) clearance from the trailing edge of the blades to the floor.
- Do not operate the fan if any part of the fan housing or blades is damaged.
- Do not insert objects into the path of the fan blades.

Package Contents

Verify that all components listed below are included in your package:

- Up Canopy
- Down Rod
- Blades (4)

- Motor Assembly
- Light Plate
- Hanging Bracket
- Down Canopy
- Hardware Fitting (screws, washers, wire nuts)
- Remote Control
- Light Cover

Setup and Installation

For a visual guide, please refer to the official Warmiplanet 52-inch ceiling fan installation video below.

Video 1: Warmiplanet 52-inch Ceiling Fan Installation Guide

Installation Steps:

1. **Determine Your Ceiling Type:** Ensure your ceiling is suitable for fan installation. For concrete ceilings, install the hanging bracket to the octagon box with two machine screws and iron washers. For wooden ceilings, use two wood screws and iron washers.
2. **Prepare the Downrod:** Loosen the two screws on the coupler of the motor assembly. Pull out the R-pin from the rod. Install the up canopy, canopy cover, and down canopy onto the downrod.
3. **Attach Downrod to Motor:** Feed the wires from the motor through the downrod. Insert the cross-pin and fix it with the R-pin. Tighten the two screws on the coupler to secure the downrod to the motor.
4. **Hang and Wire the Fan:** Hang the fan to the hanging bracket, ensuring the bulge on the hanging bracket aligns with the notch on the hemisphere. Connect the wires from the motor to the receiver, then connect the wires on the other side of the receiver to the home circuit (ensure proper color matching: Live, Neutral, Ground).
5. **Secure the Canopy:** Rotate the up canopy until it is flush with the ceiling. Tighten the two screws to secure the canopy.
6. **Install Blades and Light:** Install the fan blades and tighten their screws. Remove the three screws used to install the light plate. Connect the light power cord. Install the light plate and then rotate the light cover until it is fixed securely.

Operating Instructions

Your Warmiplanet ceiling fan comes with a multi-functional remote control for convenient operation.



Figure 2: Remote Control Layout

Fan Operation:

- **Power On/Off:** Press the power button on the remote to turn the fan on or off.
- **Speed Control:** Use the 'H' (High), 'M' (Medium), and 'L' (Low) buttons to adjust fan speed. The fan features a silent, brushed DC motor for quiet operation (less than 50 dB).

- **Reversible Motor:** A switch on the motor housing allows you to change the blade direction. In summer, set for downdrafts to create a cooling breeze. In winter, set for updrafts to circulate warm air from the ceiling, helping to save on heating costs.

Product Dimension

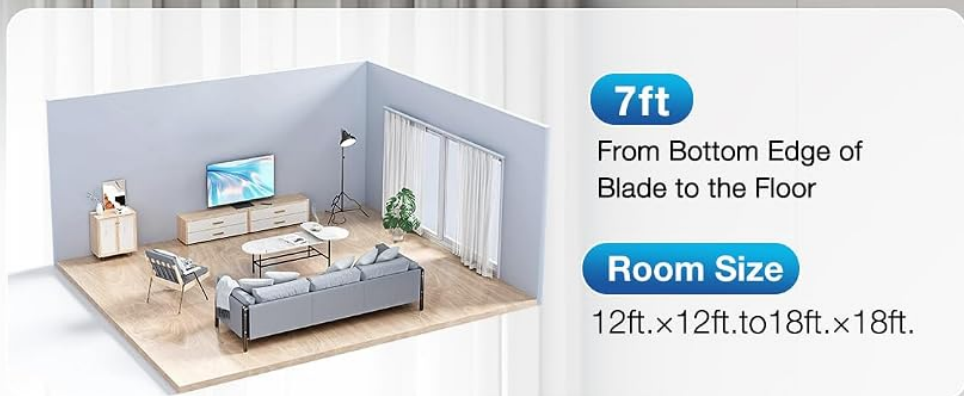
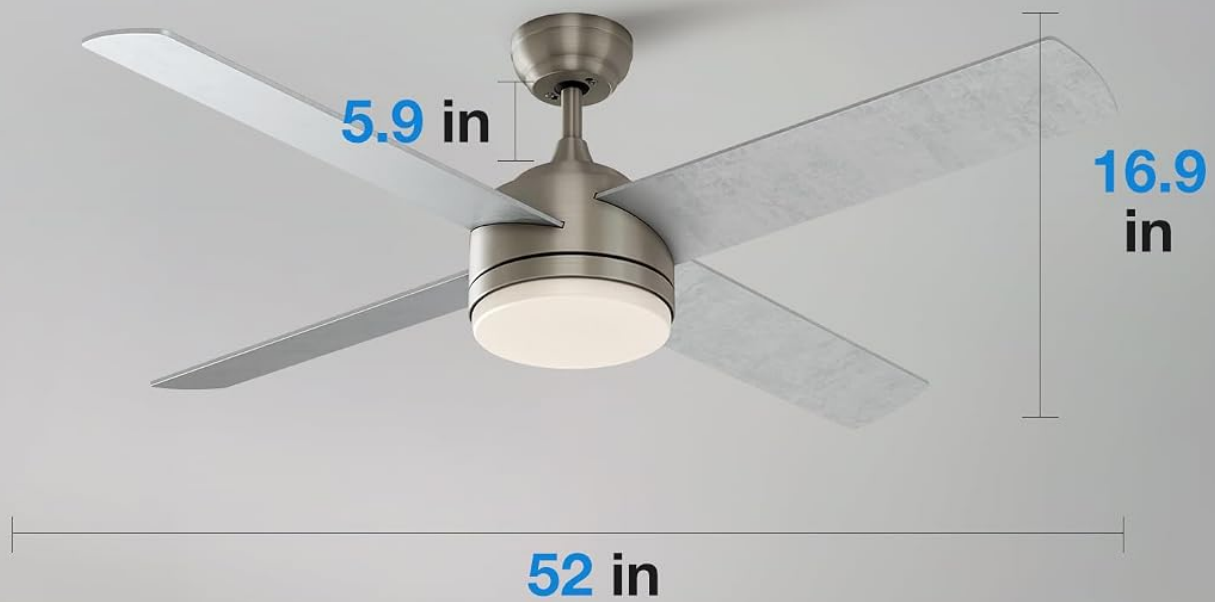


Figure 3: Summer (Downdraft) and Winter (Updraft) Modes

Light Operation:

- **Light On/Off:** Press the light bulb button to turn the LED light on or off.
- **Brightness Adjustment (Dimmable):** Hold the light button on the remote to adjust the brightness of the 24-watt 3000K LED light source.
- **Color Temperature:** The LED light offers three color temperatures: 3000K (Warm Light), 4000K (Natural Light), and 6000K (Cool White Light).

Suitable for All Seasons



Figure 4: Adjustable Light Color Temperatures

Timer Function:

- The remote includes a timer setting for 1H, 2H, 4H, and 8H, allowing you to set the fan to automatically turn off after a specified duration.

Video 2: Warmiplanet 52-inch Ceiling Fan Overview

Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Light Cover:** The light cover can be removed by rotating it counter-clockwise for cleaning. Ensure the power is off before removing.
- **Connections:** Check all electrical connections and mounting screws periodically to ensure they are secure.

Troubleshooting

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker; Verify all wire connections are secure; Replace remote control battery.
Light does not work	Light switch off; Loose wire connection to light kit; LED module failure.	Ensure light switch is on; Check light kit wiring; Contact customer support if LED module is faulty.
Fan wobbles	Loose blade screws; Improperly balanced blades; Loose hanging bracket.	Tighten all blade screws; Use balancing kit (not included) if necessary; Ensure hanging bracket is securely mounted.
Excessive noise	Loose screws; Fan not properly seated in hanging bracket; Internal motor issue.	Check and tighten all screws; Ensure fan is correctly seated; Contact customer support if noise persists.

Specifications

- **Model Name:** WICF04
- **Dimensions:** 52"D x 52"W x 15"H
- **Power Source:** AC
- **Wattage:** 65 watts
- **Noise Level:** Less than 50 dB
- **Air Flow Capacity:** 3206 Cubic Feet Per Minute (CFM)
- **Blade Length:** 22.8 Inches
- **Voltage:** 120 Volts
- **Light Type:** LED (24-watt, 3000K color temperature, dimmable)
- **Blade Material:** Engineered Wood (Double-faced: Silver and black with silver stripe)

- **Control Method:** Remote Control
- **Indoor/Outdoor Usage:** Indoor
- **Item Weight:** 17.73 pounds

Multi-functional Remote Control



Timer Setting
Easy-to-use Timer Option



3 Wind Speeds



3 Color
Temperture



Dimmable

Figure 5: Product Dimensions

Large Wind Volume



Figure 6: Quiet Operation (35dB)

More Lighting Options



Figure 7: Large Wind Volume (3206 CFM)

Warranty and Support

Warmiplanet ceiling fans have passed strict product quality certification.

- **Motor Warranty:** 10 Years

- **Other Parts Warranty:** 2 Years

If you encounter any trouble or have questions regarding installation or operation, please contact Warmiplanet customer service for a satisfactory solution. Contact information can typically be found on the product packaging or the official Warmiplanet website.

© 2023 Warmiplanet. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B08PBT3BHM>

More documents and user manuals: <https://manuals.plus/>