

EDJO TM176G-C203

EDJO Wireless Keyboard and Mouse Combo User Manual

Model: TM176G-C203

INTRODUCTION

The EDJO Wireless Keyboard and Mouse Combo (Model TM176G-C203) offers a full-sized, ergonomic solution for your computing needs. Featuring 2.4G wireless technology, this combo provides a stable and reliable connection, enhancing productivity and comfort for extended use. The keyboard includes a palm rest and foldable stand for optimal typing posture, while the mouse offers adjustable DPI settings for precise control. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new wireless peripheral set.



Figure 1: EDJO Wireless Keyboard and Mouse Combo (Black)

SETUP

1. Battery Installation

Both the keyboard and mouse require one AA battery each (not included). To install the batteries:

- For the keyboard: Locate the battery compartment on the underside. Open the cover, insert one AA battery, ensuring correct polarity (+/-), and close the cover.
- For the mouse: Locate the battery compartment on the underside. Open the cover, insert one AA battery, ensuring correct polarity (+/-). The USB receiver is stored inside this compartment. Remove the receiver before closing the

cover.

2. Connecting the USB Receiver

The EDJO combo uses a single 2.4 GHz USB receiver for both the keyboard and mouse. This allows for a simple plug-and-play connection without the need for additional software or drivers.

1. Remove the USB receiver from the mouse's battery compartment.
2. Plug the USB receiver into an available USB port on your computer (PC, Laptop, Desktop, etc.).
3. Allow a few seconds for your operating system to recognize the devices. The keyboard and mouse should automatically connect.



Figure 2: Connecting the 2.4G USB Receiver to a Laptop

This image illustrates the wireless connection setup, showing the USB receiver plugged into a laptop and wirelessly connecting to both the keyboard and mouse, indicating a stable connection range of up to 33 feet (10 meters).

OPERATING INSTRUCTIONS

Keyboard Features

The full-sized EDJO keyboard is designed for ergonomic comfort and efficiency:

- **Ergonomic Design:** Features an integrated palm rest and foldable stand to provide an optimal typing angle, reducing wrist strain during prolonged use.
- **Anti-Slide Pads:** Equipped with anti-slide pads on the underside to ensure stability on your desk.
- **Indicator Lights:** Includes indicators for Number Lock, Caps Lock, and Power status.
- **Quiet Crater-Switch Keys:** Designed for a comfortable and quiet typing experience.



Figure 3: Ergonomic Keyboard Design with Palm Rest and Foldable Stand

This image highlights the ergonomic features of the keyboard, including the integrated palm rest and foldable stand, which contribute to a comfortable typing experience. It also points out the Number Lock, Caps Lock, and Power indicators, and the quiet crater-switch key mechanism.

Mouse Features

The EDJO wireless optical mouse provides precise and comfortable navigation:

- **Adjustable DPI:** Cycle through 3 DPI levels (800/1200/1600) by pressing the DPI button located behind the scroll wheel to adjust cursor sensitivity.

- **Optical Tracking:** Ensures precise control on various surfaces.
- **Symmetry Design:** Suitable for both right-handed and left-handed users.
- **Navigation Buttons:** Includes "Previous Page" and "Next Page" buttons for convenient web browsing.
- **On/Off Switch:** Located on the underside of the mouse to conserve battery life when not in use.

WIRELESS OPTICAL MOUSE

3 Levels Adjustable DPI
(800/1200/1600)



Previous Page


Next Page

Anti-slip roller



Laser light

ON/OFF Switch

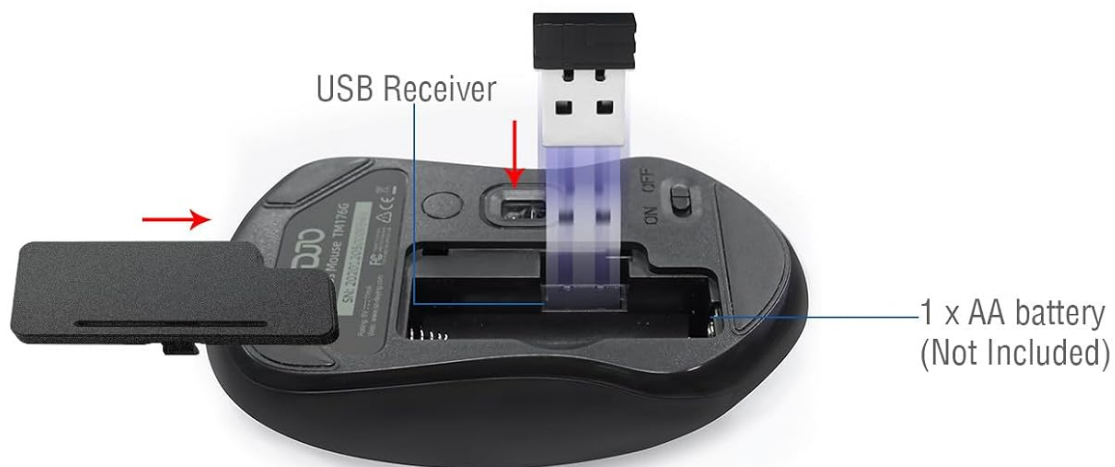

Note: The USB receiver is stored in the battery compartment of the mouse.

Figure 4: Wireless Optical Mouse with DPI Adjustment and USB Receiver Storage

This image details the features of the wireless mouse, including the DPI adjustment button, previous/next page buttons, laser light, and the ON/OFF switch. It also clearly shows the storage location for the USB receiver within the battery compartment.

MAINTENANCE

Automatic Power Saving Function

To extend battery life, the EDJO wireless keyboard and mouse combo features an automatic power-saving mode:

- The keyboard will enter sleep mode after 30 minutes of inactivity.

- The mouse will enter sleep mode after 25 seconds of inactivity.

To reactivate the devices from sleep mode, simply click any button on the mouse or press any key on the keyboard.

Battery Replacement

When the devices stop responding or the performance degrades, it is time to replace the AA batteries. Follow the battery installation steps outlined in the "Setup" section.



Figure 5: Power Saving Modes for Keyboard and Mouse

This image visually explains the automatic power-saving function, showing that the keyboard enters sleep mode after 30 minutes and the mouse after 25 seconds, and how to reactivate them by pressing a key or moving/clicking the mouse.

TROUBLESHOOTING

If you experience issues with your EDJO Wireless Keyboard and Mouse Combo, please refer to the following common solutions:

- **No Response from Keyboard/Mouse:**

- Ensure batteries are correctly installed and not depleted. Replace batteries if necessary.
- Verify the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port.
- Ensure the mouse's ON/OFF switch is in the "ON" position.
- Move the keyboard and mouse closer to the USB receiver to rule out range issues.

- **Lag or Intermittent Connection:**

- Check for potential interference from other wireless devices (e.g., Wi-Fi routers, cordless phones). Try to minimize these sources or move the receiver.
- Ensure the USB receiver is not plugged into a USB 3.0 port if experiencing issues, as some devices may perform better in a USB 2.0 port.
- Re-pair the devices by unplugging and re-plugging the USB receiver.

- **Mouse Cursor Jumps or is Inaccurate:**

- Clean the optical sensor on the underside of the mouse.
- Try using the mouse on a different surface.
- Adjust the DPI setting using the DPI button on the mouse.

If problems persist after attempting these steps, please refer to the "Warranty and Support" section for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	EDJO
Model Number	TM176G-C203
Connectivity Technology	2.4 GHz Radio Frequency (Wireless)
Keyboard Dimensions (L x W x H)	17.52 x 7.36 x 0.91 inches (44.5 x 18.68 x 2.3 cm)
Mouse Dimensions (L x W x H)	4.23 x 2.34 x 1.51 inches (10.75 x 5.95 x 3.83 cm)
Item Weight	1.65 pounds
Mouse DPI Levels	800 / 1200 / 1600
Power Source	1 x AA Battery (Keyboard), 1 x AA Battery (Mouse) - Not Included
Compatible Devices	Personal Computer, Laptop, Desktop
Operating System Compatibility	Windows XP/Vista/7/8/10/X, Mac OS (Note: Some multimedia functions may not be available with Mac OS)

104 KEYS FULL SIZE WIRELESS KEYBOARD



Figure 6: Detailed Dimensions of the Keyboard and Mouse

This image provides precise measurements for both the keyboard and mouse, illustrating their full-size design and compact mouse form factor.

WIDE COMPATIBILITY

Compatible with windows XP/Vista/7/8/10, Mac and other operating system

Note: Some multimedia function are not available with Mac OS



PC



Laptop



Desktop



TV



Figure 7: Compatibility with Various Operating Systems and Devices

This image demonstrates the wide compatibility of the EDJO combo with various devices such as PCs, laptops, desktops, and TVs, and operating systems including Windows and Mac OS.

WARRANTY AND SUPPORT

EDJO provides a one-year post-sales service for this product. If you encounter any problems during use, or have questions regarding your wireless keyboard and mouse combo, please do not hesitate to contact us.

Contact Information: Please contact us via Amazon email for prompt assistance. We are committed to providing a satisfactory solution to any issues you may experience.

For more information and support, you may also visit the official EDJO Store on Amazon [EDJO Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question