

[manuals.plus](#) /

› [CANDY](#) /

› [Candy Smart CS 1482DE-S Washing Machine User Manual](#)

CANDY CS 1482DE S

Candy Smart CS 1482DE-S Washing Machine User Manual

Model: CS 1482DE S | Brand: CANDY

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Candy Smart CS 1482DE-S Washing Machine. Please read it thoroughly before installation, use, or maintenance. Keep this manual for future reference.



Figure 1: Front view of the Candy Smart CS 1482DE-S Washing Machine, showing the control panel, detergent drawer, and drum door.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent electric shock, fire, injury, or damage to the appliance.

- Ensure the appliance is properly earthed.
- Do not allow children to play with the appliance.
- Unplug the appliance before cleaning or maintenance.
- Do not operate the machine if the power cord is damaged.
- Remove all transport bolts before use. Failure to do so can cause severe vibration and damage.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Report any damage to your retailer immediately.

Removing Transport Bolts

Before operating the washing machine, it is crucial to remove the transport bolts located at the rear of the appliance. These bolts secure the drum during transport and must be removed to prevent damage during operation.

1. Locate the transport bolts on the back panel of the washing machine.
2. Using an appropriate wrench, loosen and remove all bolts.
3. Insert the plastic caps provided into the holes.

Positioning and Levelling

Place the washing machine on a firm, level surface. Adjust the adjustable feet to ensure the machine is stable and level. An unlevel machine can cause excessive vibration and noise.

Water and Electrical Connections

- Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Position the drain hose into a suitable drain or sink, ensuring it is not kinked.
- Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a program selector dial, a digital display, and various function buttons. Refer to the diagram below for specific button functions.



Figure 2: Control panel with program dial, display, and buttons.

Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The maximum capacity is 8 kg.

Adding Detergent

Pull out the detergent drawer. Add the appropriate amount of detergent and fabric softener to the designated compartments. Close the drawer gently.

Selecting a Program

Turn the program selector dial to choose the desired wash program. The digital display will show the estimated program duration. This model features 5 quick programs for convenience.

Starting a Wash Cycle

Press the Start/Pause button to begin the wash cycle. The machine will automatically lock the door and start filling with water.

WLAN & Bluetooth Connectivity

This appliance supports WLAN and Bluetooth connectivity, allowing for remote control and additional program downloads via the Candy simply-Fi app. Refer to the app's instructions for pairing and usage.

MAINTENANCE AND CLEANING

Cleaning the Detergent Drawer

Regularly clean the detergent drawer to prevent residue buildup. Pull out the drawer completely, rinse it under running water, and remove any hardened detergent. Reinsert the drawer.

Cleaning the Drum

To maintain hygiene and prevent odors, run a maintenance wash cycle (e.g., a hot wash without laundry and with a descaling agent) periodically.

Cleaning the Filter

The filter should be cleaned regularly to ensure proper drainage. Locate the filter cover at the bottom front of the machine. Place a shallow container underneath to catch any water, then unscrew and remove the filter. Clean any lint or debris and reinsert.



Figure 3: Location of the filter access panel at the bottom front.

Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected.	Check power supply; Ensure door is firmly closed; Select a program and press Start.
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust feet to level machine; Redistribute laundry evenly.

Problem	Possible Cause	Solution
Water not draining	Drain hose kinked; Filter blocked.	Straighten drain hose; Clean the filter.
Detergent residue in drawer	Insufficient water pressure; Drawer dirty.	Check water supply; Clean the detergent drawer thoroughly.

If the problem persists after attempting these solutions, please contact customer support.

TECHNICAL SPECIFICATIONS


- Model:** CS 1482DE S
- Model Number:** 31010465
- Brand:** CANDY
- Capacity:** 8 kg
- Maximum Spin Speed:** 1400 RPM
- Product Dimensions:** 50 x 50 x 28 cm
- Item Weight:** 66.5 kg
- Voltage:** 230 Volts
- Connectivity:** WLAN & Bluetooth
- Noise Level (Spin):** 61 dBA
- Energy Class:** A+++
- Access Location:** Front Load
- Number of Quick Programs:** 5



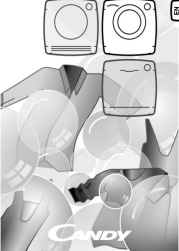


WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your appliance at the time of purchase or visit the official CANDY website. Specific warranty terms may vary by region and retailer.
Official Brand Website: www.candy-group.com

© 2024 CANDY. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - CS 1482DE S

	Candy Smart Washing Machine User Guide and Features Comprehensive guide to the Candy Smart washing machine, detailing programs, features, options, and basic usage. Access further multilingual information at go.he.services/smart-bi .
---	--

	<p>Candy GVW 364TC Washer Dryer: Features and Specifications</p> <p>Discover the Candy GVW 364TC, a space-saving washer dryer with a 6kg wash capacity, 4kg drying capacity, and 1300 RPM spin speed. This guide details its features, programs, performances, and technical specifications.</p>
	<p>Candy CSTG282DE/1-S 8kg Smart Top-Load Washing Machine</p> <p>Discover the Candy CSTG282DE/1-S, an 8kg top-load washing machine with 1200 RPM spin speed and Class D energy efficiency. Features Smart Touch NFC technology, Mix Power System+, Gentle Touch Opening, and 16 versatile programs for optimal laundry care.</p>
	<p>Candy Washing Machine User Manual - WM Rapidó Series</p> <p>Comprehensive user manual for Candy WM Rapidó series washing machines, covering installation, operation, maintenance, troubleshooting, and safety instructions.</p>
	<p>Candy HE 1294TWM6/1-S Ultra Hygiene Washing Machine Specifications</p> <p>Detailed specifications for the Candy HE 1294TWM6/1-S Ultra Hygiene washing machine, including features, technical characteristics, energy efficiency, and dimensions.</p>
	<p>Candy Washing Machine User Manual</p> <p>Comprehensive user manual for Candy washing machines, covering safety instructions, installation, operation, maintenance, troubleshooting, and program details.</p>