## Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Candy /
- > Candy Smart CS 1492DE-S Washing Machine User Manual

# Candy CS 1492DE-S

# Candy Smart CS 1492DE-S Washing Machine User Manual

Model: CS 1492DE-S | Brand: Candy

## **INTRODUCTION**

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Candy Smart CS 1492DE-S washing machine. Please read it thoroughly before using the appliance and keep it for future reference.

The Candy Smart CS 1492DE-S is a front-loading washing machine designed for household use, featuring a 9 kg capacity and a maximum spin speed of 1400 rpm. It includes a variety of wash programs, quick cycles, and smart features via NFC connectivity.

## SAFETY INFORMATION

#### **General Safety:**

- Ensure the appliance is properly grounded.
- Do not touch the appliance with wet hands or feet.
- Do not allow children to operate or play with the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not force the door open during operation.
- · Keep packaging materials away from children.

#### **Installation Safety:**

- Install the machine on a stable, level surface.
- Remove all transit bolts before use. Failure to do so can cause severe damage.
- Ensure water and electrical connections are made by a qualified professional if you are unsure.

# SETUP AND INSTALLATION

## Unpacking

Carefully remove all packaging materials. Check for any damage during transit. Keep packaging for future transport if

needed.

# **Removing Transit Bolts**

Before operating the washing machine, it is crucial to remove the transit bolts located at the rear of the appliance. These bolts secure the drum during transport and must be removed to prevent damage during operation.

- 1. Locate the transit bolts on the back panel.
- 2. Use a suitable wrench to loosen and remove all bolts.
- 3. Insert the plastic caps provided into the holes.

# **Positioning and Leveling**

Place the washing machine on a firm, flat surface. Adjust the adjustable feet to ensure the machine is perfectly level. A level machine reduces vibration and noise during operation.

#### **Water Connection**

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks. Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fixed and not kinked.

#### **Electrical Connection**

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance's rating plate. Do not use extension cords or adapters.

## **OPERATING INSTRUCTIONS**

#### **Control Panel Overview**

The washing machine features a rotary knob for program selection and a touch screen for additional functions and settings.



Image: Front view of the Candy Smart CS 1492DE-S washing machine, showing the control panel, detergent drawer, and large loading door.

# **Loading Laundry**

Open the large loading door and place laundry loosely into the drum. Do not overload the machine. The maximum capacity is 9 kg.



Image: Close-up view of the washing machine drum interior, highlighting the stainless steel drum with perforations.

# **Adding Detergent**

Pull out the detergent drawer. Add appropriate amounts of detergent and fabric softener to the designated compartments. Refer to your detergent packaging for dosage recommendations.

# **Program Selection**

Turn the program selector knob to choose one of the 15 available wash programs. These include:

- Cotton
- Eco 40°/60°
- Synthetics
- Rinse
- Drain/Spin
- Jeans
- Hygiene Program
- Delicates
- 5 Quick Programs: Mixed & Colors (14, 30, 44, 59 minutes), Cotton 59 minutes

# **Additional Functions (Touch Screen)**

Use the touch screen to select additional options:

- Intense Rinse: For thorough rinsing.
- Hygiene: Enhanced hygiene for laundry.
- Easy Iron: Reduces creasing.

- **Delay Start:** Postpone the start of the wash cycle by up to 24 hours.
- Quick Programs: Select specific quick cycle durations.
- Soil Level: Adjust wash intensity based on dirtiness.
- Temperature Selection: Adjust wash temperature.
- Safety Lock: Child lock function.
- Remaining Time Display: Shows estimated time left.
- Start/Pause: To begin or temporarily stop a cycle.

# NFC Connectivity (SimplyFi App)

The washing machine is equipped with NFC technology. Download the Candy SimplyFi app to your smartphone to unlock additional features:

- · Machine diagnostics and troubleshooting.
- Download new wash programs.
- · Activate voice assistant.
- · Manage delay start functions remotely.

## MAINTENANCE

# **Cleaning the Detergent Drawer**

Regularly clean the detergent drawer to prevent residue buildup. Remove the drawer and rinse it under running water. Use a brush to clean stubborn deposits.

# **Cleaning the Drum**

Run a maintenance wash (e.g., a hot cycle with no laundry and a descaling agent) periodically to clean the drum and remove any odors or residue.

# **Cleaning the Drain Filter**

The drain filter should be cleaned regularly to ensure proper drainage and prevent blockages. This is typically located at the bottom front of the machine.



Image: Close-up view of the washing machine's drain filter compartment, showing the removable filter and its housing.

- 1. Place a shallow container under the filter cover to catch any residual water.
- 2. Open the filter cover.
- 3. Slowly unscrew the filter counter-clockwise and allow water to drain.
- 4. Remove the filter and clean it under running water, removing any lint or debris.
- 5. Reinsert the filter and screw it back in tightly. Close the cover.

# **Cleaning the Door Seal**

Wipe the rubber door seal after each wash to prevent mold and mildew buildup. Ensure no small items are trapped in the seal.

# **TROUBLESHOOTING**

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Door not closed properly; Program not selected; Delay start active.	Check power connection; Ensure door clicks shut; Select a program and press Start; Check delay start setting.
No water intake	Water tap closed; Inlet hose kinked; Water pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Straighten or clear drain hose; Clean drain filter (refer to Maintenance section).

Problem	Possible Cause	Solution
Excessive vibration/noise	Transit bolts not removed; Machine not level; Uneven load.	Remove transit bolts; Level the machine; Redistribute laundry evenly.
Detergent residue in drawer	Detergent drawer clogged; Too much detergent used.	Clean detergent drawer; Reduce detergent amount.

For issues not listed here, or if problems persist, please contact customer support.

# **SPECIFICATIONS**

Feature	Detail
Brand	Candy
Model Number	CS 1492DE-S (8059019005140)
Capacity	9 Kilograms
Max Spin Speed	1400 rpm
Dimensions (H x W x D)	85 x 60 x 52 cm
Weight	66.5 Kilograms
Noise Level (Spin)	79 dB
Energy Efficiency Class (New)	D (as per 2021 EU energy label)
Annual Energy Consumption	218 kWh/year (based on old A+++ rating) / 76 kWh/100 cycles (new D rating)
Water Consumption	46 Liters/cycle (Eco 40-60 program)
Control Type	Tactile (Touch)
Special Features	5 Quick Cycles, NFC Connectivity, Hygiene Program
Material	Stainless Steel (drum)

For detailed energy information, refer to the official EU EPREL database:

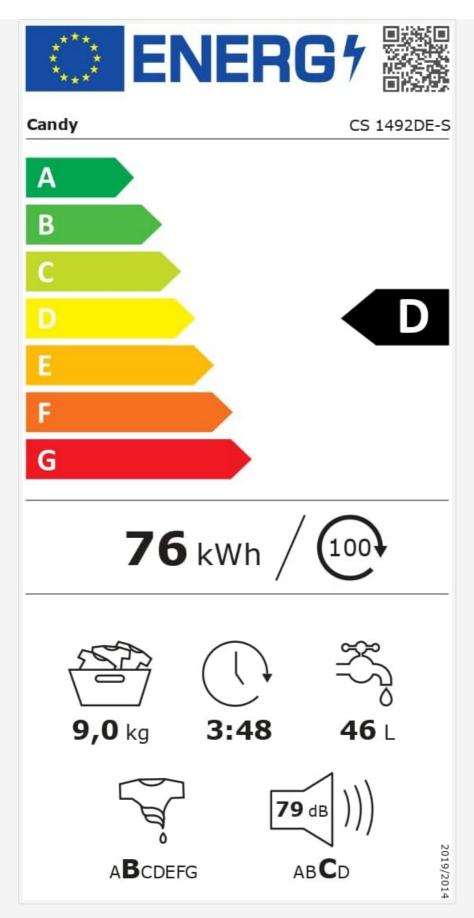


Image: EU Energy Label for the Candy Smart CS 1492DE-S washing machine, showing D energy class, 9 kg capacity, 76 kWh/100 cycles, 46 L/cycle, and 79 dB noise level.

View Product in EPREL Database Haier Europe Corporate Website This product comes with a standard manufacturer's warranty. Please refer to your purchase documentation for specific warranty terms and conditions. The typical warranty period is 24 months from the date of purchase.

For technical assistance, spare parts, or service requests, please contact Candy customer support. Have your model number (CS 1492DE-S) and serial number ready when contacting support.

You can also find more information and support resources on the official Candy website.

#### © 2024 Candy. All rights reserved.

#### Related Documents - CS 1492DE-S



# Candy CS 2D Washing Machine: User Manual for Installation, Operation, and Maintenance

Comprehensive user manual for Candy CS 2D washing machines, covering installation, safe operation, maintenance, troubleshooting, program selection, and Smart Touch features. Ensure optimal performance and longevity of your appliance.



## Candy Smart Washing Machine User Guide and Features

Comprehensive guide to the Candy Smart washing machine, detailing programs, features, options, and basic usage. Access further multilingual information at go.he.services/smart-bi.



#### Candy Washing Machine User Manual: Installation, Operation, and Troubleshooting

This user manual provides detailed instructions for operating, installing, maintaining, and troubleshooting your Candy washing machine. Learn about safety guidelines, program selection, and smart features.



#### Candy Washing Machine User Manual

This user manual provides comprehensive instructions for operating, installing, maintaining, and troubleshooting your Candy washing machine. It covers safety guidelines, program selection, smart features, and technical specifications for models like CSW 2D.



#### Candy Smart Washing Machine User Guide and Features

A comprehensive guide to using the Candy Smart washing machine, detailing its features, programs, and smart touch functionality. Learn how to connect to the Candy simply-Fi app for enhanced control and information.



#### Candy Washing Machine Instructions for Use - SensorSystem ACTIVA Smart

Comprehensive user manual for the Candy washing machine, model SensorSystem ACTIVA Smart. Includes setup, operation, maintenance, troubleshooting, and technical specifications.




### [pdf]

Ficha técnica Candy Smart CS 1492DE S lavadora Carga frontal 9 kg 1400 RPM D Blanco Kipmion Tecnología mmo 89578287 1638815257 8524 18933 objects icecat biz |||

Lavadoras de carga frontal **CS 1492DE-S** Nombre del producto / Cdigo Comercial Cdigo de producto Cdigo EAN Integracin / Libre Instalacin Tipo de carga Capacidad para algodn kg Velocidad mxima de centrifugado rpm Conectividad App IOT Motor Volumen del tambor Material del tambor Tipo de enchufe Ten...


lang:es score:30 filesize: 62.66 K page\_count: 2 document date: 2021-12-06

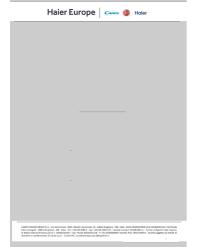

## [pdf] Specifications Decleration of Conformity Catalog

PN TYPE CHG EU DoC Domenico Crippa Dichiarazione di conformità CE Lavatrice a carica frontale Easy EY 12102DE 1 S Candy Scheda prodottoLibretto istruzioniCatalogoEtichetta energetica 31018637 prod cdn candy hoover haier stormreply static custom certifications |||

EU DECLARATION OF CONFORMITY No. WSH210007 rev. B Radio equipment Description: Brand: Model: Type: ... 07 rev. B PAG. 3/7 Candy CS 1382DE-S 31010483 Italy Candy CS 1282DE-S 31010484 Italy Candy CS 1492DE-S 31010485 Italy Candy CS 1292DE-S 31010486 Italy Candy GRANDO 11 31010517 PRC Ca... lang:en score:22 filesize: 454.2 K page\_count: 7 document date: 2021-08-02

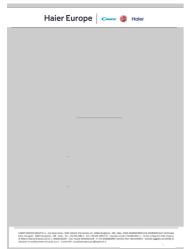


# [pdf] Specifications Decleration of Conformity

PN TYPE CHG EU DoC Domenico Crippa 31006970 prod cdn candy hoover haier stormreply static custom certifications

EU DECLARATION OF CONFORMITY No. WSH210007 rev. A Radio equipment Description: Brand: Model: Type: ... rev. A PAG. 3/7 Candy CS 1382DE-S 31010483 Italy Candy CS 1282DE-S 31010484 Italy Candy CS 1492DE-S 31010485 Italy Candy CS 1292DE-S 31010486 Italy Candy GRANDO 11 31010517 PRC ...

lang:en score:22 filesize: 472.21 K page\_count: 7 document date: 2021-02-22

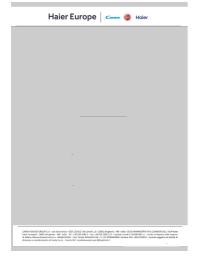


## [pdf] Specifications Decleration of Conformity

PN TYPE CHG EU DoC Domenico Crippa 31009702 prod cdn candy hoover haier stormreply static custom certifications

EU DECLARATION OF CONFORMITY No. WSH210006 rev. B Radio equipment Description: Brand: Model: Type: ... 41072D1/2-07 ACSS41052D1/2-07 CS 1272DRRE/1-S CS4 1072DE/1-S CS4 1072DE/2-S CS 1482DE-S CS 1282DE-S CS 1492DE-S CS 1292DE-S CS4 1372DE/2-S CS4 1272DE/2-S CS4 1172DE/2-S CS4 1272DE/1-S CS 1472DE/1-S CS...

lang:en score:21 filesize: 428.41 K page\_count: 9 document date: 2021-07-16

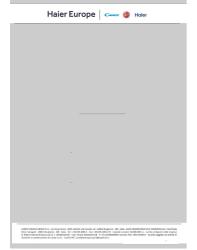


#### [pdf] Specifications Decleration of Conformity

PN TYPE CHG EU DoC Domenico Crippa DECLARATION OF CONFORMITY Reply No WSH210007 rev D PAG 1 7 Radio equipment Description Front load washing machine with NFC interface Brand as per Annex Model Type FCM9 Part number Made in Manufacturer 31011406 prod cdn candy hoover haier stormreply static custom certifications |||

EU DECLARATION OF CONFORMITY No. WSH210007 rev. D Radio equipment Description: Brand: Model: Type: ... rev. D PAG. 3/7 Candy CS 1382DE-S 31010483 Italy Candy CS 1282DE-S 31010484 Italy Candy CS 1492DE-S 31010485 Italy Candy CS 1292DE-S 31010486 Italy Candy GRANDO 11 31010517 PRC ...

lang:en score:20 filesize: 631.9 K page\_count: 7 document date: 2022-02-17

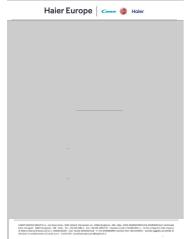

# EU Declaration of Conformity - Candy Hoover Group Washing Machine

Official EU Declaration of Conformity for a front load washing machine with NFC interface from Candy Hoover Group S.r.l., detailing compliance with RED, RoHS, and ErP directives and applicable harmonised standards.

lang:en score:20 filesize: 399.17 K page\_count: 8 document date: 2024-11-26



#### [pdf]

Sarah Cordero bases legales promocion candy 1 ano de ariel gratis etendencias ficheros promociones |||
BASES DE LA PROMOCIN 1 Ao de Ariel GRATIS con Lavadoras CANDY DE HAIER
SMART HOME IBERIA S.A. PRIM ... RO 1496DWMCT/1-S CS 149TXME-S CS
148TXME-S CS 14102DE/1-S CS 1292DE-S CS 1282DE-S RO1484DWMCRT/1-S
CS 1492DE-S RO 1486DWMCT/1-S CO 4104TWM/1-S RO 1284DWMT/1-S
HCU2102DWB4/1-S CO 12105TW4/1-S CSO 1285...

lang:es score:19 filesize: 185.72 K page count: 6 document date: 2023-10-17




#### [pdf]

Sarah Cordero bases legales promocion candy 1 ano de ariel gratis con lavadoras definitiva cms home documents d global |||

BASES DE LA PROMOCIN 1 Ao de Ariel GRATIS con Lavadoras CANDY DE HAIER SMART HOME IBERIA S.A. PRIM ... RA CS 1282DE-S 31010484 8059019005133 LAVADORA RO1484DWMCRT/1S 31018849 8059019044729 LAVADORA **CS** 1492DE-S 31010485 8059019005140 LAVADORA RO 1486DWMCT/1-S 31018825 8059019044361 LAVADORA CO ...

lang:es score:19 filesize: 188.43 K page\_count: 6 document date: 2023-10-19

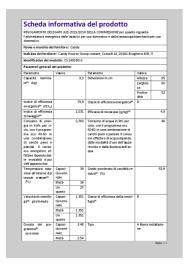

### [pdf]

schedaenergetica 303707 static eprice it el Lavatrici |||

Scheda informativa del prodotto REGOLAMENTO DELEGATO UE 2019/2014 DELLA COMMISSIONE per quanto ri ... nitore: Candy Hoover Group contact, Comolli 16, 20861 Brugherio MB, IT Identificativo del modello: **CS 1492DE-S** Parametri generali del prodotto: Parametro Valore Capacit nominale a kg Indice d...

lang:it score:19 filesize: 49.32 K page\_count: 2 document date: 2023-11-07