

Tylza TYWC150-2

Tylza 24 Inch Dual Zone Wine and Beverage Refrigerator User Manual

Model: TYWC150-2

[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Safety Information](#) [Setup](#) [Operating](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INFORMATION

Please read all instructions carefully before using your Tylza Wine and Beverage Refrigerator to ensure safe operation and prevent injury or damage.

Electrical Safety

- Ensure the appliance is properly grounded. Do not use an adapter plug or extension cord.
- Connect to a dedicated, grounded 115V, 60Hz electrical outlet.
- Do not operate the appliance with a damaged power cord or plug.

General Safety

- This appliance contains R-600A refrigerant, which is flammable. Handle with care and ensure proper ventilation.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- To prevent child entrapment, ensure the door lock is engaged when not in use, especially if children are present.

2. SETUP INSTRUCTIONS

Unpacking and Inspection

Carefully remove all packaging materials. Inspect the refrigerator for any shipping damage. Report any damage to your retailer immediately. Keep packaging materials until you are satisfied with the product.

Location and Placement

This unit is designed for both built-in and freestanding installation. Ensure adequate ventilation around the unit. For built-in installation, refer to the dimensions provided in the specifications section to ensure proper fit within cabinetry. Avoid placing the unit in direct sunlight or near heat sources.



Image: Dimensions and installation guidelines for the refrigerator.

Leveling the Unit

It is crucial for the refrigerator to be level for optimal performance and proper door closure. Adjust the leveling feet at the bottom of the unit by turning them clockwise to raise or counter-clockwise to lower. Use a level to ensure the appliance is perfectly balanced.

Your browser does not support the video tag.

Video: Demonstrates how to adjust the bottom feet of the refrigerator to ensure it is level.

Initial Cleaning and Power Connection

Before first use, clean the interior and exterior of the unit with a mild detergent and soft cloth. After cleaning, allow the unit to stand upright for at least 2-4 hours before plugging it into a power outlet. This allows the refrigerant to settle.

3. OPERATING INSTRUCTIONS

Control Panel Overview

The refrigerator features an inductive intelligent touch panel with a white LED ambient light for easy temperature control and monitoring.



Image: Detailed view of the touch control panel.

- **Light Control:** Activates or deactivates the interior LED light.
- **°C/°F Switch:** Toggles the temperature display between Celsius and Fahrenheit.
- **Power ON/OFF:** Turns the unit on or off.
- **Temperature Increase (+):** Increases the set temperature.

- **Temperature Decrease (-):** Decreases the set temperature.
- **Zone Temperature Switch:** Selects which zone (upper or lower) to adjust the temperature for.

Your browser does not support the video tag.

Video: Demonstrates the functionality of the light control and temperature display.

Setting Temperatures for Dual Zones

This refrigerator features two independent temperature zones. The upper zone is for beverages, with a temperature range of 37-50°F (3-10°C). The lower zone is for wine, with a temperature range of 54-64°F (12-18°C).



Image: Overview of the dual-zone temperature capabilities.

1. Press the 'Zone Temperature Switch' button to select either the upper or lower zone. The selected zone's temperature display will flash.
2. Use the '+' or '-' buttons to adjust the desired temperature for the selected zone.
3. The display will stop flashing after a few seconds, indicating the new temperature setting is saved.

Adjustable Shelves

The beverage zone shelves are removable, allowing you to customize the internal space to accommodate various sizes of cans and bottles. The wine zone features fixed slide rails for stability.

Your browser does not support the video tag.

Video: Demonstrates how to adjust and remove the glass shelves in the beverage zone.

Door Lock Function

The unit is equipped with a key lock located at the bottom of the door to secure its contents and prevent unauthorized access, especially useful in households with children.



Image: Detail of the safety lock.

Your browser does not support the video tag.

Video: Shows how to use the safety lock function.

4. MAINTENANCE

Cleaning Your Refrigerator

- **Interior:** Unplug the unit before cleaning. Use a soft cloth and a solution of mild detergent and warm water. Avoid abrasive cleaners or solvents.
- **Exterior:** Wipe the exterior surfaces with a soft cloth and mild soap. For stainless steel, use a specialized stainless steel cleaner.
- **Door Gasket:** Clean the door gasket regularly to ensure a tight seal.

Defrosting

This appliance features a Frost Free defrost system, which automatically prevents ice buildup. Manual defrosting is generally not required.

Power Outage and Temperature Memory

In the event of a power outage, the Tylza refrigerator's intelligent thermostat will restore to the last set temperature when power is reinstated, preserving your stored items.

5. TROUBLESHOOTING GUIDE

Review this section before contacting customer support. It may save you time and expense.

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power, circuit breaker tripped, or unit unplugged.	Check power supply, ensure plug is securely in outlet, reset circuit breaker.
Unit is not cooling sufficiently.	Temperature set too high, door not closed properly, excessive door openings, poor ventilation, or unit overloaded.	Adjust temperature setting, ensure door is fully closed, reduce frequency of door openings, ensure proper clearance for ventilation, do not overload the unit.
Excessive noise.	Unit not level, objects vibrating against the unit, or normal compressor operation.	Ensure unit is level using the adjustable feet. Check for any objects touching the unit. Compressor noise is normal during operation.
Door does not close completely.	Unit not level, door gasket dirty or damaged, or shelves improperly positioned.	Level the unit. Clean or replace door gasket. Ensure shelves are correctly inserted.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	TYWC150-2
Product Dimensions (D x W x H)	22.63" x 23.42" x 34.25"
Capacity	5.3 Cubic Feet (Approx. 100 cans & 30 bottles)
Upper Zone Temperature Range	37-50°F (3-10°C)
Lower Zone Temperature Range	54-64°F (12-18°C)
Installation Type	Built-In and Freestanding
Defrost System	Frost Free
Voltage	115 Volts
Refrigerant	R-600A
Shelf Type	Wood and Stainless Steel
Special Features	Adjustable Shelves, Digital Temperature Control, Low Noise, Touch Control, Key Lock
UPC	791738643408

7. WARRANTY AND SUPPORT

Warranty Information

This Tylza refrigerator comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and quality-related issues. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, inquiries, or concerns regarding your product, or if you receive a defective refrigerator, please contact Tylza customer service. We aim to respond within 24 hours and promptly address your issues.

- **Phone:** 1-213-352-5535 (US Mon-Sat 10am - 6pm PST)
- **Email:** support@tylza.com

Tylza offers a 30-day money-back policy. If the product fails within 12 months from the date of purchase due to quality-related issues, a replacement or full refund will be provided.