

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MITSUBISHI](#) /

> [Mitsubishi Electric Mr Slim E22C30426 Replacement Remote \(KM07L\) User Manual](#)

MITSUBISHI KM07L

Mitsubishi Electric Mr Slim E22C30426 Replacement Remote (KM07L) User Manual

Model: KM07L | Brand: MITSUBISHI

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Mitsubishi Electric Mr Slim E22C30426 Replacement Remote Controller, model KM07L. This is a genuine Mitsubishi Electric original replacement part designed to work seamlessly with compatible Mitsubishi Electric indoor units.

The KM07L remote controller is compatible with the following Mitsubishi Electric indoor units: MS-A09WA-1, MS-A12WA-1, MS-A15WA-1, MS-A17WA-1, MSY-A15NA-1, MSY-A17NA-1.

Please read this manual thoroughly before using the remote controller to ensure optimal performance and longevity.

PRODUCT OVERVIEW





Figure 1: Front view of the KM07L Remote Controller. The remote features an LCD screen at the top displaying temperature and mode icons. Below the screen are the ON/OFF button, temperature adjustment arrows, and various function buttons including MODE, FAN, STOP, ECONO COOL, VANE, START, POWERFUL, and TIME controls.



Figure 2: Alternative view of the KM07L Remote Controller, highlighting the ergonomic design and button placement for easy access.

SETUP

Battery Installation

The KM07L remote controller requires two (2) AAA batteries for operation. Batteries are not typically included with the replacement remote.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or in the direction indicated by an arrow to open it.

3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Important: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your KM07L remote controller.

- **ON/OFF Button:** Press to turn the air conditioning unit ON or OFF.
- **Temperature Adjustment Buttons (▲ / ▼):** Press to increase or decrease the desired temperature setting.
- **MODE Button:** Cycles through available operating modes (e.g., Cool, Dry, Fan, Auto). The active mode will be displayed on the LCD.
- **FAN Button:** Adjusts the fan speed. Press repeatedly to cycle through different fan speed settings (e.g., Auto, Low, Medium, High).
- **VANE Button:** Controls the direction of the airflow (louvers). Press to adjust the vertical swing or fixed vane position.
- **ECONO COOL Button:** Activates the Econo Cool function, which provides energy-saving cooling while maintaining comfort.
- **POWERFUL Button:** Activates the Powerful operation mode for rapid cooling or heating.
- **TIME Buttons (◀ / ▶):** Used in conjunction with the START/STOP buttons to set timer functions.
- **STOP Button (O/STOP):** Used to set or cancel the OFF timer.
- **START Button (O/START):** Used to set or cancel the ON timer.
- **RESET CLOCK Button:** Used to reset the internal clock of the remote.

Basic Operation

1. **Turning On/Off:** Press the **ON/OFF** button once to turn the unit on. Press it again to turn the unit off.
2. **Setting Temperature:** With the unit on, use the ▲ (Up) or ▼ (Down) buttons to adjust the desired room temperature. The set temperature will be displayed on the remote's LCD.
3. **Selecting Mode:** Press the **MODE** button repeatedly until the desired operating mode (e.g., COOL, DRY, FAN) is displayed on the LCD.
4. **Adjusting Fan Speed:** Press the **FAN** button repeatedly to cycle through available fan speeds.

MAINTENANCE

Battery Replacement

When the remote control's display becomes dim or the unit does not respond to commands, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

Cleaning the Remote Controller

To clean the remote controller, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, waxes, or solvents, as these can damage the surface or internal components.

Avoid exposing the remote control to direct sunlight, high temperatures, or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not operate the unit.	<ul style="list-style-type: none">Batteries are dead or inserted incorrectly.Remote is too far from the unit or obstructed.Infrared sensor on the unit is blocked.	<ul style="list-style-type: none">Replace batteries, ensuring correct polarity.Move closer to the unit and ensure a clear line of sight.Clear any obstructions in front of the unit's sensor.
LCD display is dim or blank.	Low battery power.	Replace both AAA batteries.
Unit responds intermittently.	Weak batteries or interference.	Replace batteries. Ensure no strong light sources (e.g., fluorescent lights) are interfering with the signal.

SPECIFICATIONS

Feature	Detail
Model Number	KM07L
Brand	mitsubishi
Manufacturer	Mitsubishi Electric
Compatible Devices	Mitsubishi Electric MS-A09WA-1, MS-A12WA-1, MS-A15WA-1, MS-A17WA-1, MSY-A15NA-1, MSY-A17NA-1
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 7 x 1 inches
Item Weight	3.2 ounces
Color	White
Special Feature	Ergonomic

WARRANTY AND SUPPORT

Warranty Information

For specific warranty details regarding your Mitsubishi Electric KM07L replacement remote controller, please refer to the warranty documentation provided with your original air conditioning unit or contact Mitsubishi Electric directly. As this is a replacement part, warranty terms may vary.

Customer Support

If you encounter issues not covered in this manual or require further assistance, please contact Mitsubishi Electric customer support. Contact information can typically be found on the manufacturer's official website or in the documentation that came with your air conditioning unit.

© 2024 Mitsubishi Electric. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.